


Service Manual

DEH-P90HDD/UC



ORDER NO.
CRT2761

HIGH POWER HDD/CD PLAYER WITH "MEMORY STICK" AND FM/AM TUNER

DEH-P90HDD

DEH-P900HDD

UC

EW,ES



● This service manual should be used together with the following manual(s):

Model No.	Order No.	Mech. Module	Remarks
CX-961	CRT2503	H2	CD Mech. Module:Circuit Description, Mech.Description, Disassembly

CONTENTS

1. SAFETY INFORMATION	2	7. GENERAL INFORMATION	109
2. EXPLODED VIEWS AND PARTS LIST	4	7.1 DIAGNOSIS	109
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM ...	18	7.1.1 DISASSEMBLY	109
4. PCB CONNECTION DIAGRAM	54	7.1.2 CONNECTOR FUNCTION DESCRIPTION	115
5. ELECTRICAL PARTS LIST	66	7.2 IC	116
6. ADJUSTMENT.....	90	7.3 OPERATIONAL FLOW CHART	141
		7.4 CLEANING	142
		8. OPERATIONS AND SPECIFICATIONS.....	143



For details, refer to "Important symbols for good services".

PIONEER CORPORATION

PIONEER ELECTRONICS (USA) INC.

PIONEER EUROPE NV

PIONEER ELECTRONICS ASIACENTRE PTE.LTD.

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.

Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium

253 Alexandra Road, #04-01, Singapore 159936

[Important symbols for good services]

In this manual, the symbols shown-below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety



You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments



To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning



For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws



To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts



Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

● Service Precautions



- For pickup unit(CXX1305) handling, please refer to "Disassembly"(see page 109).
During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a short pin).
- During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.
- Please checking the grating after changing the service pickup unit(see page 93).
- You can't recover the data if the HDD should break for some reason.
- Be careful to handle HDDs (as HDD navigation systems).
- An external power supply box is used along with the unit. Customers may consult their dealers without bringing the box.
- You can't play your data with any HDD or product other than the original one, because each product has its ID (CXK2000EN) for protecting copyrights. Please use both of the ID and the data in the HDD as paired with each other. (For example, if you exchange the digital units because your unit has defects, remove IC3305: CXK2000EN from the defective unit and install it in the new unit for use.)

1. SAFETY INFORMATION

UC

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING


This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

EW**1. Safety Precautions for those who Service this Unit.**

- When checking or adjusting the emitting power of the laser diode exercise caution in order to get safe, reliable results.

Caution:

1. During repair or tests, minimum distance of 13cm from the focus lens must be kept.
 2. During repair or tests, do not view laser beam for 10 seconds or longer.
2. A "CLASS 1 LASER PRODUCT" label is affixed to the bottom of the player.
 3. The triangular label is attached to the mechanism unit frame.

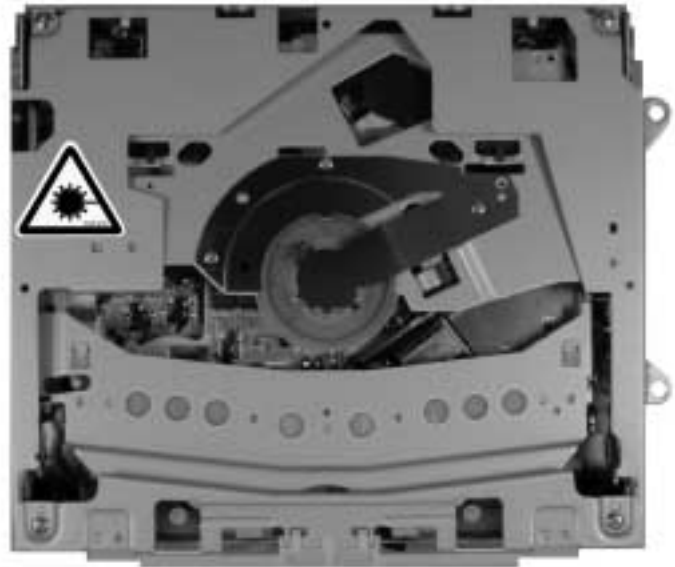**4. Specifications of Laser Diode**

Specifications of laser radiation fields to which human access is possible during service.


Wavelength = 800 nanometers

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replaced only with the same or equivalent type recommended by the manufacture.
Discord used batteries according to the manufacture's instructions.

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING(DEH-P90HDD/UC)

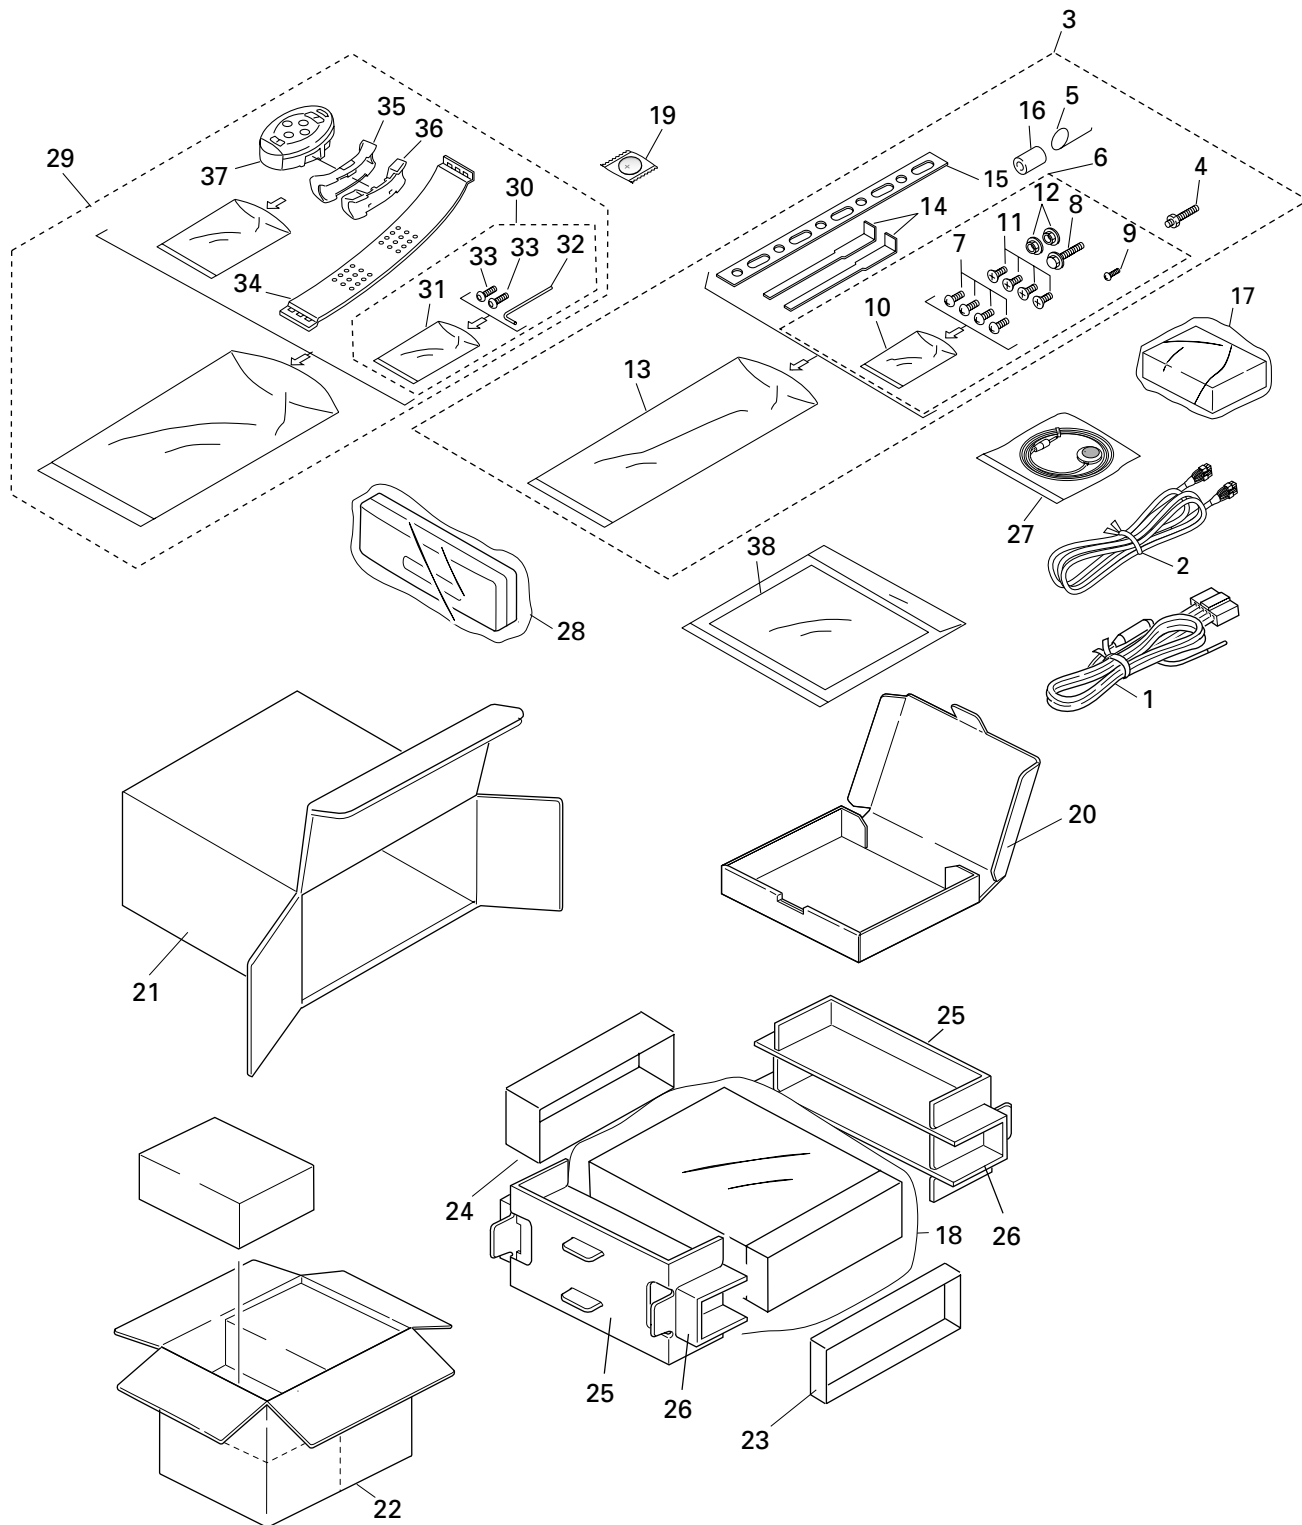

NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)


● PACKING(DEH-P90HDD/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Cord Assy	CDE6563		26	Protector	CHP2446
	2	Cord Assy	CDE6584		27	Microphone Assy	CPM1054
	3	Accessory Assy	CEA3014		28	Case Assy	CXB3520
	4	Screw	CBA1002		29	Remote Control Assy	CXB6860
	5	Spring	CBH-865		30	Screw Assy	CZE3169
	6	Screw Assy	CEA3012	*	31	Polyethylene Bag	CEG-127
	7	Screw	BMZ50P080FMC	*	32	Hexagon Wrench	CZE3176
	8	Screw	CBA-102	*	33	Screw	RMZ30H060FBK
	9	Screw(M2x6)	CBA1120		34	Belt	CZN7661
*	10	Polyethylene Bag	CEG-127		35	Holder Assy	CZX3172
	11	Screw	CMZ50P080FMC		36	Holder Assy	CZX3173
	12	Nut	NF50FMC		37	Remote Control Assy	CZX3246
*	13	Polyethylene Bag	CEG-158		38-1	Polyethylene Bag	CEG1116
	14	Handle	CNC5395		38-2	Owner's Manual	CRD3472
	15	Strap	CNC5402		38-3	Installation Manual	CRD3473
	16	Bush	CNV3930	*	38-4	Caution Card	CRP1244
*	17	Polyethylene Bag	CEG1163	*	38-5	Card	ARY1048
	18	Polyethylene Bag	CEG1185	*	38-6	Caution Card	CRP1274
*	19	Battery	CEX1030				
	20	Sub Carton	CHA3213				
	21	Carton	CHG4504				
	22	Contain Box	CHL4504				
	23	Protector	CHP2385				
	24	Protector	CHP2386				
	25	Protector	CHP2445				

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P90HDD/UC	CRD3472	English, French
DEH-P90HDD/UC	CRD3473	English, French

2.2 PACKING(DEH-P900HDD/EW)

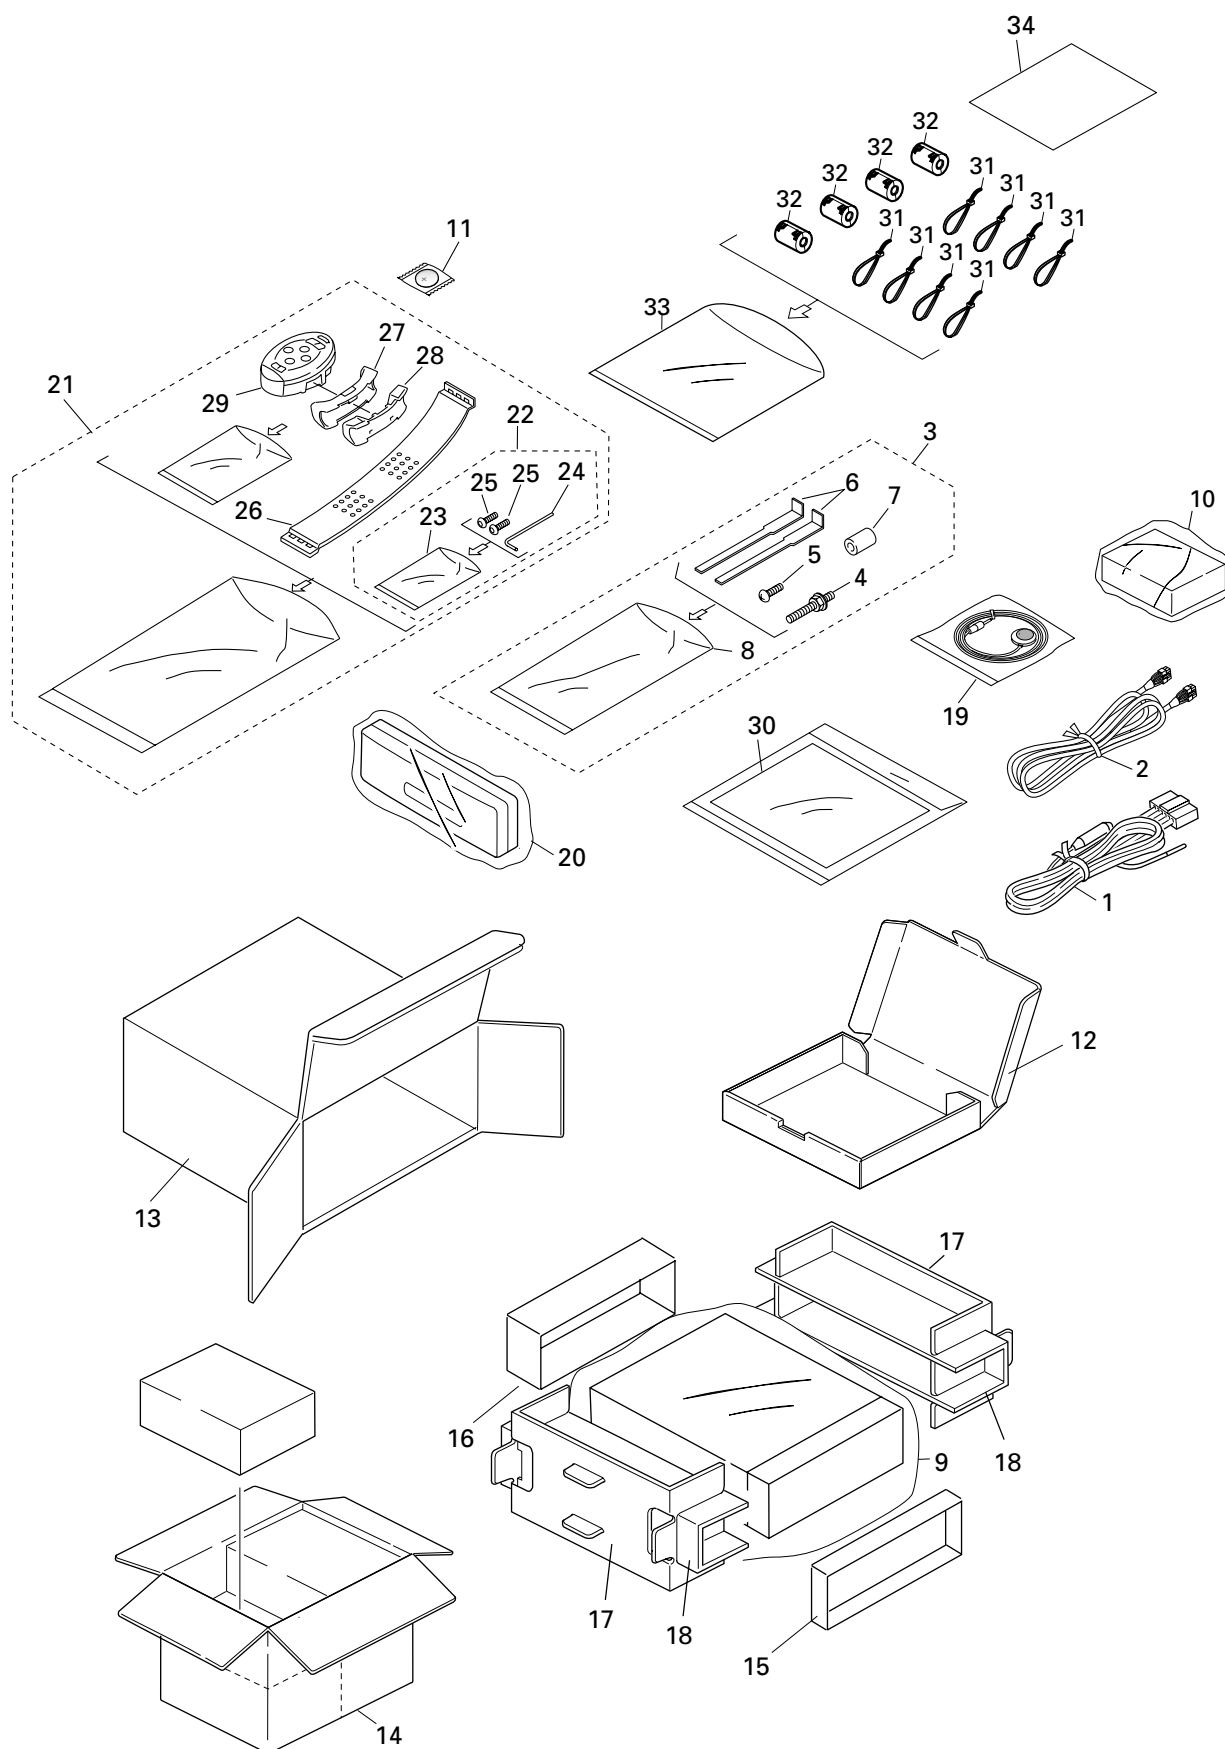


● **PACKING(DEH-P900HDD/EW) SECTION PARTS LIST**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 Cord Assy	CDE6562		21 Remote Control Assy	CXB6860
	2 Cord Assy	CDE6584		22 Screw Assy	CZE3169
	3 Accessory Assy	CEA3015	*	23 Polyethylene Bag	CEG-127
	4 Screw	CBA1002	*	24 Hexagon Wrench	CZE3176
	5 Screw(M2x6)	CBA1120	*	25 Screw	RMZ30H060FBK
	6 Handle	CNC5395		26 Belt	CZN7661
	7 Bush	CNV3930		27 Holder Assy	CZX3172
*	8 Polyethylene Bag	E36-615		28 Holder Assy	CZX3173
*	9 Cover	CEG1088		29 Remote Control Assy	CZX3246
*	10 Polyethylene Bag	CEG1163	30-1	Polyethylene Bag	CEG1116
*	11 Battery	CEX1030	30-2	Owner's Manual	CRD3468
	12 Sub Carton	CHA3213	30-3	Owner's Manual	CRD3469
	13 Carton	CHG4503	30-4	Owner's Manual	CRD3470
	14 Contain Box	CHL4503	30-5	Installation Manual	CRD3471
	15 Protector	CHP2385	*	30-6 Caution Card	CRP1244
	16 Protector	CHP2386	30-7	Passport	CRY1013
	17 Protector	CHP2445	*	30-8 Warranty Card	CRY1157
	18 Protector	CHP2446	*	30-9 Caution Card	CRP1275
	19 Microphone Assy	CPM1054	*	31 Lock Tie	CNV-754
	20 Case Assy	CXB3520		32 Filter	CTX1060
				33 Polyethylene Bag	CEG1161
			*	34 Caution Card	CRP1271

● **Owner's Manual, Installation Manual**

Part No.	Language
CRD3468	English, Spanish
CRD3469	German, French
CRD3470	Italian, Dutch
CRD3471	English, Spanish, German, French, Italian, Dutch

2.3 PACKING(DEH-P900HDD/ES)

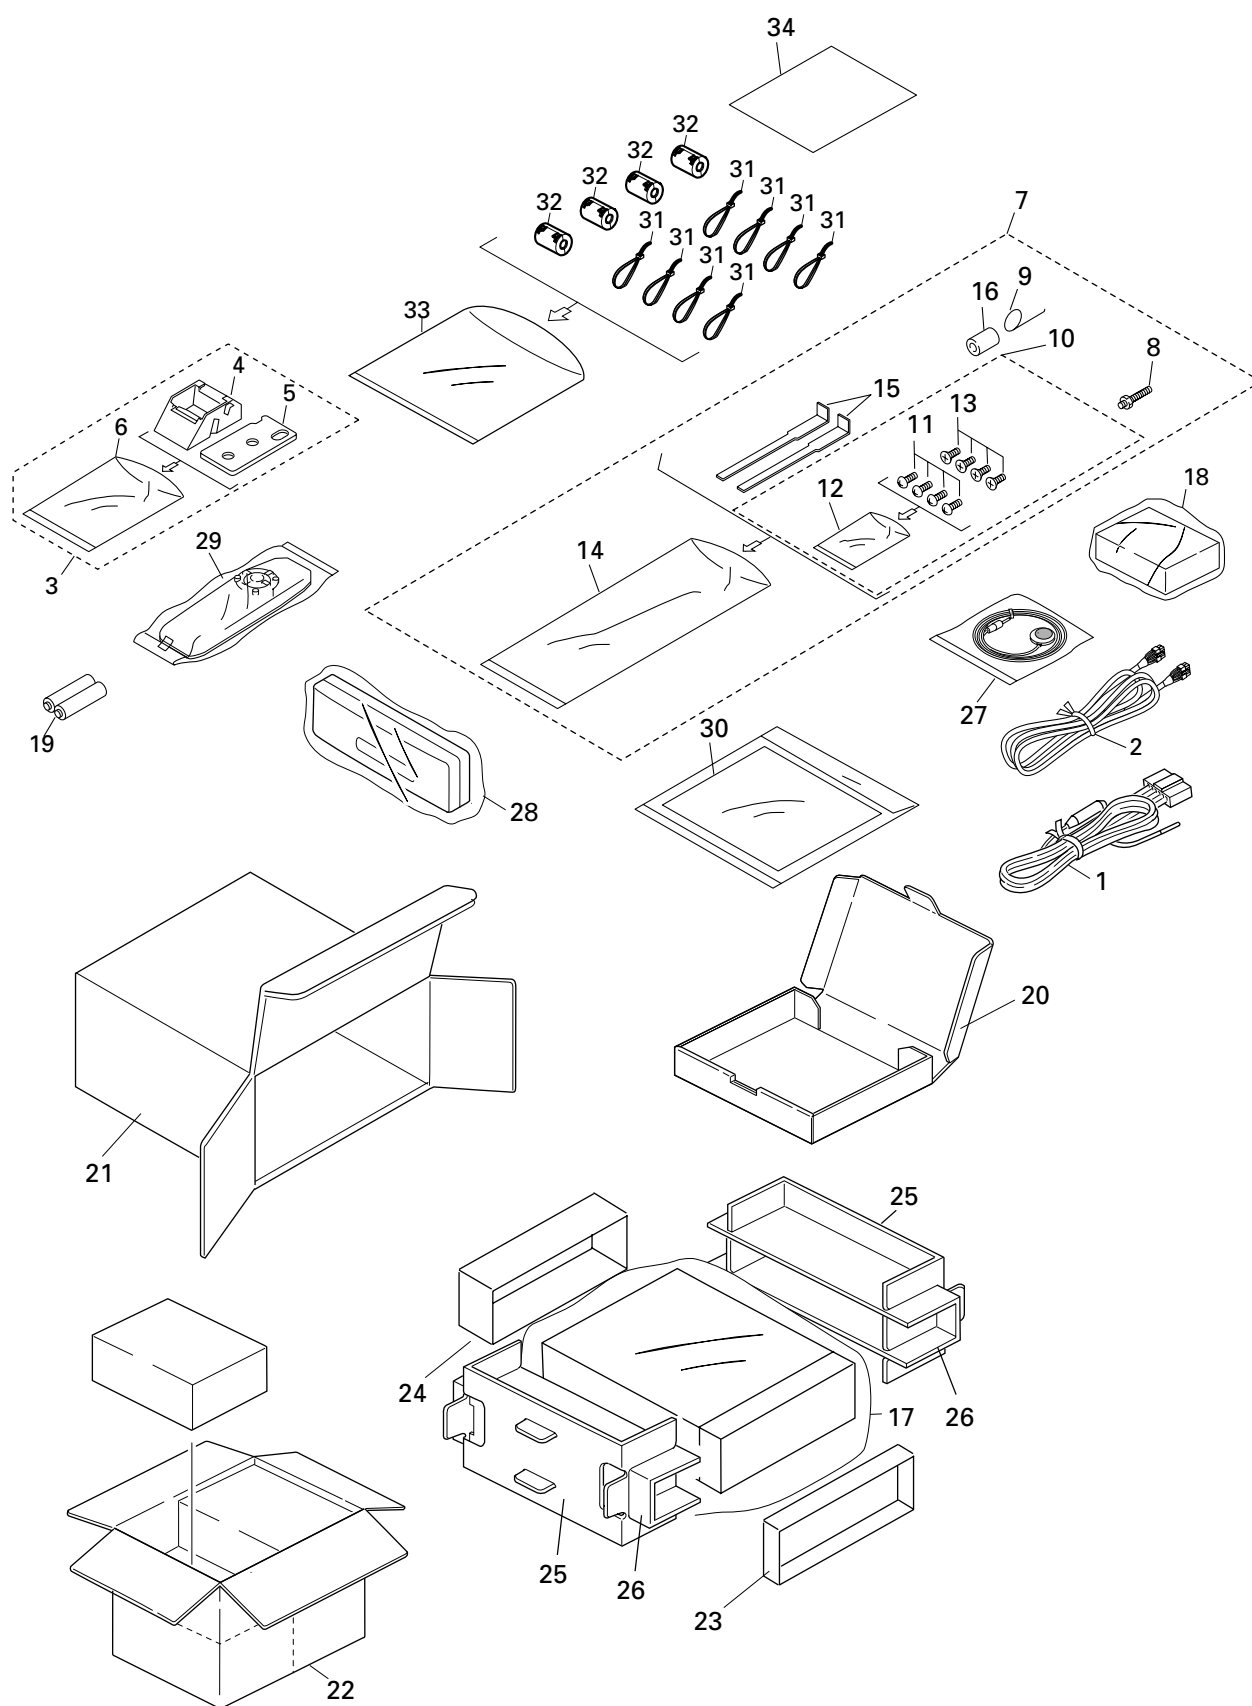


● **PACKING(DEH-P900HDD/ES) SECTION PARTS LIST**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 Cord Assy	CDE6563	21	Carton	CHG4505
	2 Cord Assy	CDE6584	22	Contain Box	CHL4505
	3 Base Assy	CEA2426	23	Protector	CHP2385
*	4 Base	CNS5031	24	Protector	CHP2386
*	5 Sheet	CZA3371	25	Protector	CHP2445
	6 Polyethylene Bag	CZE3188	26	Protector	CHP2446
	7 Accessory Assy	CEA3013	27	Microphone Assy	CPM1054
	8 Screw	CBA1002	28	Case Assy	CXB3520
	9 Spring	CBH-865	29	Remote Control Assy	CXB3875
	10 Screw Assy	CEA3105	30-1	Polyethylene Bag	CEG1116
	11 Screw	BMZ50P080FMC	30-2	Owner's Manual	CRB1731
*	12 Polyethylene Bag	CEG-127	30-3	Owner's Manual	CRD3474
	13 Screw	CMZ50P080FMC	30-4	Owner's Manual	CRD3475
*	14 Polyethylene Bag	CEG-158	30-5	Installation Manual	CRD3476
	15 Handle	CNC5395	* 30-6	Caution Card	CRP1244
	16 Bush	CNV3930	* 30-7	Caution Card	CRP1274
*	17 Cover	CEG1088	* 31	Lock Tie	CNV-754
*	18 Polyethylene Bag	CEG1163	32	Filter	CTX1060
*	19 Battery	CEX1006	33	Polyethylene Bag	CEG1161
	20 Sub Carton	CHA3213	* 34	Caution Card	CRP1271

● **Owner's Manual, Installation Manual**

Part No.	Language
CRB1731	English
CRD3474	English, Spanish
CRD3475	Portuguese(B), Arabic
CRD3476	English, Spanish, Portuguese(B), Arabic

2.4 EXTERIOR(1)(DEH-P90HDD/UC, DEH-P900HDD/ES)

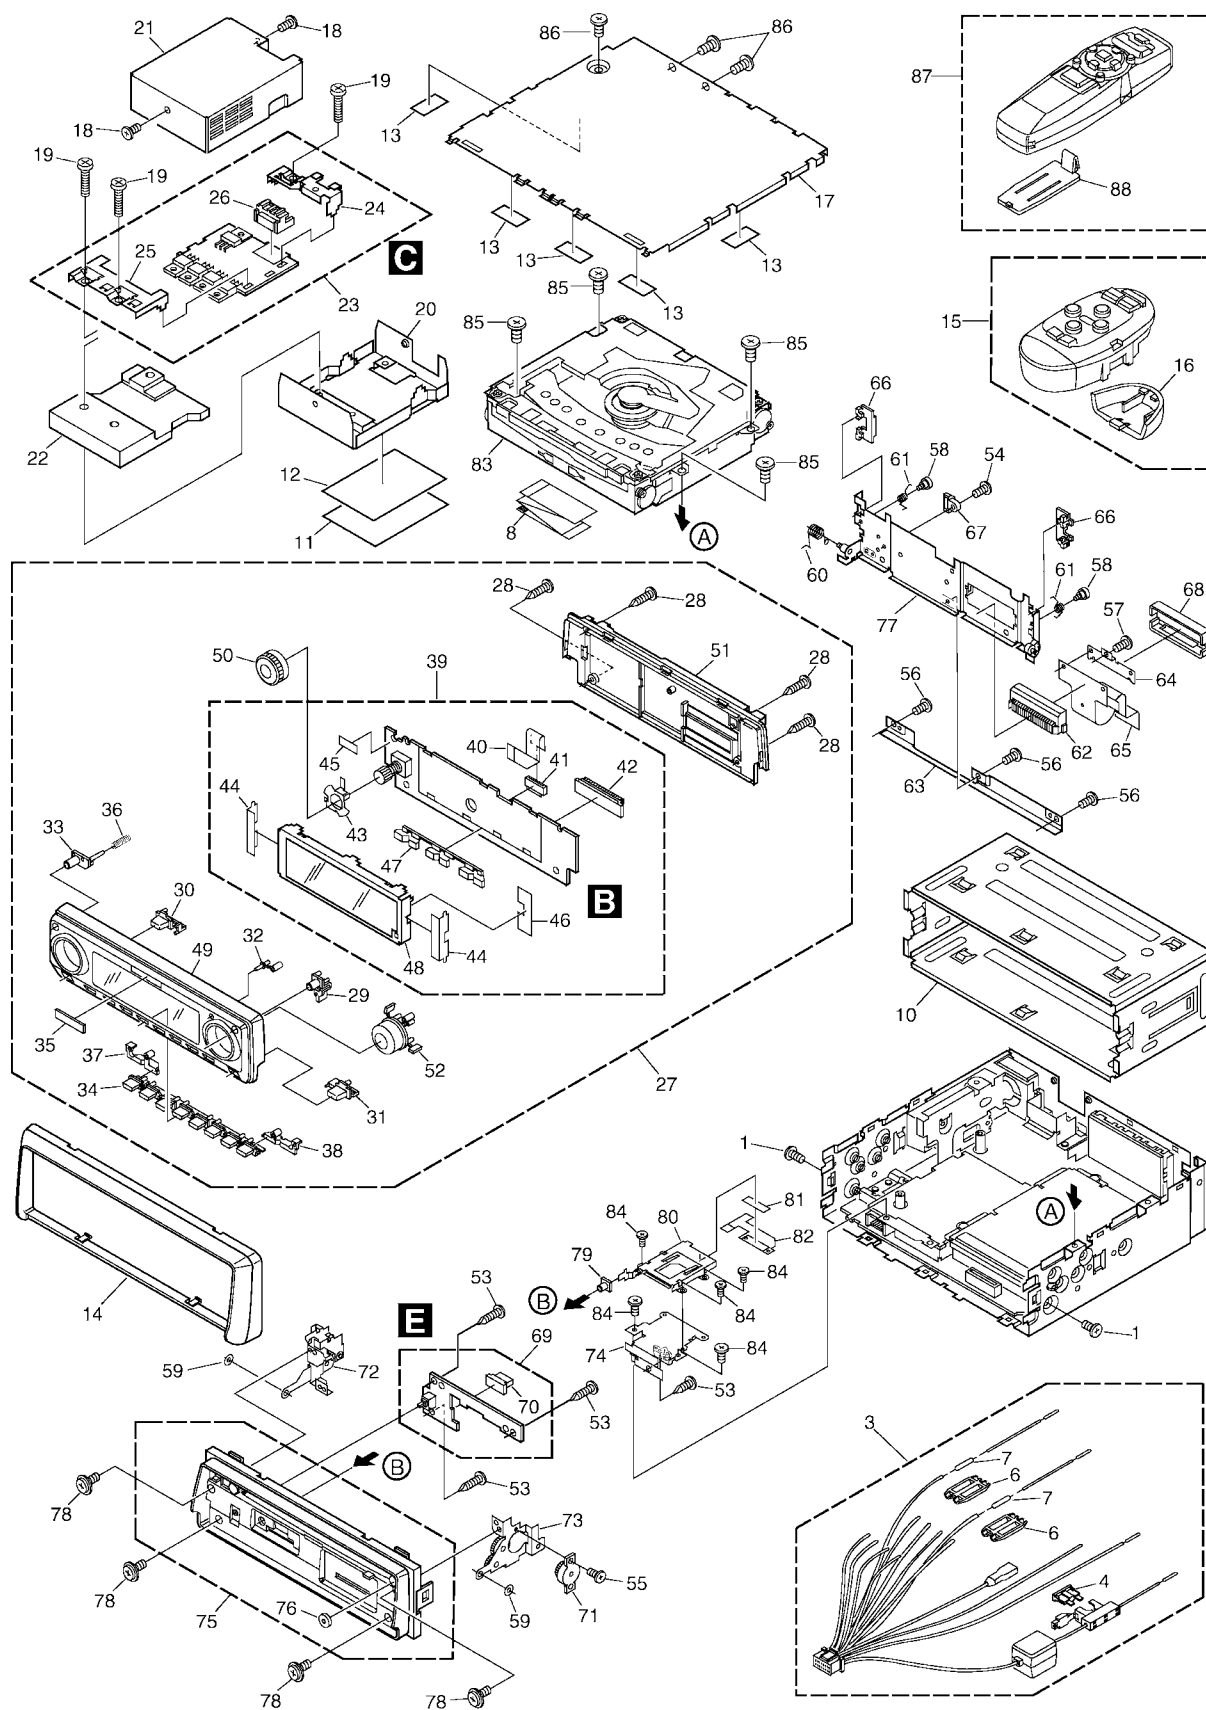

(1) EXTERIOR(1)(DEH-P90HDD/UC, DEH-P900HDD/ES) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P040FMC	46	Cushion	CNM7719
2		47	Lighting Conductor	CNV6554
3	Cord Assy	CDE6563	48	OEL Module	MXK8014
4	Fuse(10A)	CEK1136	49	Grille Unit	See Contrast table(2)
5		50	Knob Unit	CXB7084
6	Cap	CNS1472	51	Cover Unit	CXB7086
7	Resistor	RS1/2PMF102J	52	Button Unit	CXB7440
8	Flat Cable	CDE6581	53	Screw	BPZ20P060FMC
9		54	Screw(M2x3)	CBA1082
10	Holder	CNC8659	55	Screw(M2x2)	CBA1176
11	Fastener	CNM7652	56	Screw(M2x2.2)	CBA1419
12	Fastener	CNM7651	57	Screw(M2x2)	CBA1505
13	Cushion	CNM7732	58	Screw(M2x1.5)	CBA1528
14	Panel	See Contrast table(2)	59	Washer	CBF1001
15	Remote Control Assy	See Contrast table(2)	60	Spring	CBH2319
16	Cover	See Contrast table(2)	61	Spring	CBH2445
17	Case Unit	CXB7094	62	Connector	CKS4436
18	Screw	BSZ26P060FMC	63	Holder	CND1001
19	Screw	BSZ26P160FMC	64	Holder	CND1002
20	Chassis	CNA2393	65	Flexible PCB	CNP6278
21	Case	CNB2731	66	Holder	CNV6575
22	Heat Sink	CNR1611	67	Guide	CNV6676
23	Power Supply Unit	CWM7665	68	Cover	CNV7238
* 24	Holder	CNC9353	69	Panel Unit	CWM7826
* 25	Holder	CNC9354	70	Connector(CN1801)	CKS4251
26	Connector(CN2801)	CKM1343	71	Damper Unit	CXB4659
27	Detach Grille Assy	See Contrast table(2)	72	Holder Unit	CXB7097
28	Screw	BPZ20P080FZK	73	Holder Unit	CXB7098
29	Button	CAC6863	74	Holder Assy	CXB7495
30	Button	CAC6867	75	Panel Unit	CXB7572
31	Button	CAC6870	76	Cushion	CNM5486
32	Button	CAC6872	77	Holder Unit	CXB8903
33	Button	CAC6951	78	Screw	IMS20P040FZK
34	Button	CAC7307	79	Button	CAC7112
* 35	Badge	CAH1754	80	Connector	CKS4494
36	Spring	CBH1844	81	Double Faced Tape	CNM7785
37	Lighting Conductor	CNV6557	82	Flexible PCB	CNP6279
38	Lighting Conductor	CNV6674	83	CD Mechanism Module(H2)	CXK5354
39	Keyboard Unit	CWM7664	84	Screw	IMS20P030FMC
40	Connector	CDE6741	85	Screw	BSZ26P060FMC
41	Connector(CN1902)	CKS3995	86	Screw	BSZ30P050FMC
42	Connector(CN1901)	CKS4435	87	Remote Control Assy	See Contrast table(2)
43	Spacer	CNM7409	88	Battery Cover	See Contrast table(2)
44	Spacer	CNM7529			
45	Spacer	CNM7711			

(2) CONTRAST TABLE

DEH-P90HDD/UC and DEH-P900HDD/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P90HDD/UC	DEH-P900HDD/ES
14	Panel	CNS6665	CNS6669
15	Remote Control Assy	CZX3246	Not used
16	Cover	CZN7655	Not used
27	Detach Grille Assy	CXB7474	CXB7475
49	Grille Unit	CXB7081	CXB7082
87	Remote Control Assy	Not used	CXB3875
88	Battery Cover	Not used	CNS5032


2.5 EXTERIOR(1)(DEH-P900HDD/EW)

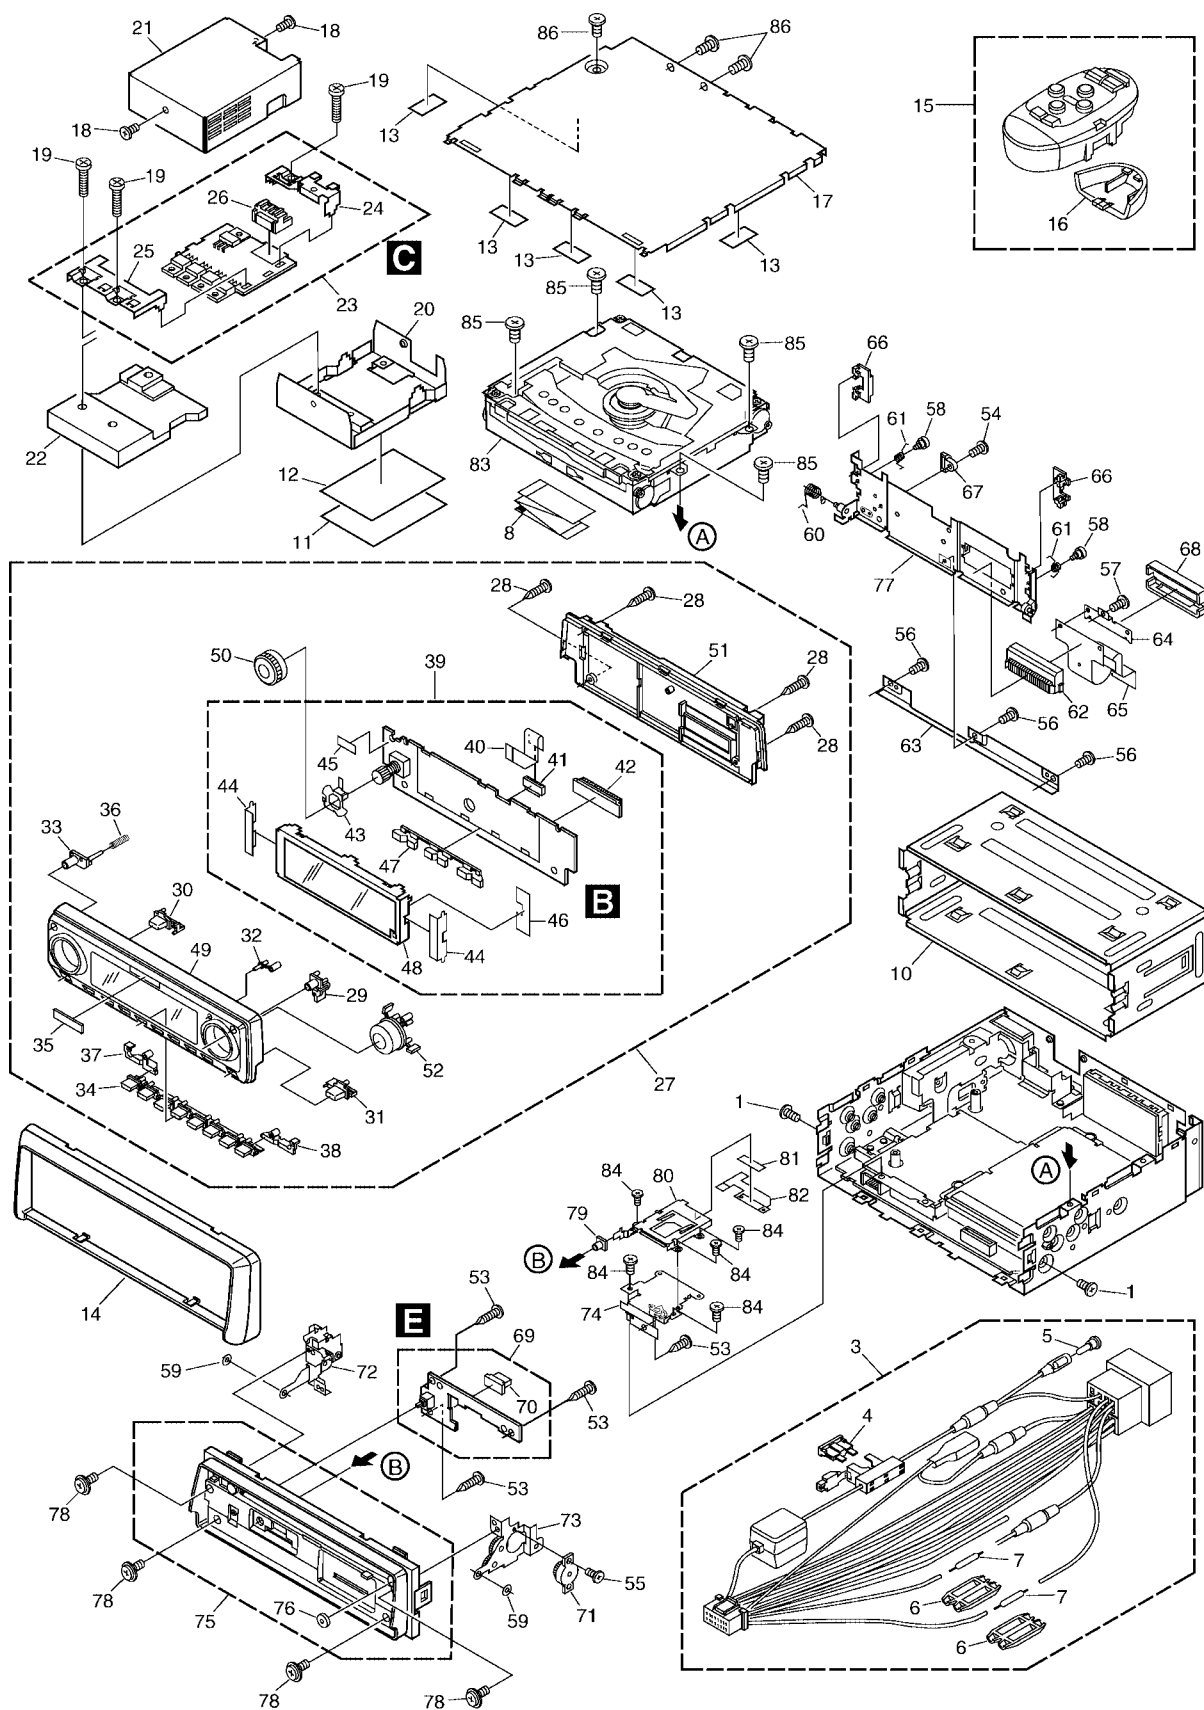

● EXTERIOR(1)(DEH-P900HDD/EW) SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FMC		46	Cushion	CNM7719
	2			47	Lighting Conductor	CNV6554
	3	Cord Assy	CDE6562		48	OEL Module	MXK8014
	4	Fuse(10A)	CEK1136		49	Grille Unit	CXB7080
	5	Cap	CKX-003		50	Knob Unit	CXB7084
	6	Cap	CNS1472		51	Cover Unit	CXB7086
	7	Resistor	RS1/2PMF102J		52	Button Unit	CXB7440
	8	Flat Cable	CDE6581		53	Screw	BPZ20P060FMC
	9			54	Screw(M2x3)	CBA1082
	10	Holder	CNC8659		55	Screw(M2x2)	CBA1176
	11	Fastener	CNM7652		56	Screw(M2x2.2)	CBA1419
	12	Fastener	CNM7651		57	Screw(M2x2)	CBA1505
	13	Cushion	CNM7732		58	Screw(M2x1.5)	CBA1528
	14	Panel	CNS6665		59	Washer	CBF1001
	15	Remote Control Assy	CZX3246		60	Spring	CBH2319
	16	Cover	CZN7655		61	Spring	CBH2445
	17	Case Unit	CXB7094		62	Connector	CKS4436
	18	Screw	BSZ26P060FMC		63	Holder	CND1001
	19	Screw	BSZ26P160FMC		64	Holder	CND1002
	20	Chassis	CNA2393		65	Flexible PCB	CNP6278
	21	Case	CNB2731		66	Holder	CNV6575
	22	Heat Sink	CNR1611		67	Guide	CNV6676
	23	Power Supply Unit	CWM7665		68	Cover	CNV7238
*	24	Holder	CNC9353		69	Panel Unit	CWM7826
*	25	Holder	CNC9354		70	Connector(CN1801)	CKS4251
	26	Connector(CN2801)	CKM1343		71	Damper Unit	CXB4659
	27	Detach Grille Assy	CXB7472		72	Holder Unit	CXB7097
	28	Screw	BPZ20P080FZK		73	Holder Unit	CXB7098
	29	Button	CAC6863		74	Holder Assy	CXB7495
	30	Button	CAC6867		75	Panel Unit	CXB7572
	31	Button	CAC6870		76	Cushion	CNM5486
	32	Button	CAC6872		77	Holder Unit	CXB8903
	33	Button	CAC6951		78	Screw	IMS20P040FZK
	34	Button	CAC7307		79	Button	CAC7112
*	35	Badge	CAH1754		80	Connector	CKS4494
	36	Spring	CBH1844		81	Double Faced Tape	CNM7785
	37	Lighting Conductor	CNV6557		82	Flexible PCB	CNP6279
	38	Lighting Conductor	CNV6674		83	CD Mechanism Module(H2)	CXK5354
	39	Keyboard Unit	CWM7664		84	Screw	IMS20P030FMC
	40	Connector	CDE6741		85	Screw	BSZ26P060FMC
	41	Connector(CN1902)	CKS3995		86	Screw	BSZ30P050FMC
	42	Connector(CN1901)	CKS4435				
	43	Spacer	CNM7409				
	44	Spacer	CNM7529				
	45	Spacer	CNM7711				

2.6 EXTERIOR(2)

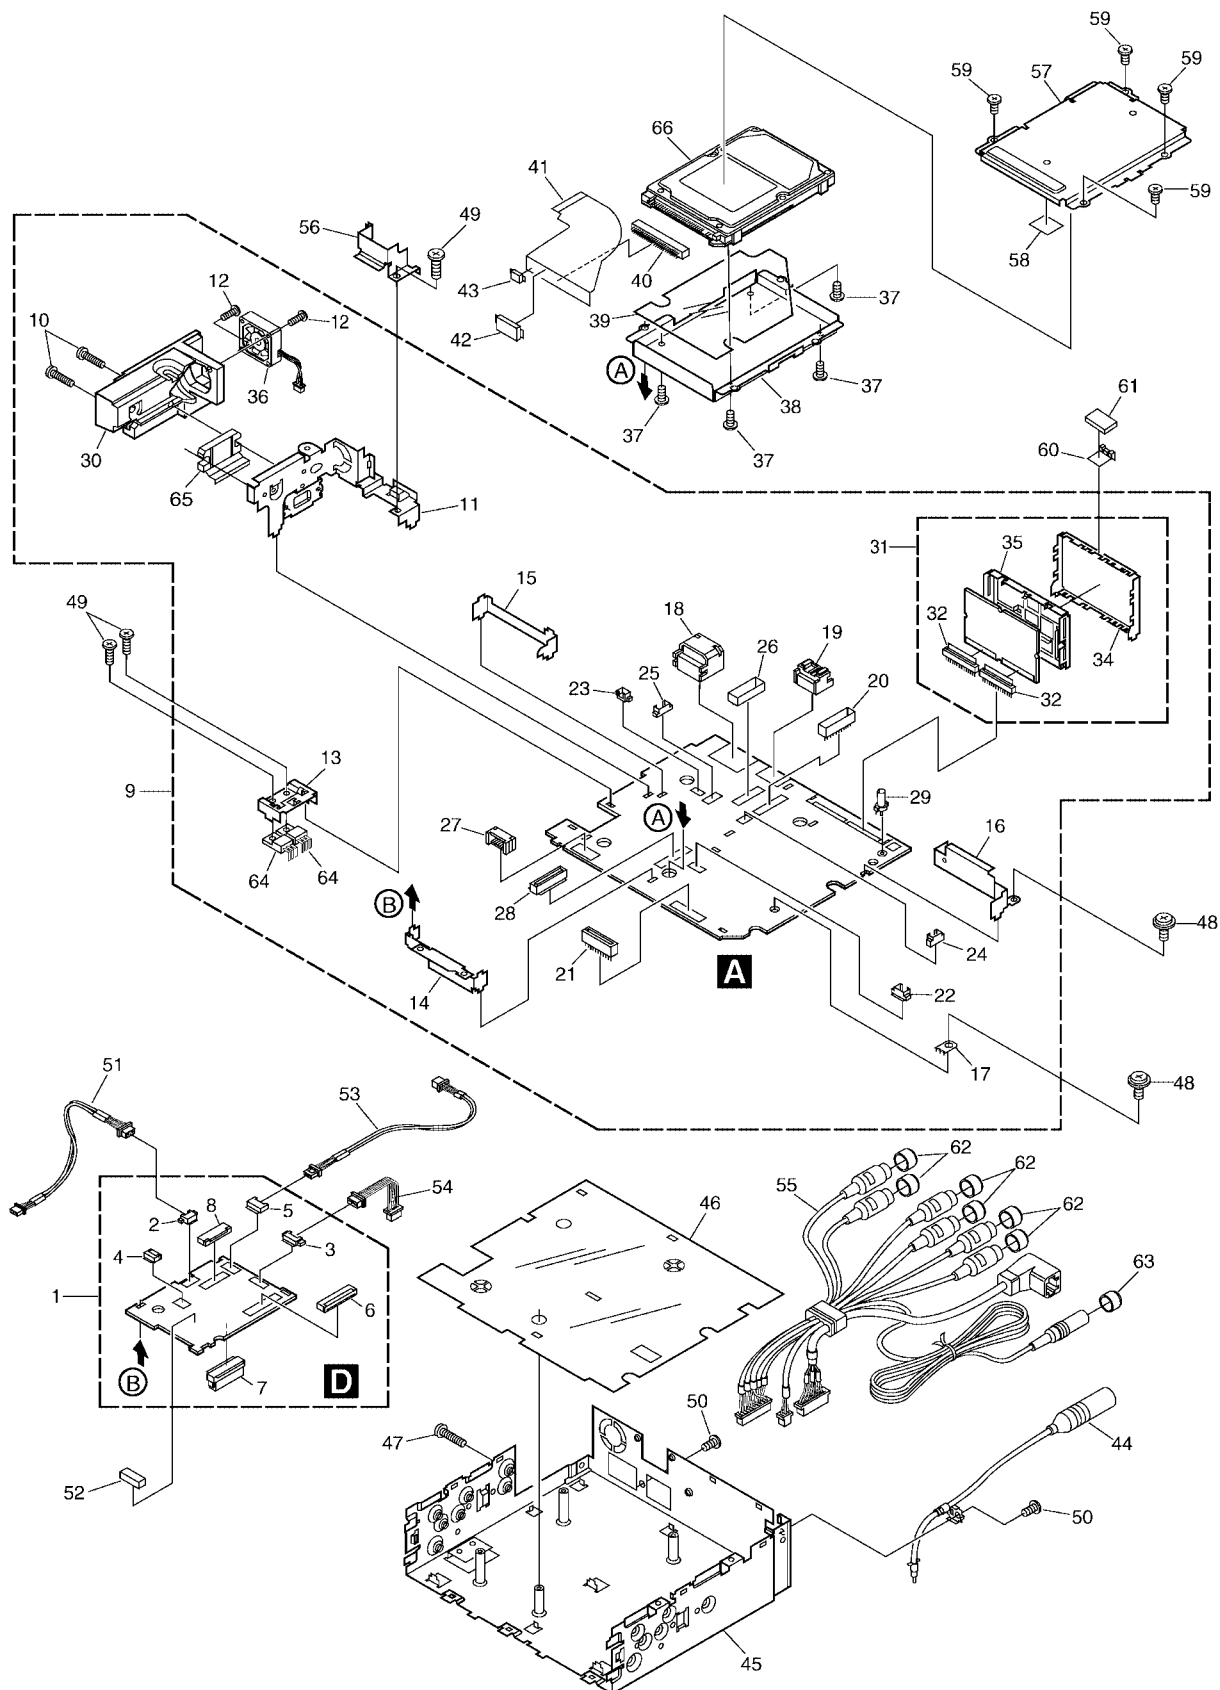

(1) EXTERIOR(2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Digital Unit	CWM7667	36	Fan Motor	CXM1186
2	Connector(CN3002)	CKS2193	37	Screw	BMZ30P040FMC
3	Connector(CN3003)	CKS2195	* 38	Case	CNC9348
4	Connector(CN3301)	CKS3752	* 39	Insulator	CNM7201
5	Connector(CN3101)	CKS4439	40	Connector	CKS4493
6	Connector(CN3201)	CKS4512	41	Flexible PCB	CNP6277
7	Connector(CN3001)	CKS4513	42	Capacitor(C3206)	CCH1300
8	Connector(CN3102)	CKS4522	43	Capacitor(C3207)	CSZSR100M16
9	Tuner Amp Unit	See Contrast table(2)	44	Antenna Cable	CDH1310
10	Screw	BMZ26P160FMC	45	Chassis Unit	See Contrast table(2)
* 11	Holder	CNC9349	46	Insulator	CNM7200
12	Screw(M2.6x14)	CBA1384	47	Screw	BSZ30P200FMC
* 13	Holder	CNC9350	48	Screw	ISS26P055FUC
* 14	Holder	CNC9351	49	Screw	BSZ26P080FMC
* 15	Holder	CNC9352	50	Screw	BSZ30P050FMC
* 16	Shield	CNC9365	51	Cord	CDE6582
17	Terminal(CN202)	CKF1059	52	Cushion	CNM7228
18	Plug(CN901)	CKM1278	53	Cord	CDE6583
19	Connector(CN702)	CKM1343	54	Cord	CDE6580
20	Plug(CN101)	CKS1044	55	Cord Assy	CDE6856
21	Connector(CN801)	CKS1568	* 56	Holder	CNC9509
22	Connector(CN371)	CKS2193	* 57	Cover	CNC9347
23	Connector(CN591)	CKS3124	* 58	Insulator	CNM7202
24	Connector(CN131)	CKS3125	59	Screw	BSZ26P060FMC
25	Connector(CN701)	CKS3128	60	Earth Plate	CNC9459
26	Connector(CN351)	CKS3592	61	Spacer	CNM7366
27	Connector(CN802)	CKS4262	62	Cap	CNV6727
28	Connector(CN703)	CKS4514	63	Cap	CNW-829
29	Mini Pin Jack(CN451)	CKX1046	64	Transistor(Q913, 921)	2SD2396
30	Heat Sink	CNR1610	65	IC(IC301)	PAL006A
31	FM/AM Tuner Unit	See Contrast table(2)	66	HDD Assy(Service)	CXX1565
32	Connector(CN1, 2)	CKS4276			
33				
34	Case	CNC8713			
35	Holder(SH1)	CNC8708			

(2) CONTRAST TABLE

DEH-P90HDD/UC, DEH-P900HDD/EW and DEH-P900HDD/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P90HDD/UC	DEH-P900HDD/EW	DEH-P900HDD/ES
9	Tuner Amp Unit	CWM7824	CWM7823	CWM7825
31	FM/AM Tuner Unit	CWE1605	CWE1604	CWE1605
45	Chassis Unit	CXB7095	CXB7545	CXB7095





● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	CD Core Unit	CWX2532	56	Arm Unit	CXB4503
2	Connector(CN101)	CKS3785	57	Motor Unit(M3)	CXB6620
3	Connector(CN901)	CKS4291	58	Screw(M2x1.2)	CBA1495
4	Connector(CN701)	CKS4522	59	Guide	CNV5925
5	Screw	BSZ20P035FMC	60	Arm Unit	CXB5311
6	Screw(M2x4)	CBA1362	61	Loading Arm Assy(-G)	CXB5715
7	Screw(M2x2.5)	CBA1510	62	Washer	CBF1060
8	Screw(M2x3)	CBA1511	63	Spring	CBH2170
9	Screw(M2x6.2)	CBA1536	* 64	Shaft	CLA3678
10	Washer	CBF1037	* 65	Gear	CNV5934
11	Washer	CBF1064	66	Roller	CNV6068
12	Spring	CBH2291	67	Holder	CNV6210
13	Spring	CBH2292	68	Collar	CNV6439
14	Spring	CBH2293	69	Arm Unit	CXB5686
15	Spring	CBH2295	70	Washer	YE20FUC
16	Spring	CBH2297	71	Washer	CBF1038
17	Spring	CBH2298	72	Arm	CNC8498
18	Spring	CBH2299	73	Lever Unit	CXB4502
19	Spring	CBH2303	74	Screw(M2x1.5)	CBA1509
20	Spring	CBH2304	75	Frame	CNC8497
21	Spring	CBH2305	76	Sheet	CNM6951
22	Spring	CBH2308	77	Guide	CNV5924
23	Spring	CBH2309	78	Washer	CBF1037
24	Spring	CBH2332	79	Spring	CBH2300
25	Spring	CBH2416	80	Spring	CBL1446
26	Spring	CBH2434	81	
27	Spring	CBL1448	82	Spacer	CNM6467
28	Spring	CBL1466	83	Ball	CNR1189
29	Connector	CDE6099	84	Guide	CNV5945
30	Shaft	CLA3683	85	Clamper	CNV5946
31	Shaft	CLA3684	86	Arm	CNV5947
32	Lever	CNC8501	87	Lever	CNV5949
33	Bracket	CNC8507	88	Arm Unit	CXB4505
34	Bracket	CNC8509	89	Screw	JFZ20P020FMC
35	Cushion	CNM6301	90	Frame	CNC8496
36	Sheet	CNM6773	91	Damper	CNV6426
37	Sheet	CNM6774	92	Screw	ISS20P060FMC
38	Gear	CNR1559	93	Screw(M2x3)	CBA1511
39	Arm	CNV5928	94	Holder	CNV6341
40	Arm	CNV5929	95	Roller	CNV6389
41	Gear	CNV5930	96	Arm Unit	CXB5970
42	Gear	CNV5932	97	Roller	CNV6389
43	Gear	CNV5931	98	Arm Unit	CXB5971
44	Gear	CNV5933	99	Load Motor Assy(-D)(M2)	CXB6340
45	Holder	CNV5943	100	Carriage Motor Assy(-D)(M1)	CXB6361
46	Holder	CNV5944	101	Screw Unit(-B)	CXB6363
47	Arm	CNV5948	102	Screw	ISS20P060FMC
48	Cover	CNV5950	103	Screw	JFZ20P025FNI
49	Holder	CNV5951	104	Washer	YE15FUC
50	Holder	CNV6222	105	Pickup Unit(Service)(P8)	CXX1305
51	Holder	CNV6223	106	Screw	IMS20P030FMC
52	Damper	CNV6426	* 107	Cover	CNC9151
53	Holder	CNV6446	108-111	
54	Holder	CNV6512	112	Connector(CN301)	CKS4439
55	Chassis Unit	CXB4501	113	Spacer	CNM7805


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

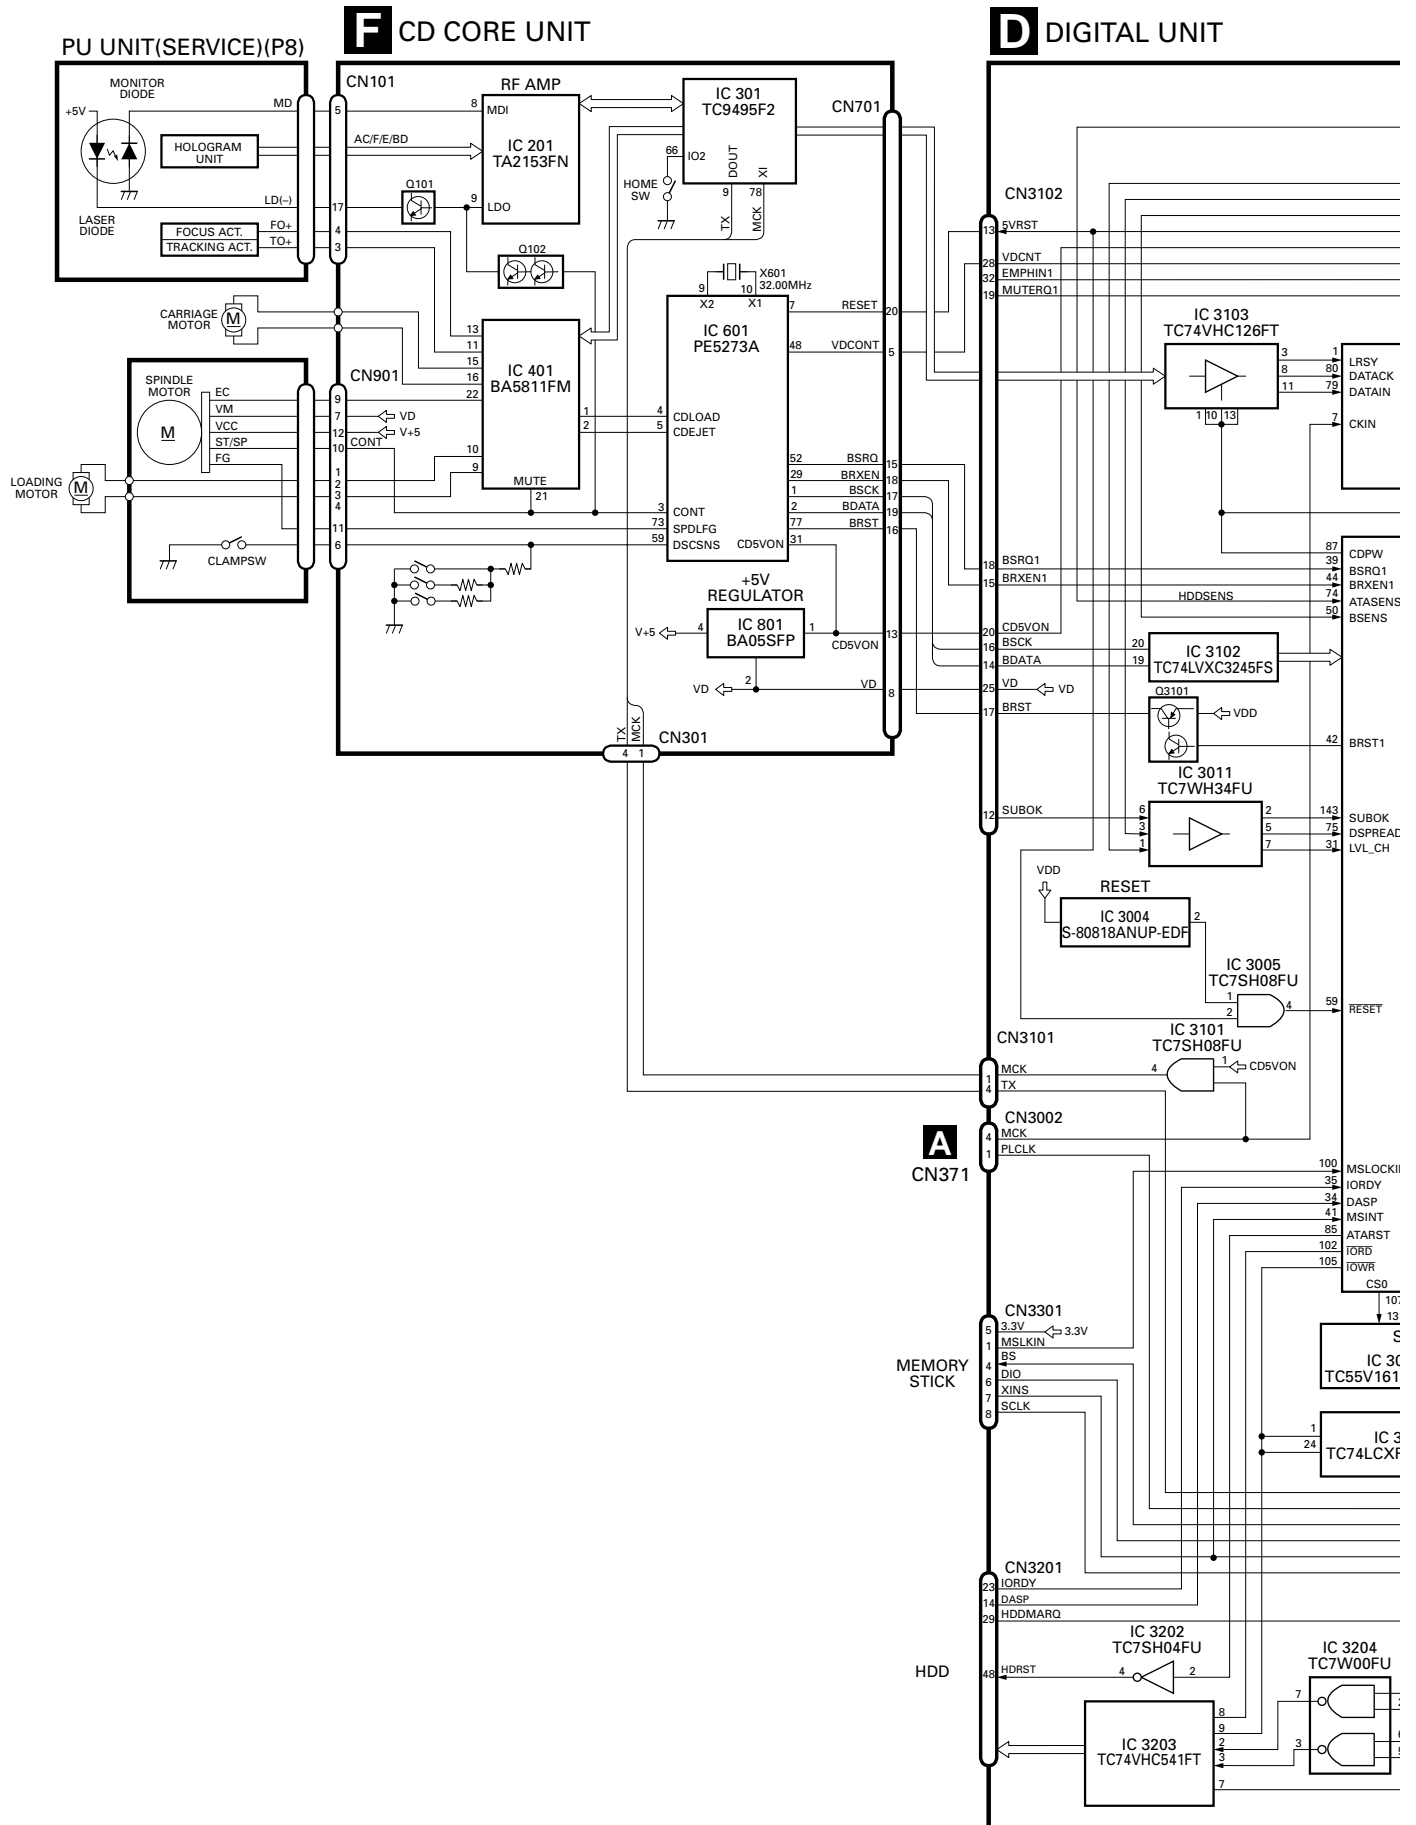


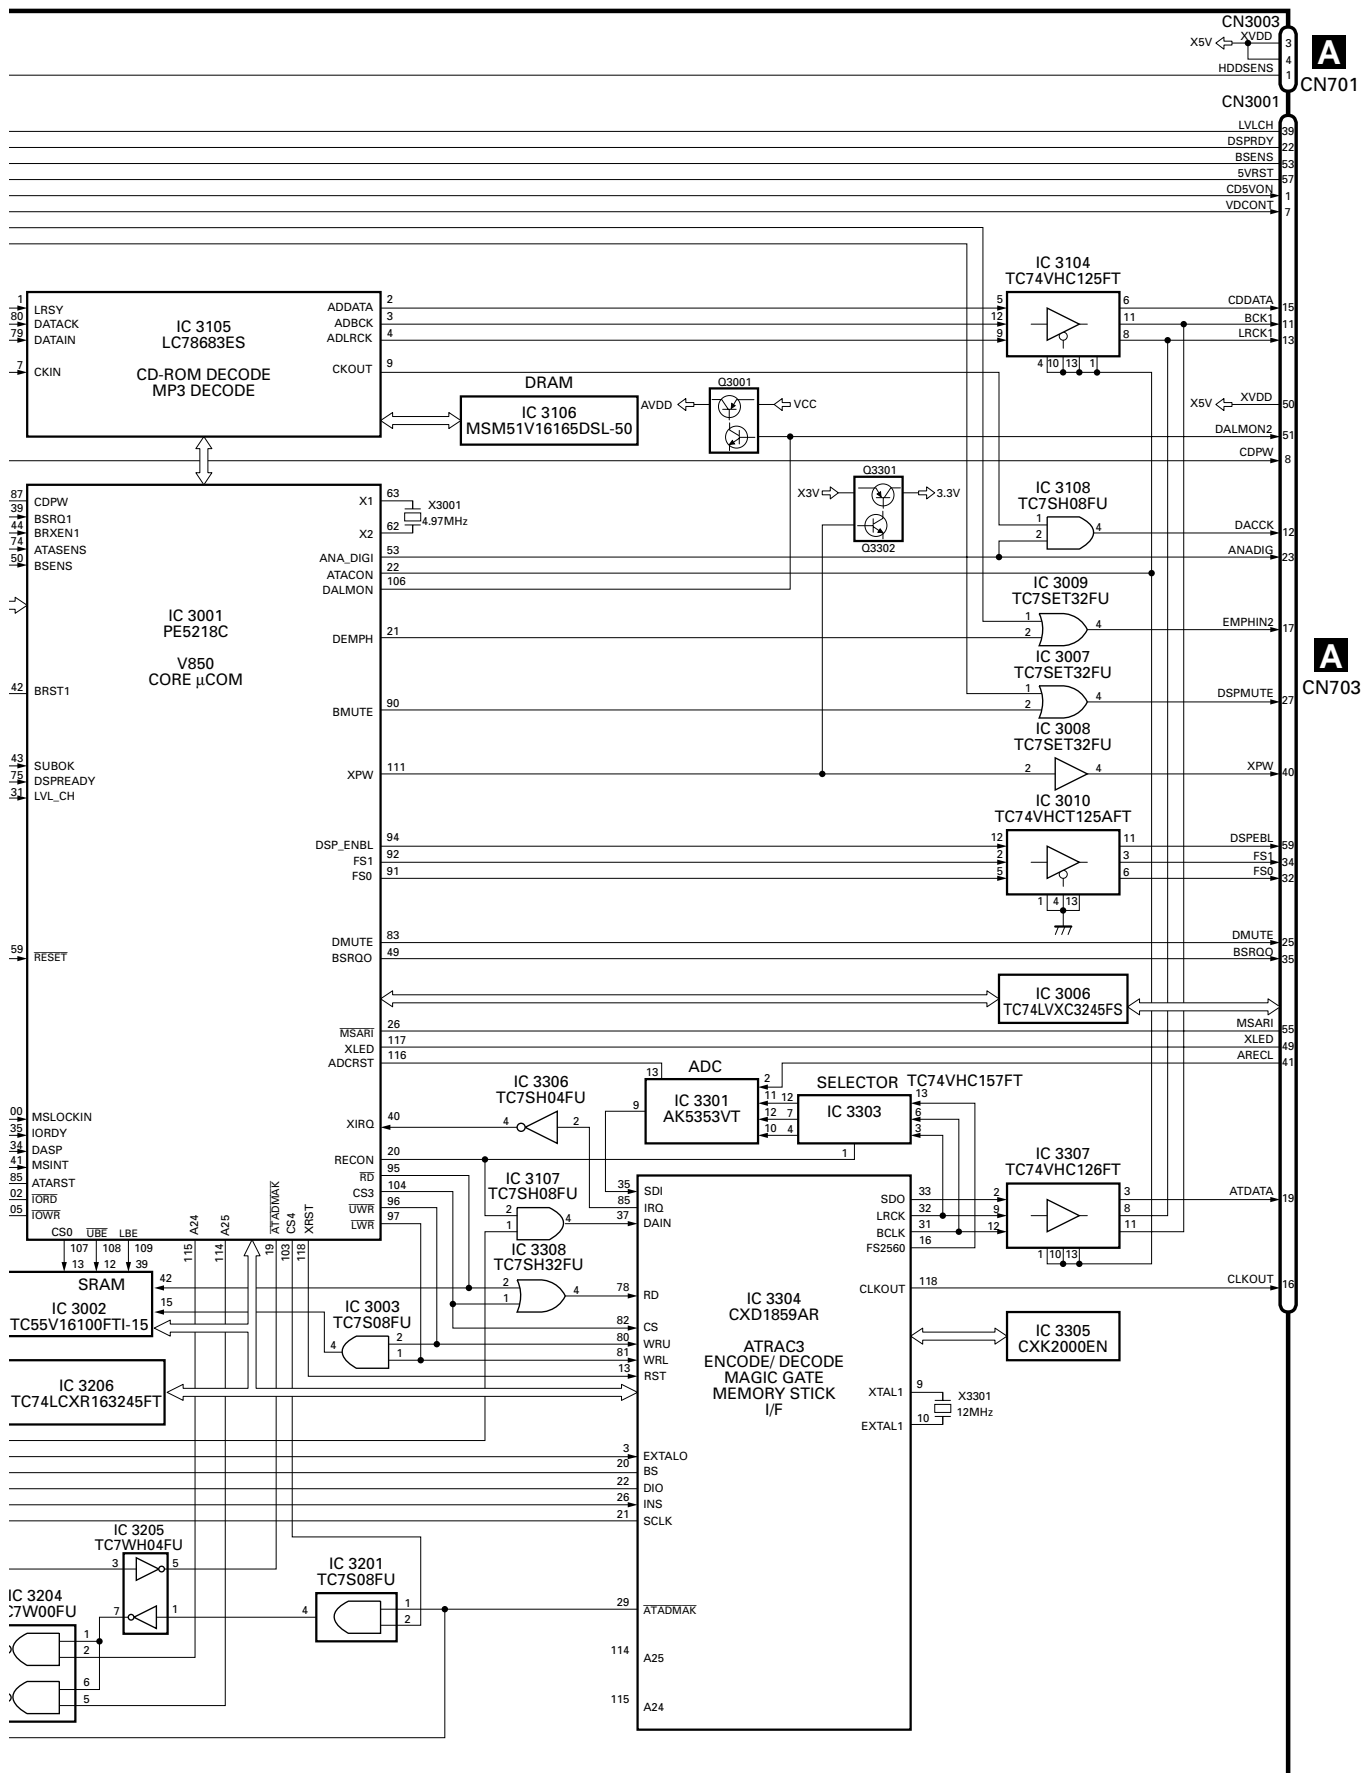


A TUNER AMP UNIT

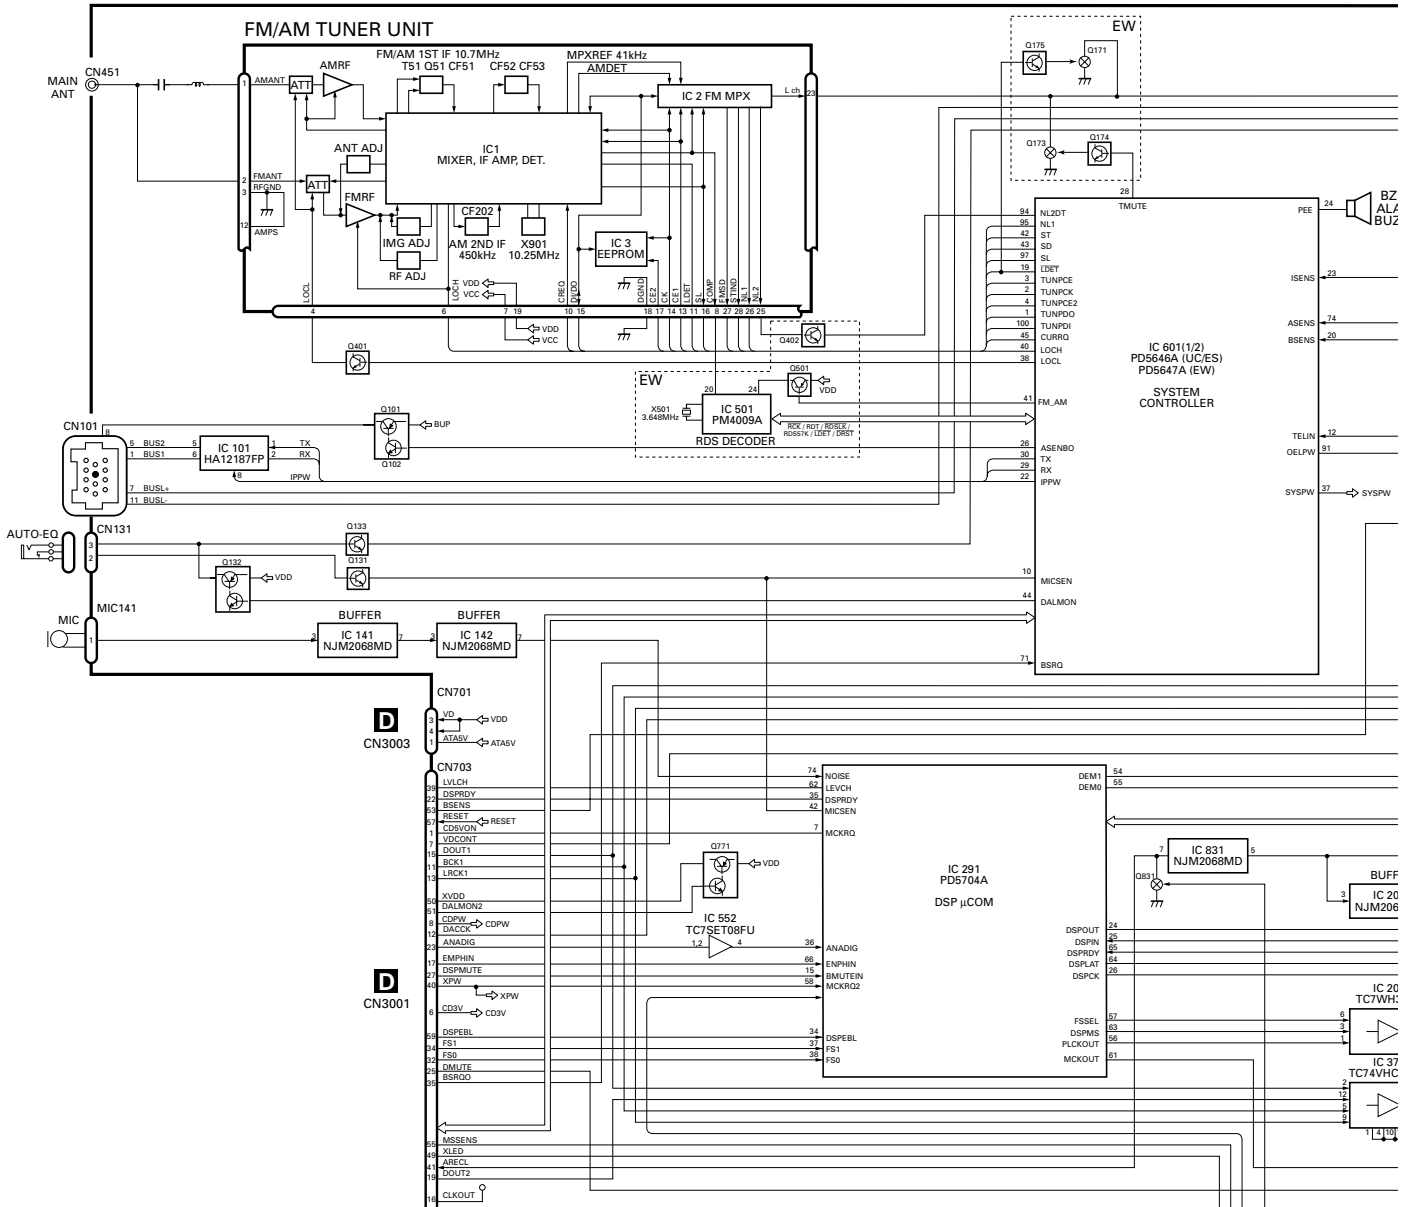


B KEYBOARD UNIT

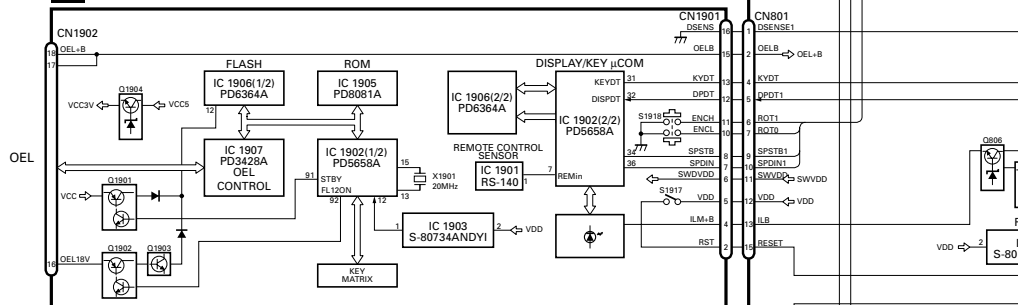



E PANEL UNIT

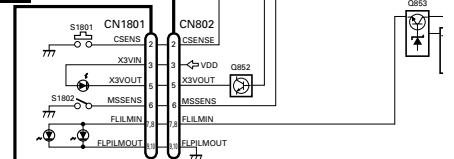


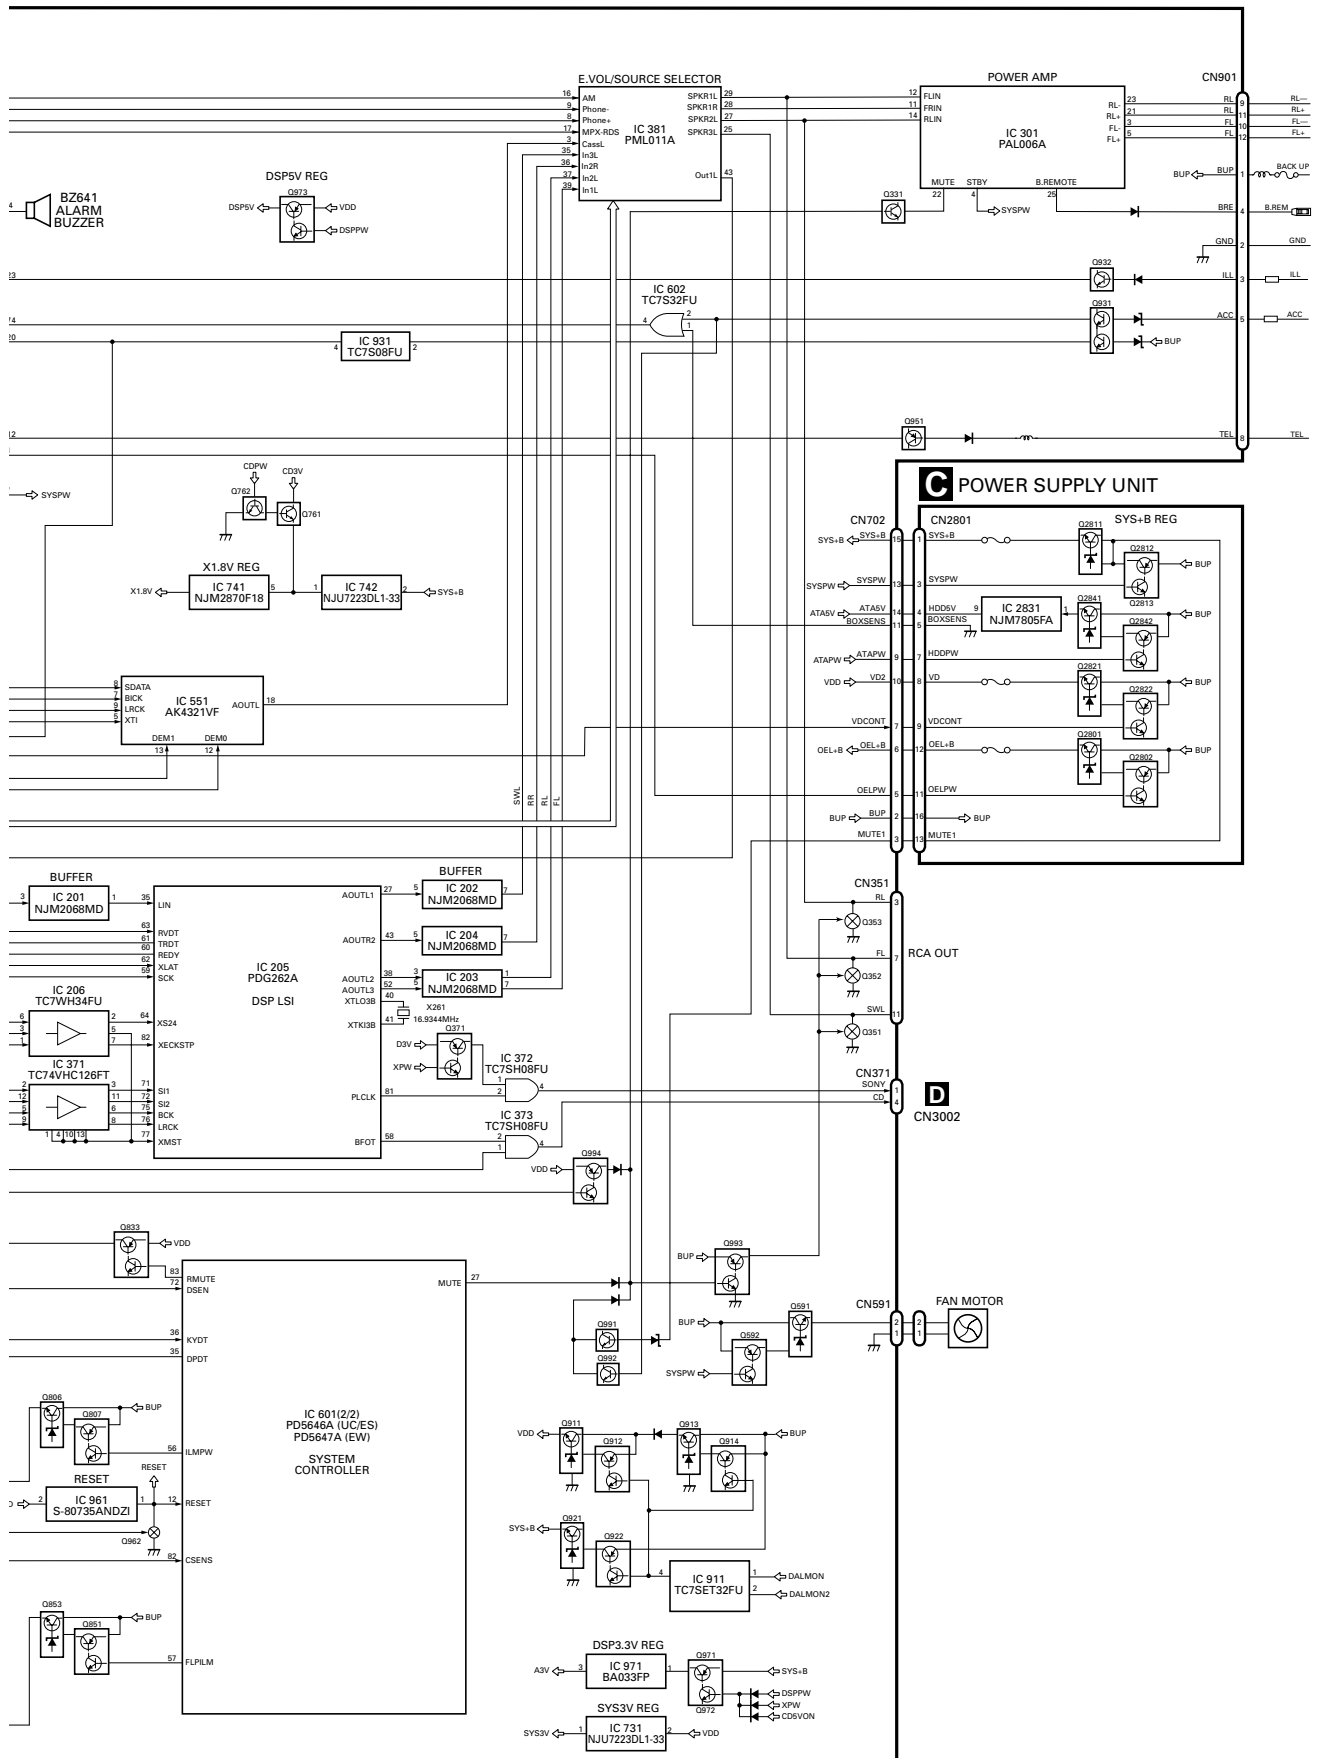

Note: When ordering service parts, be sure to refer to “EXPLODED VIEWS AND PARTS LIST” or “ELECTRICAL PARTS LIST”

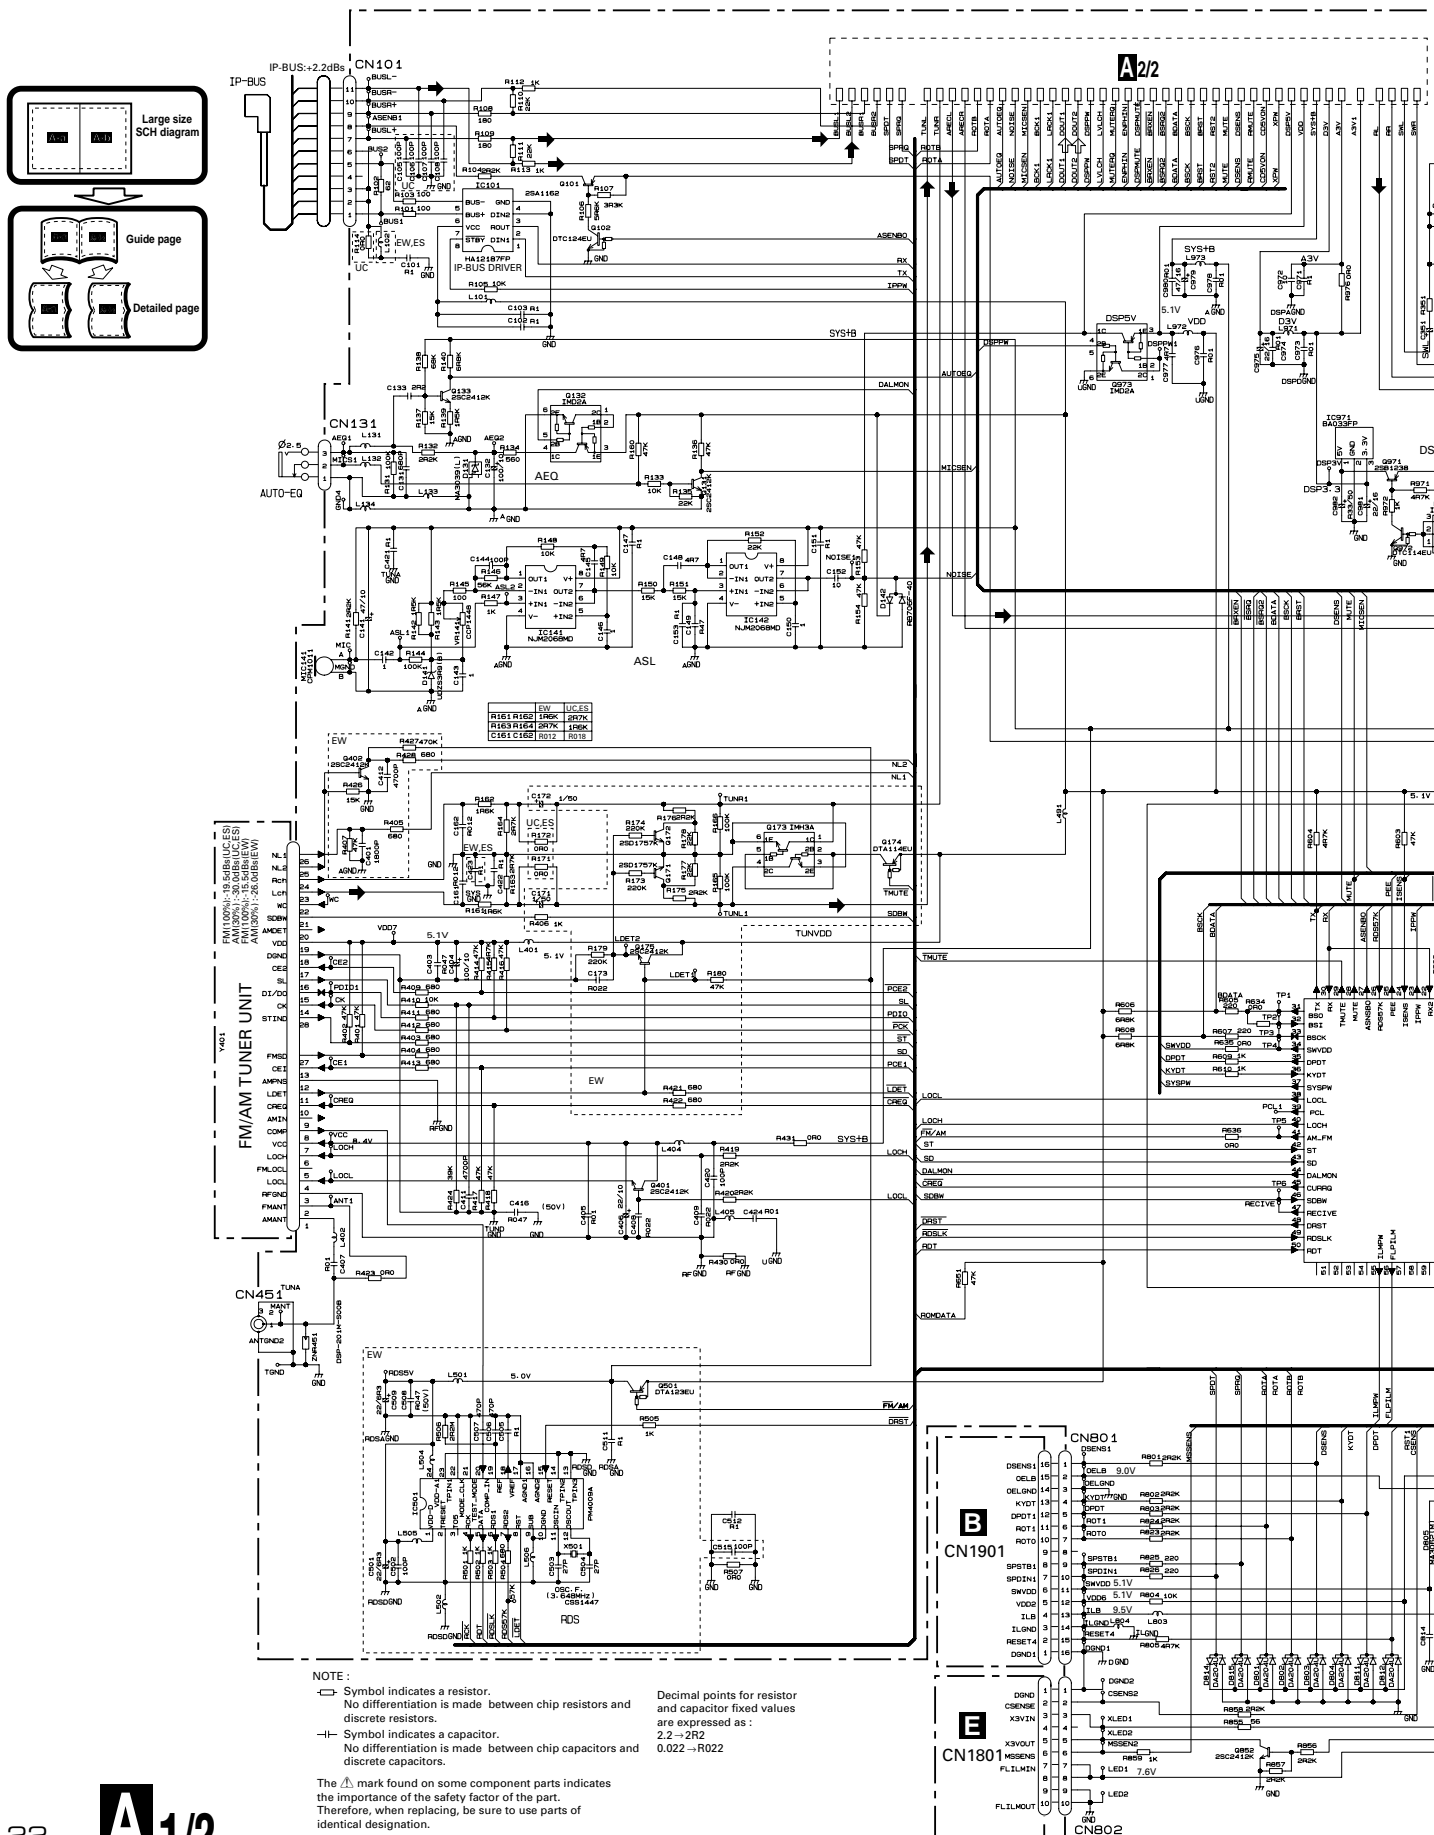

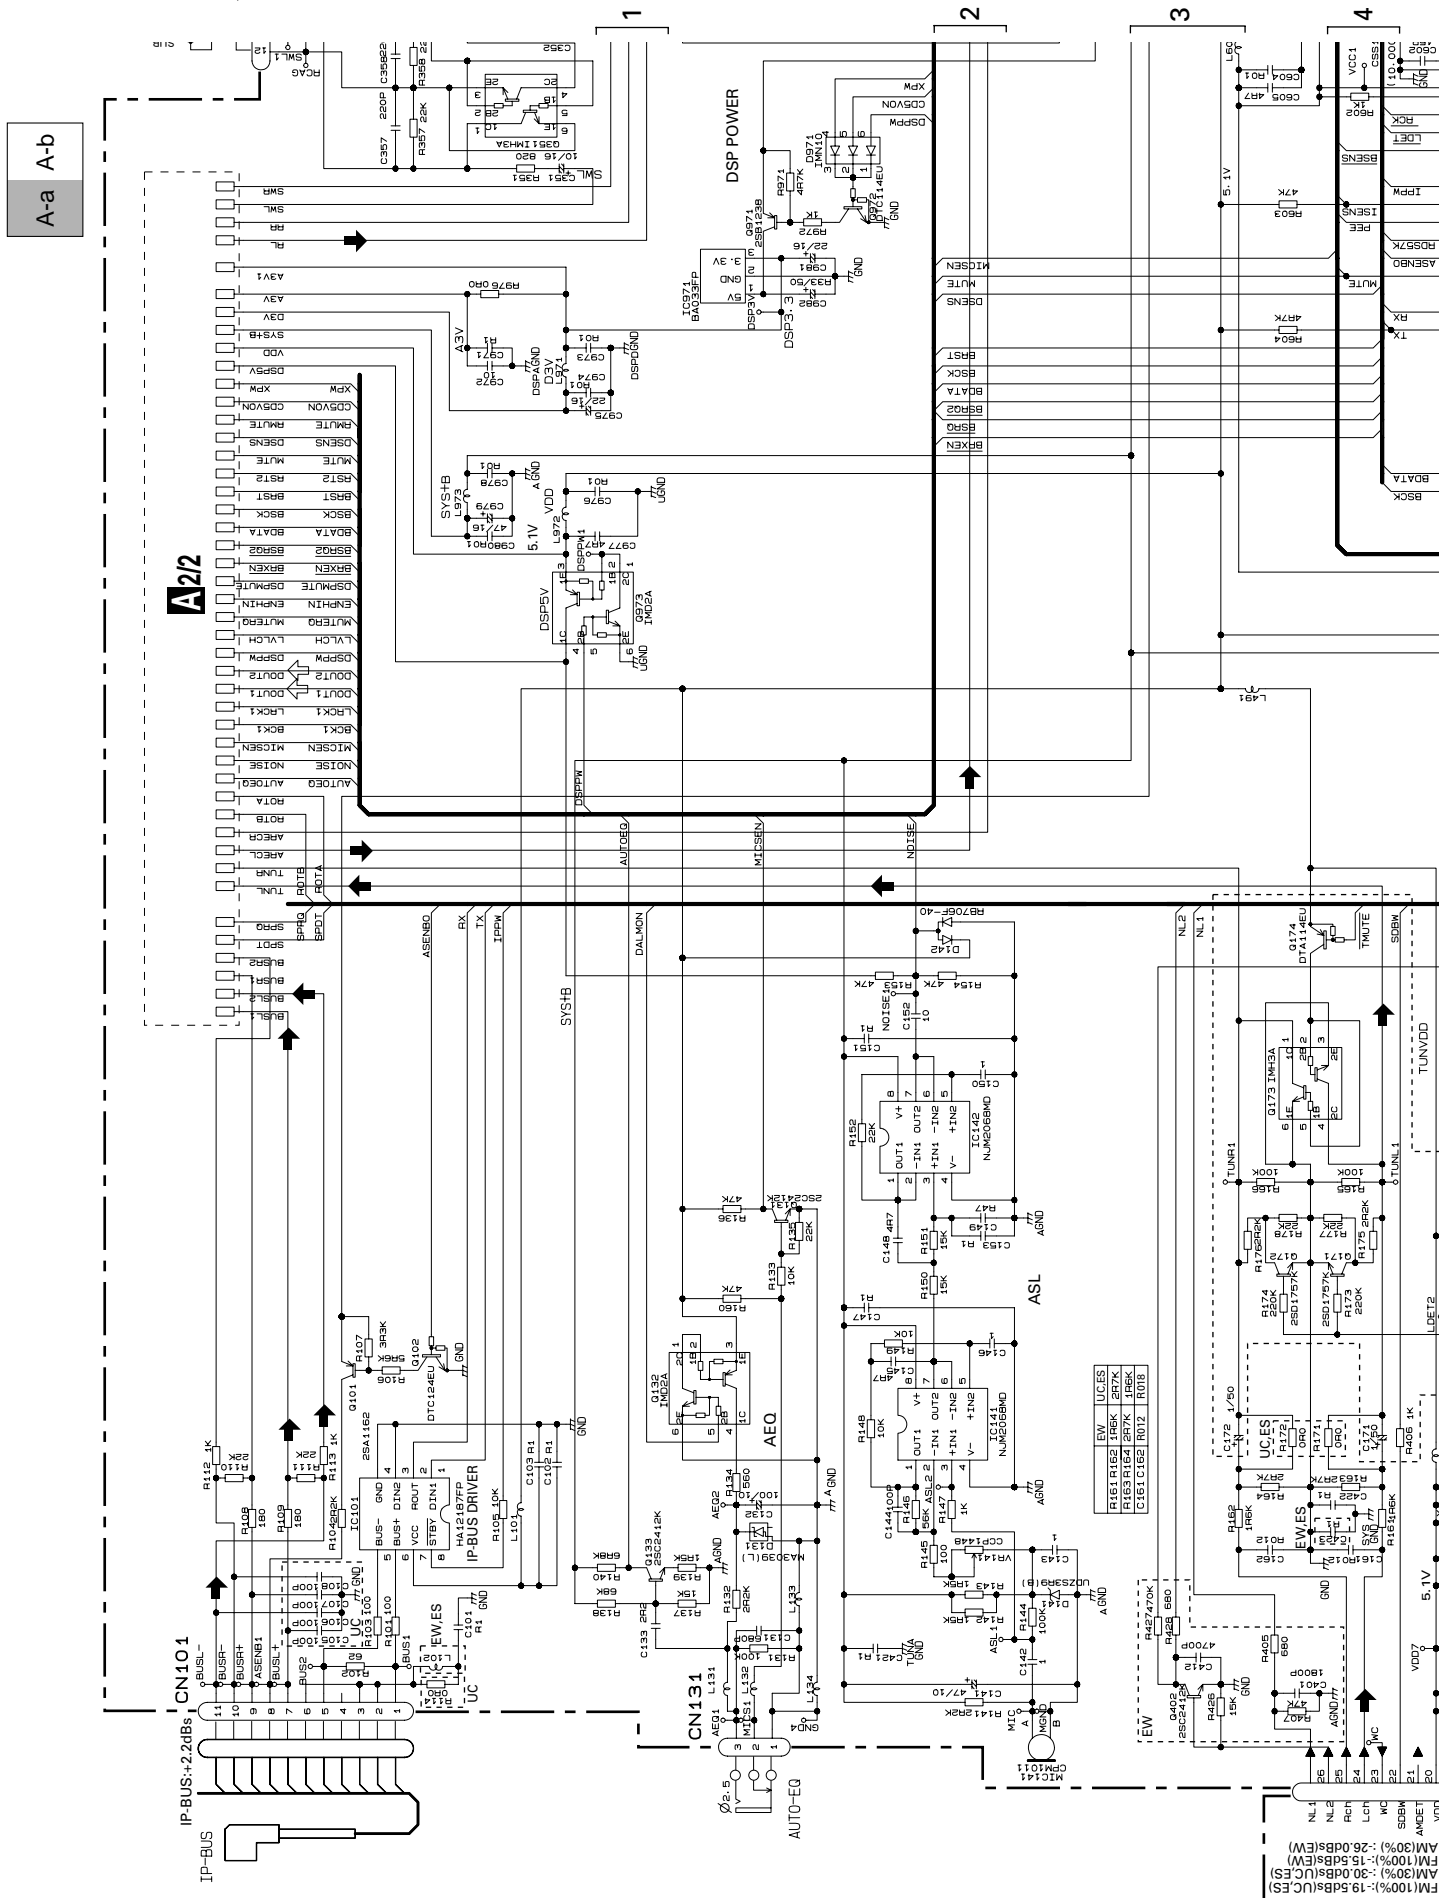

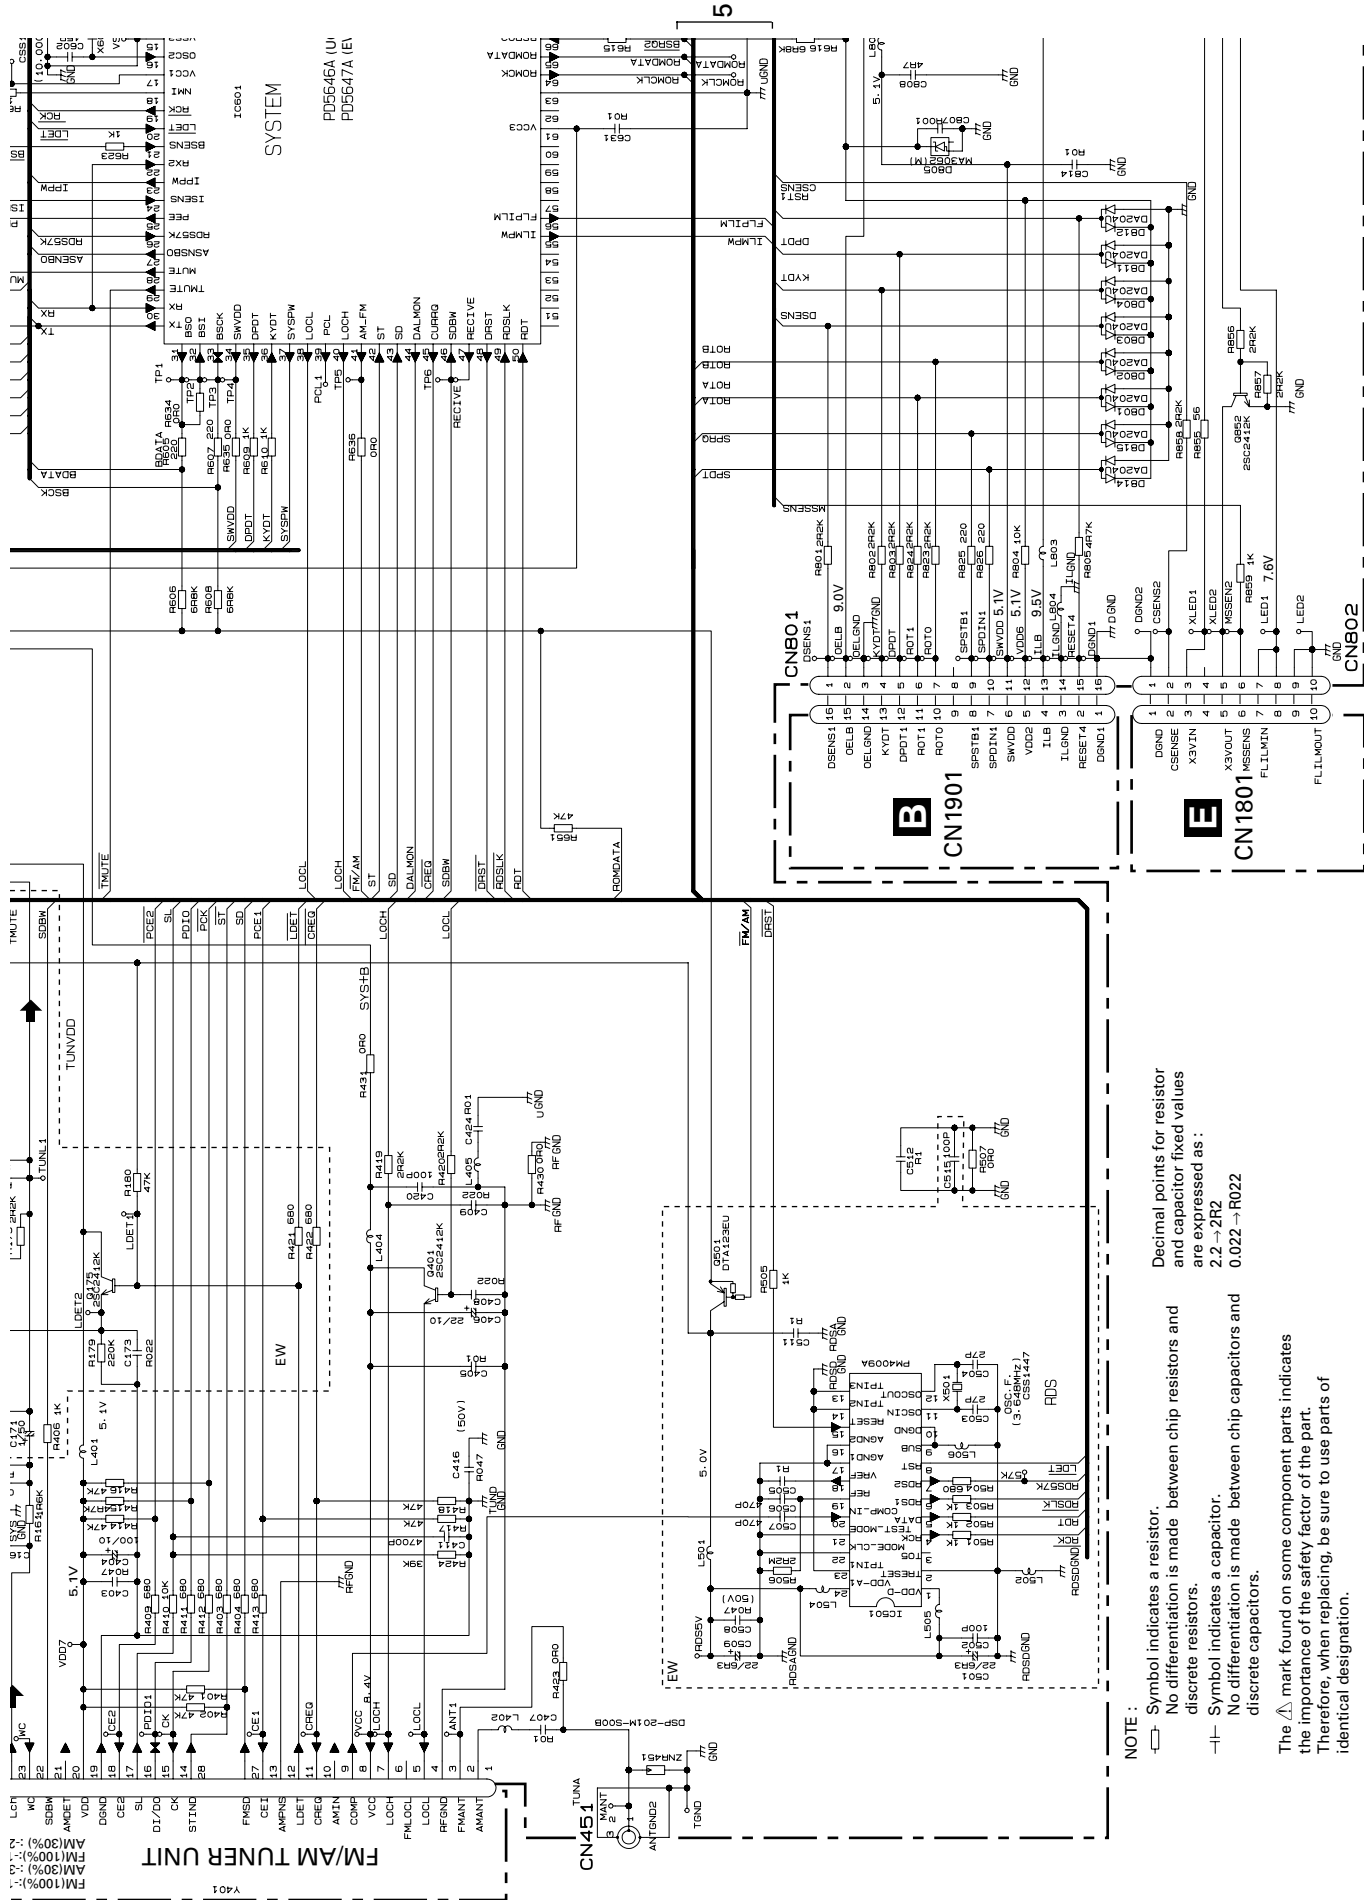

NOTE :

Symbol indicates a resistor.

Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.

Symbol indicates a capacitor.

No differentiation is made between chip capacitors and discrete capacitors.


The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Decimal points for resistor and capacitor fixed values are expressed as :

are expressed as $2.2 \rightarrow 2R2$


 $0.022 \rightarrow R022$


A-a 1/2



D

3.3 TUNER AMP UNIT 2/2 (DSP)(GUIDE PAGE)

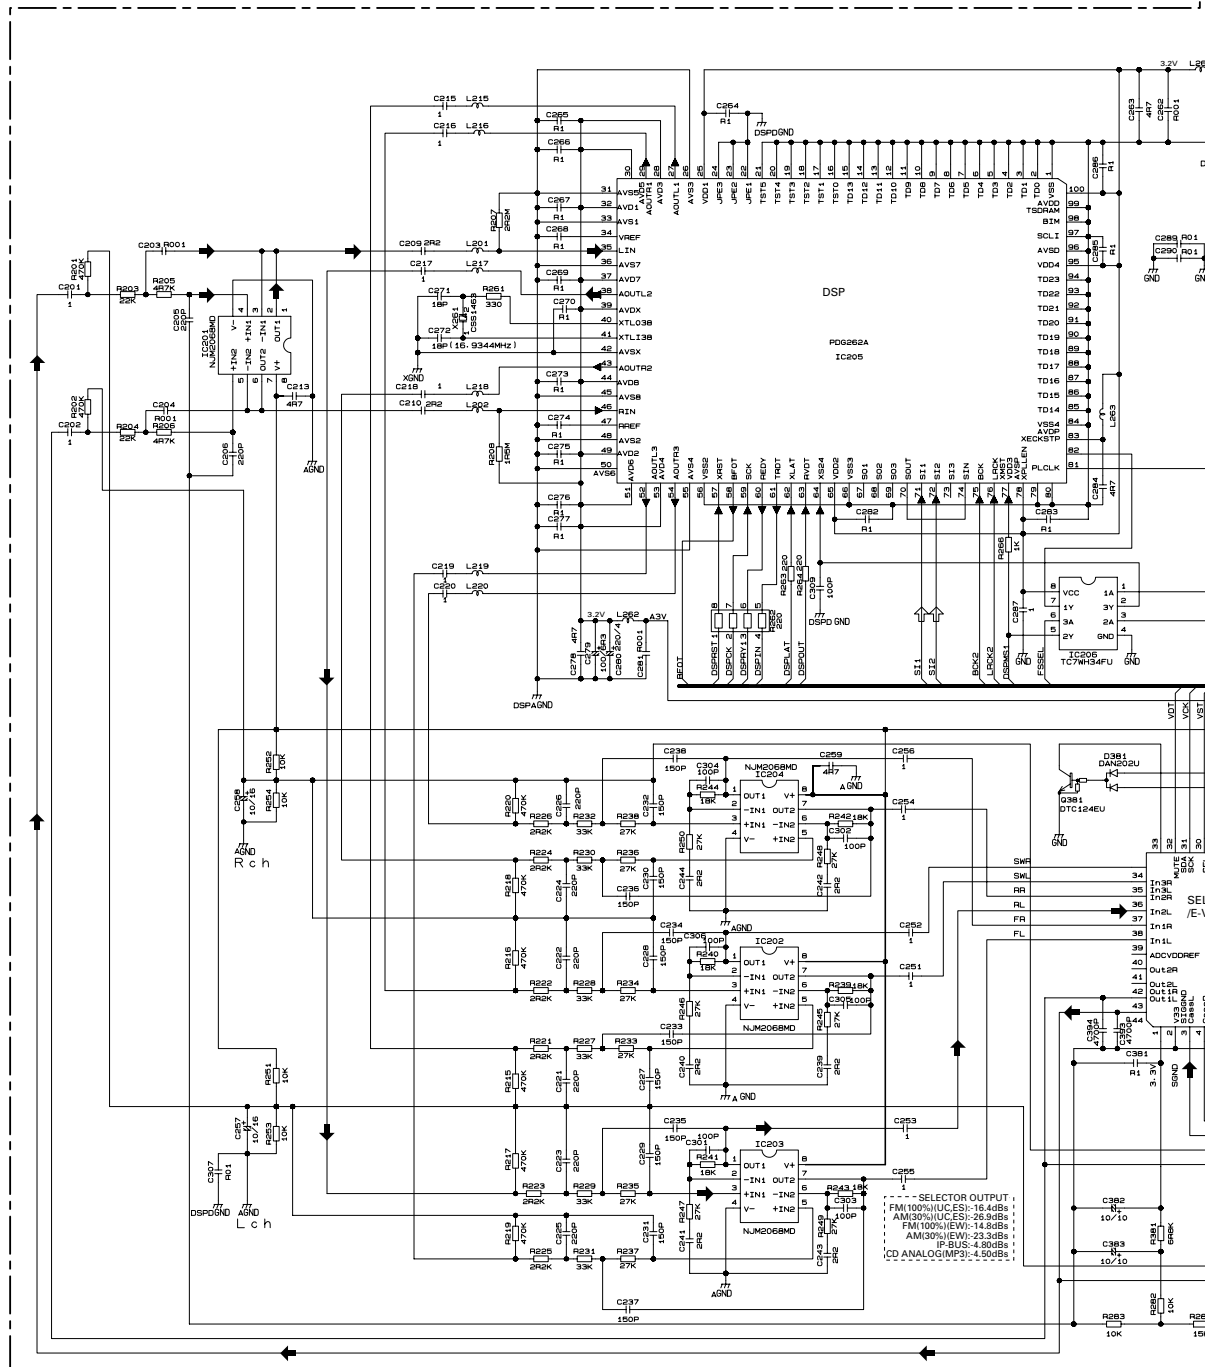



A


A-a A-b


B

C

D

A2/2 TUNER AMP UNIT (DSP)

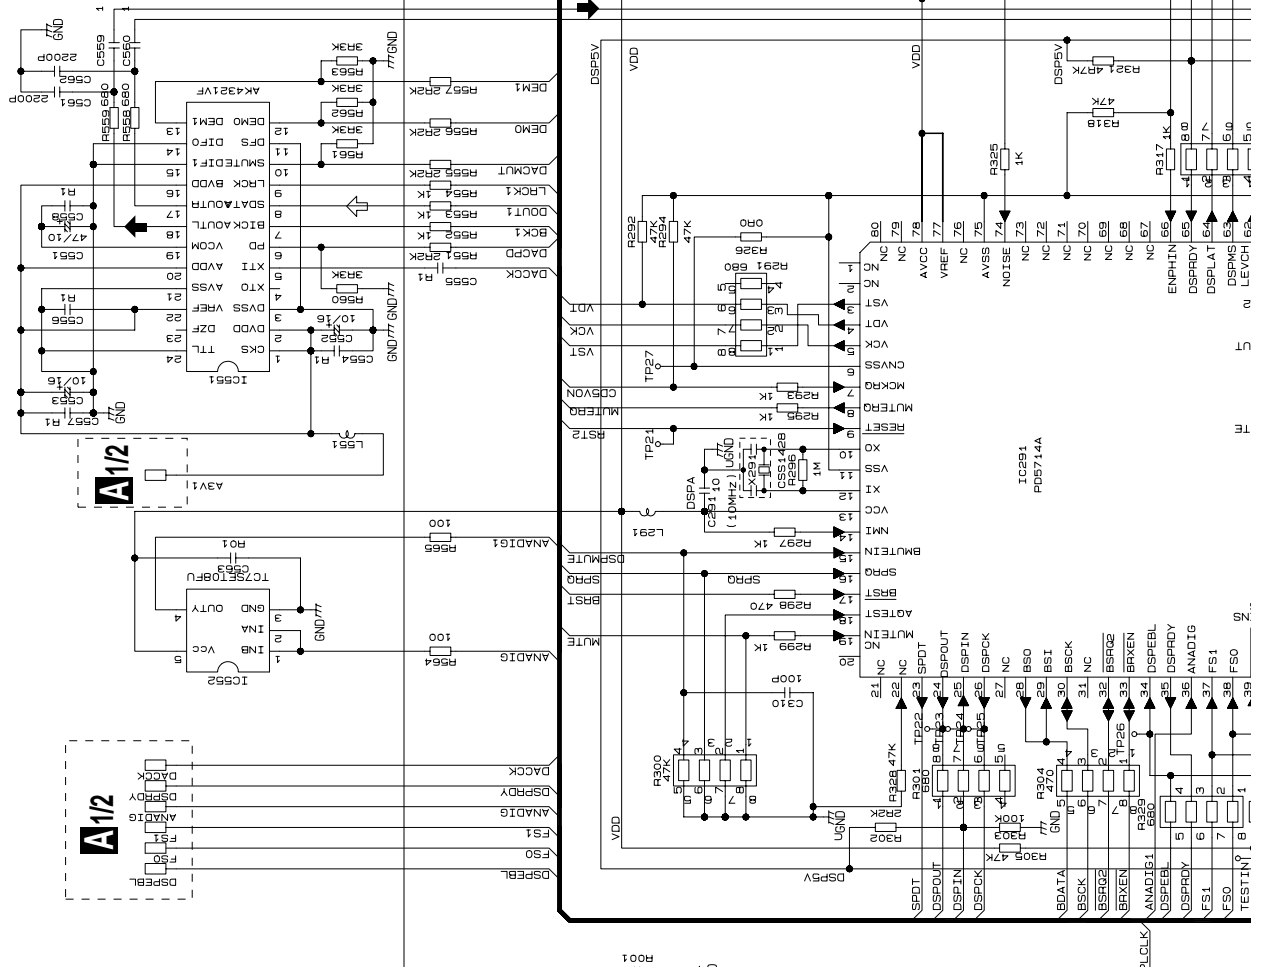


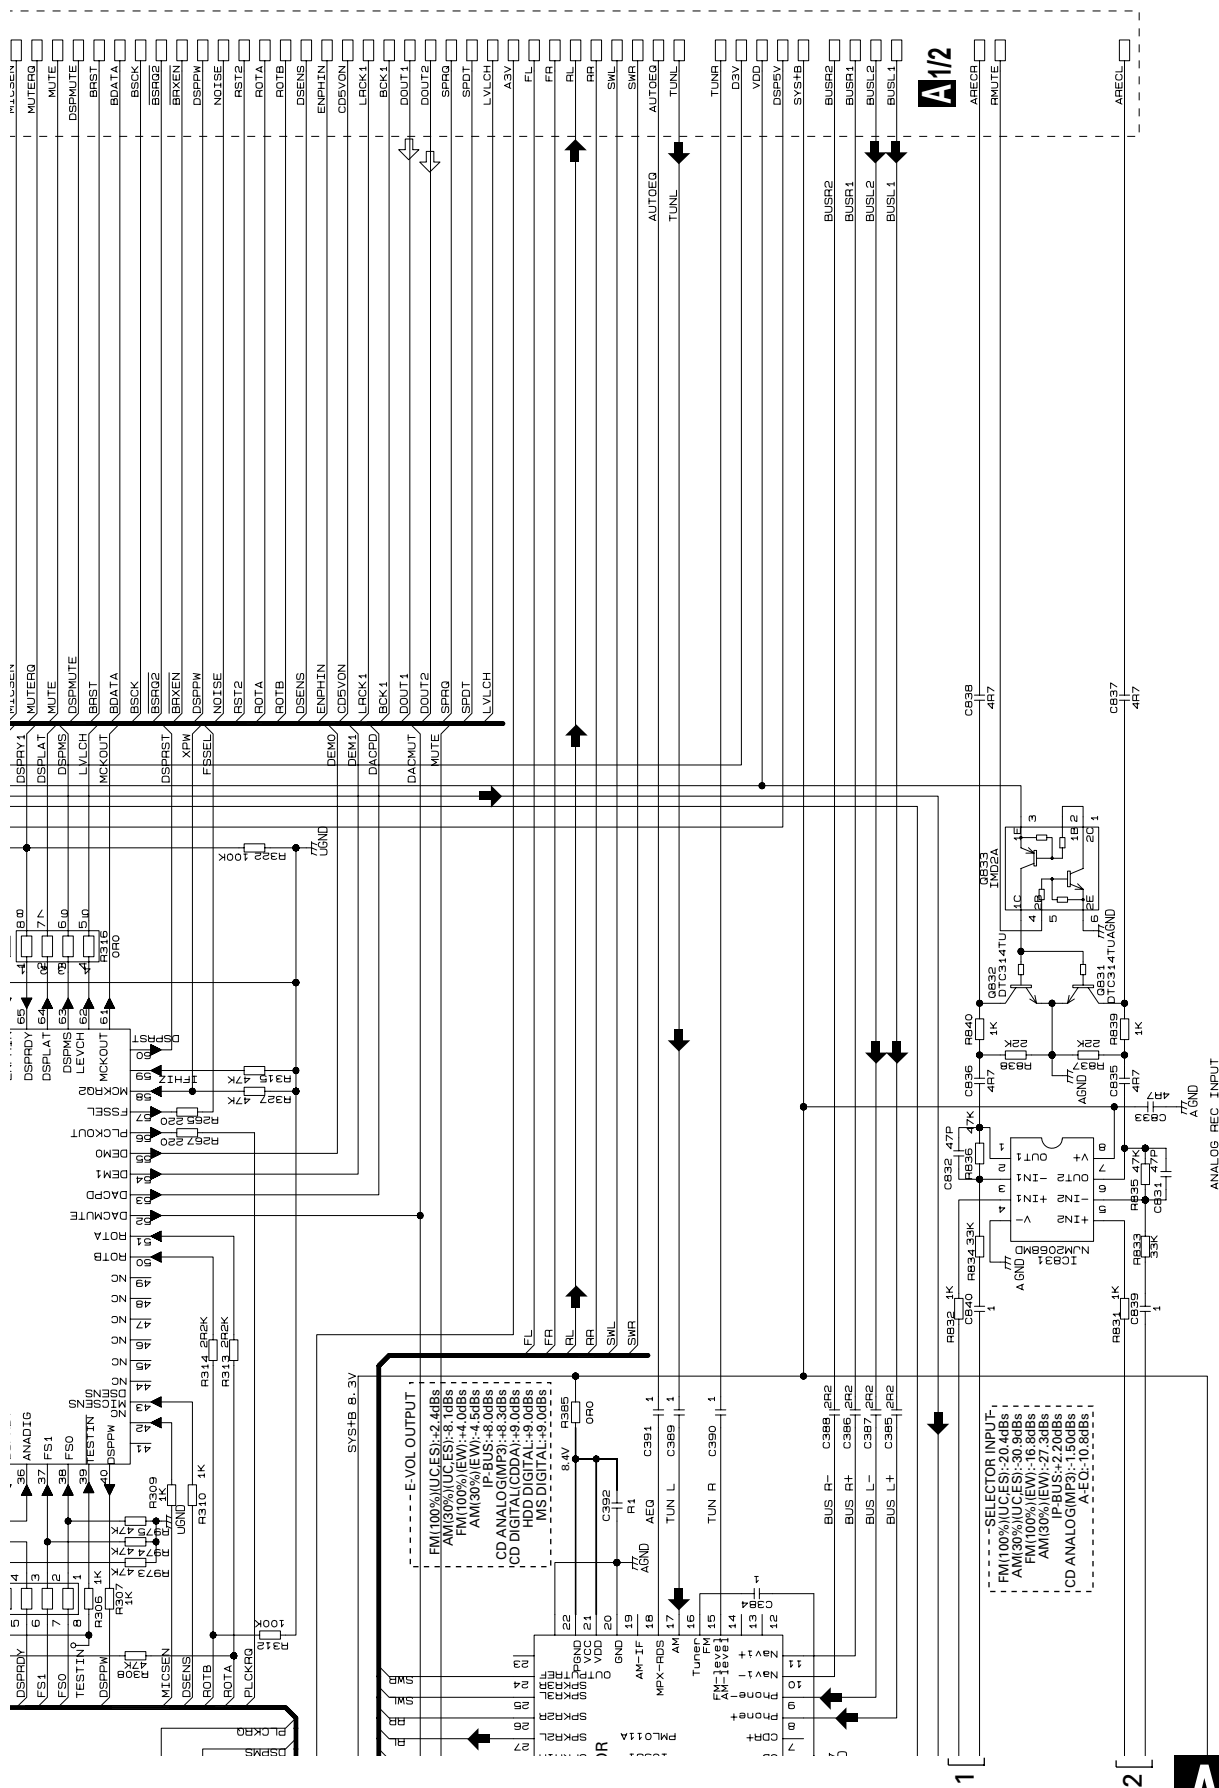

A-a A-b

A-b 2/2

B KEYBOARD UNIT

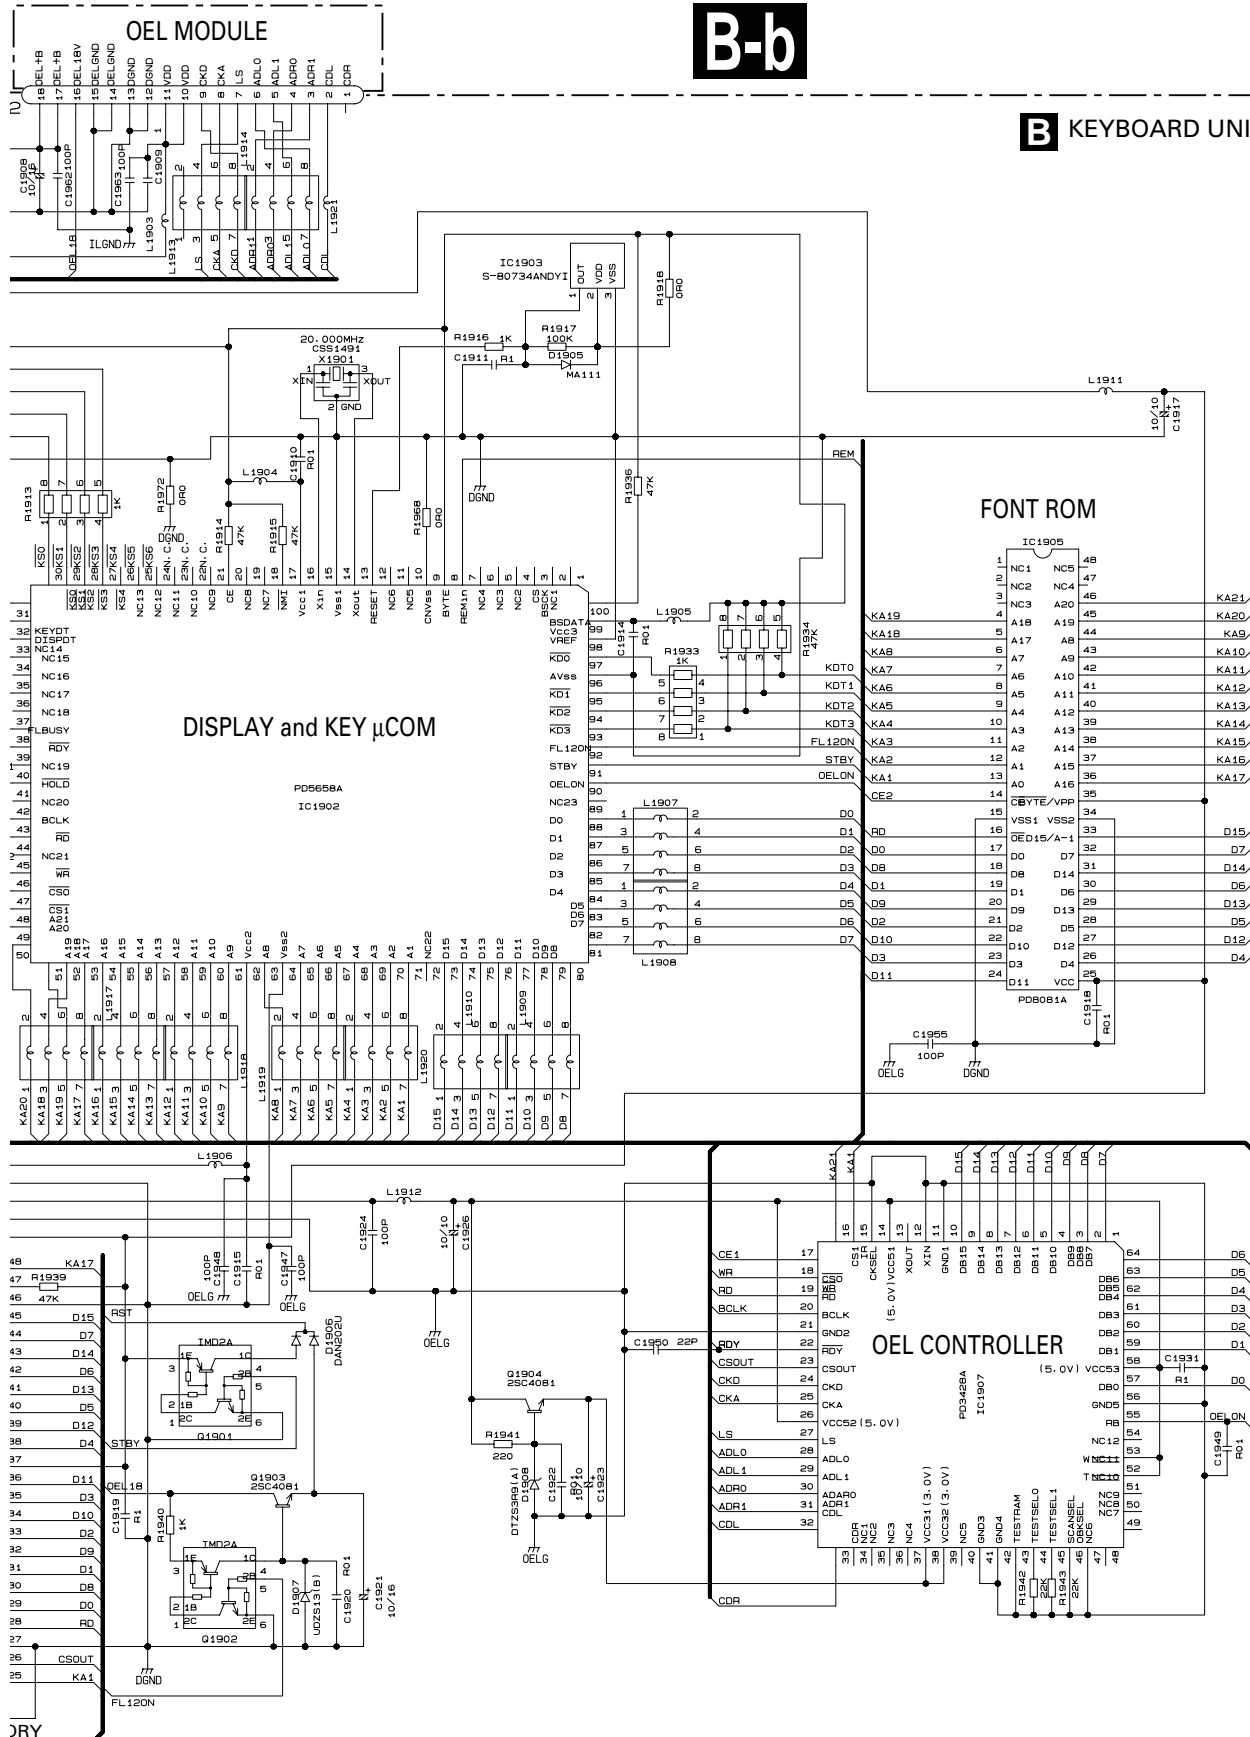**B**

B-a B-b


OEL MODULE

B-b

CN1902

B KEYBOARD UNIT

B

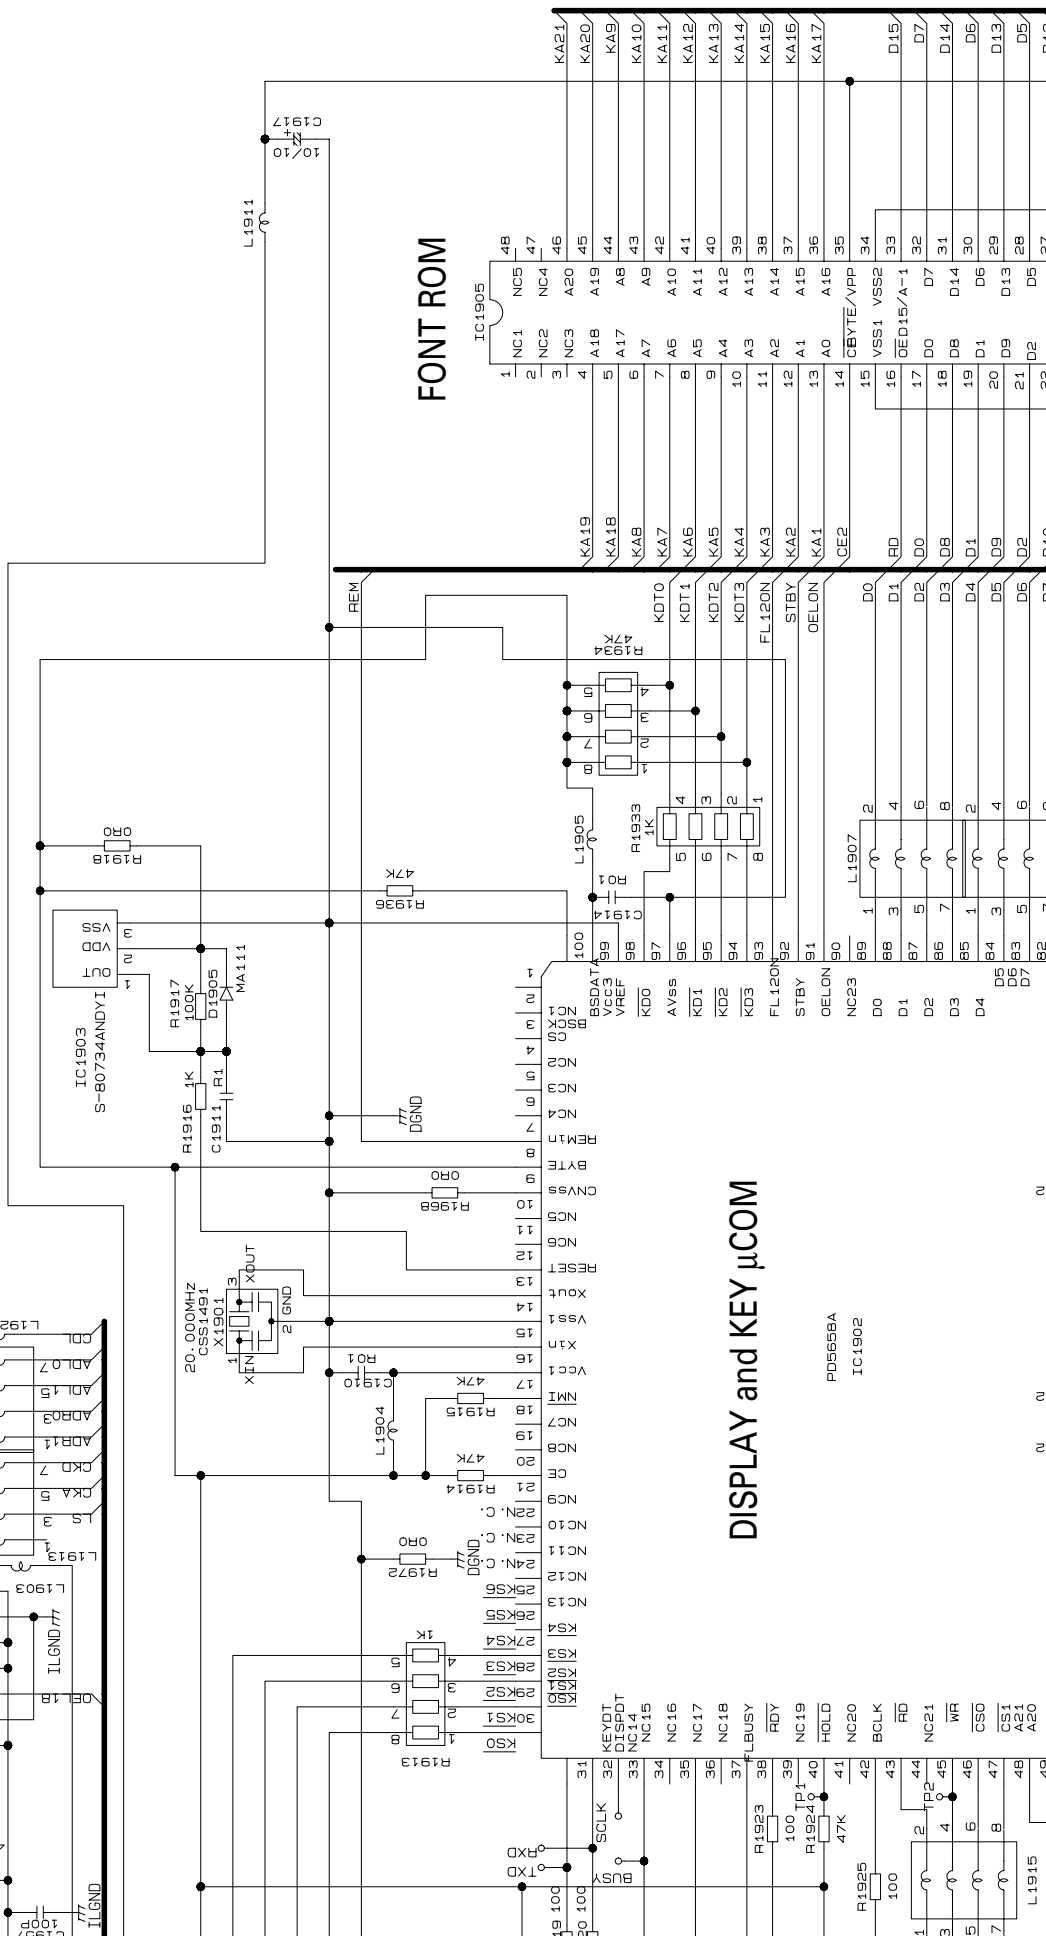


FONT ROM


DISPLAY and KEY μCOM


PD5658A
IC1902

3.5 POWER SUPPLY UNIT

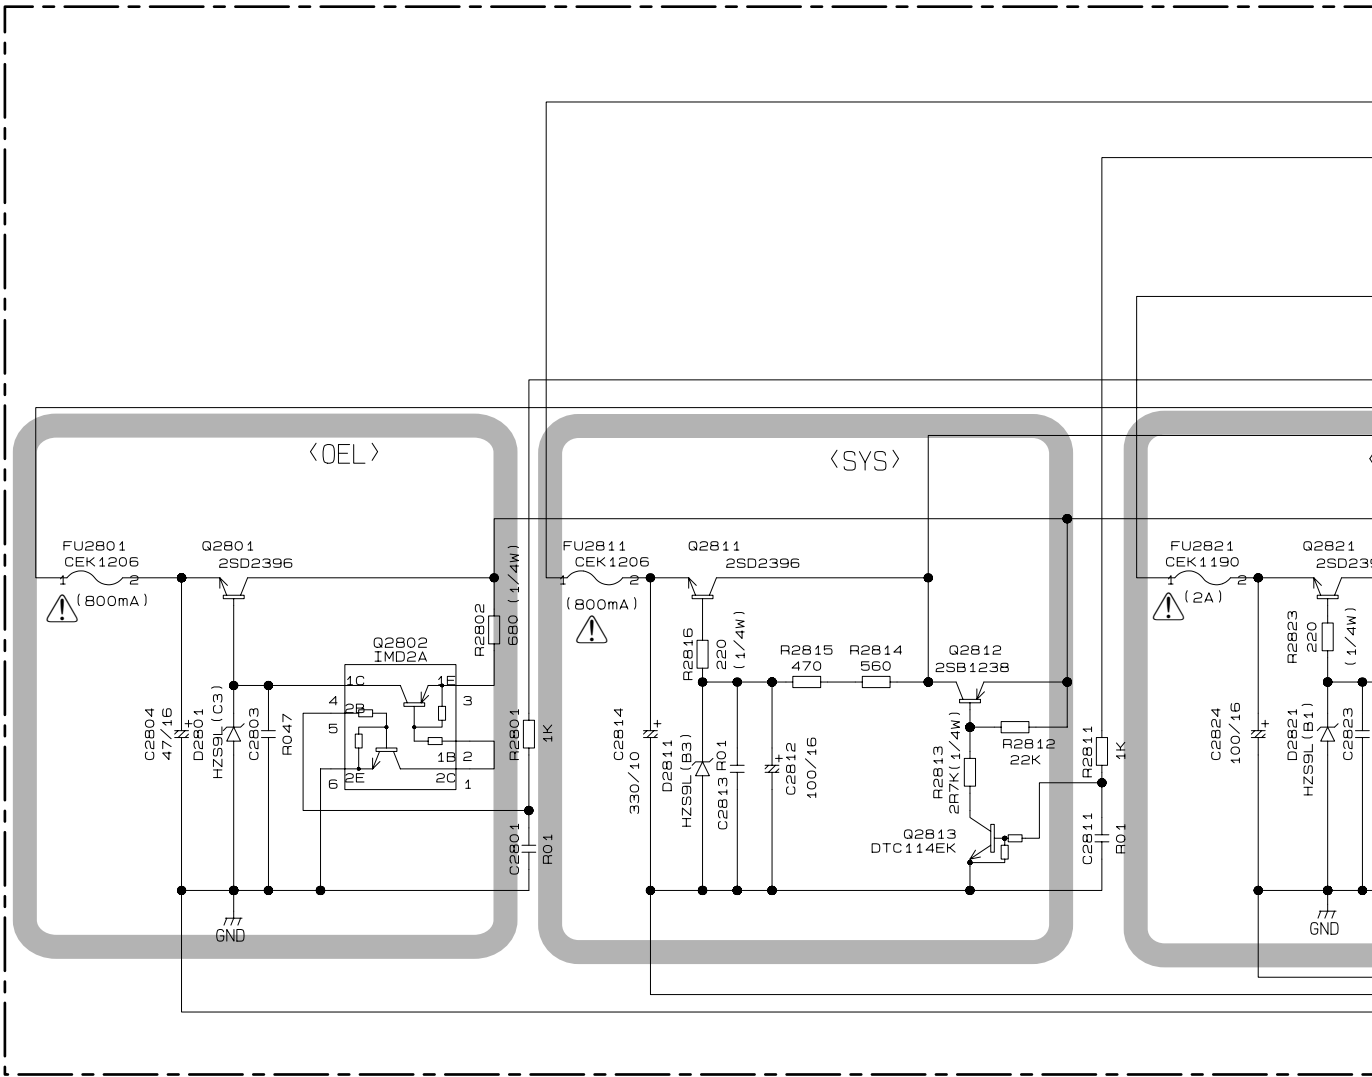


C POWER SUPPLY UNIT

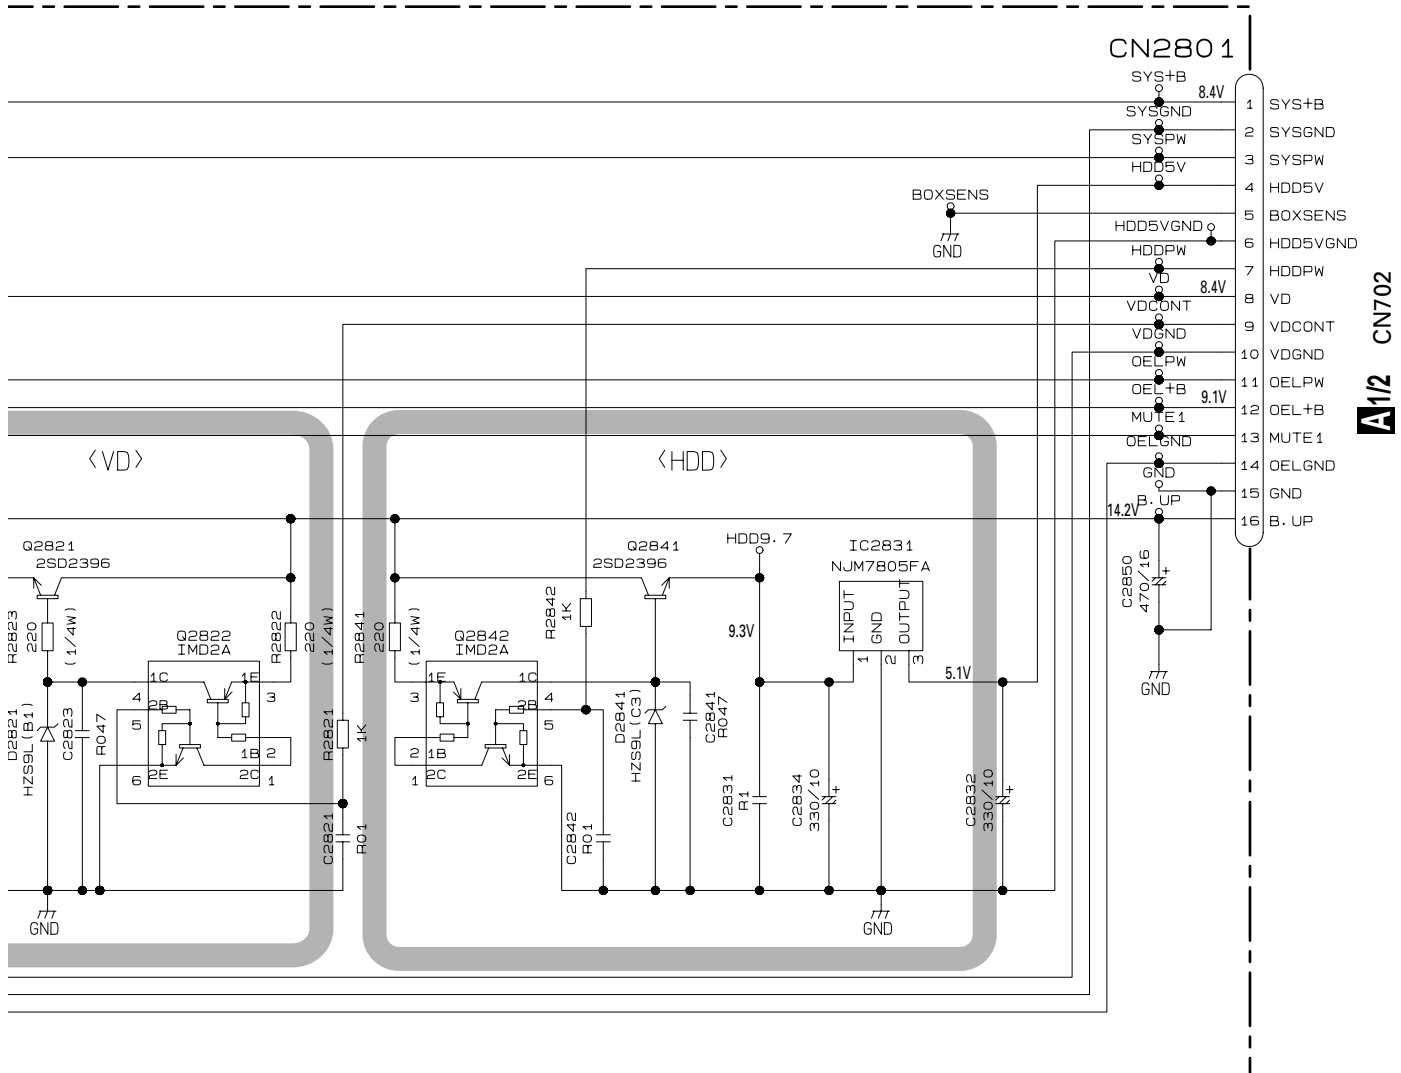


 : The power supply is shown with the marked box.

3.6 DIGITAL UNIT(GUIDE PAGE)


D-a

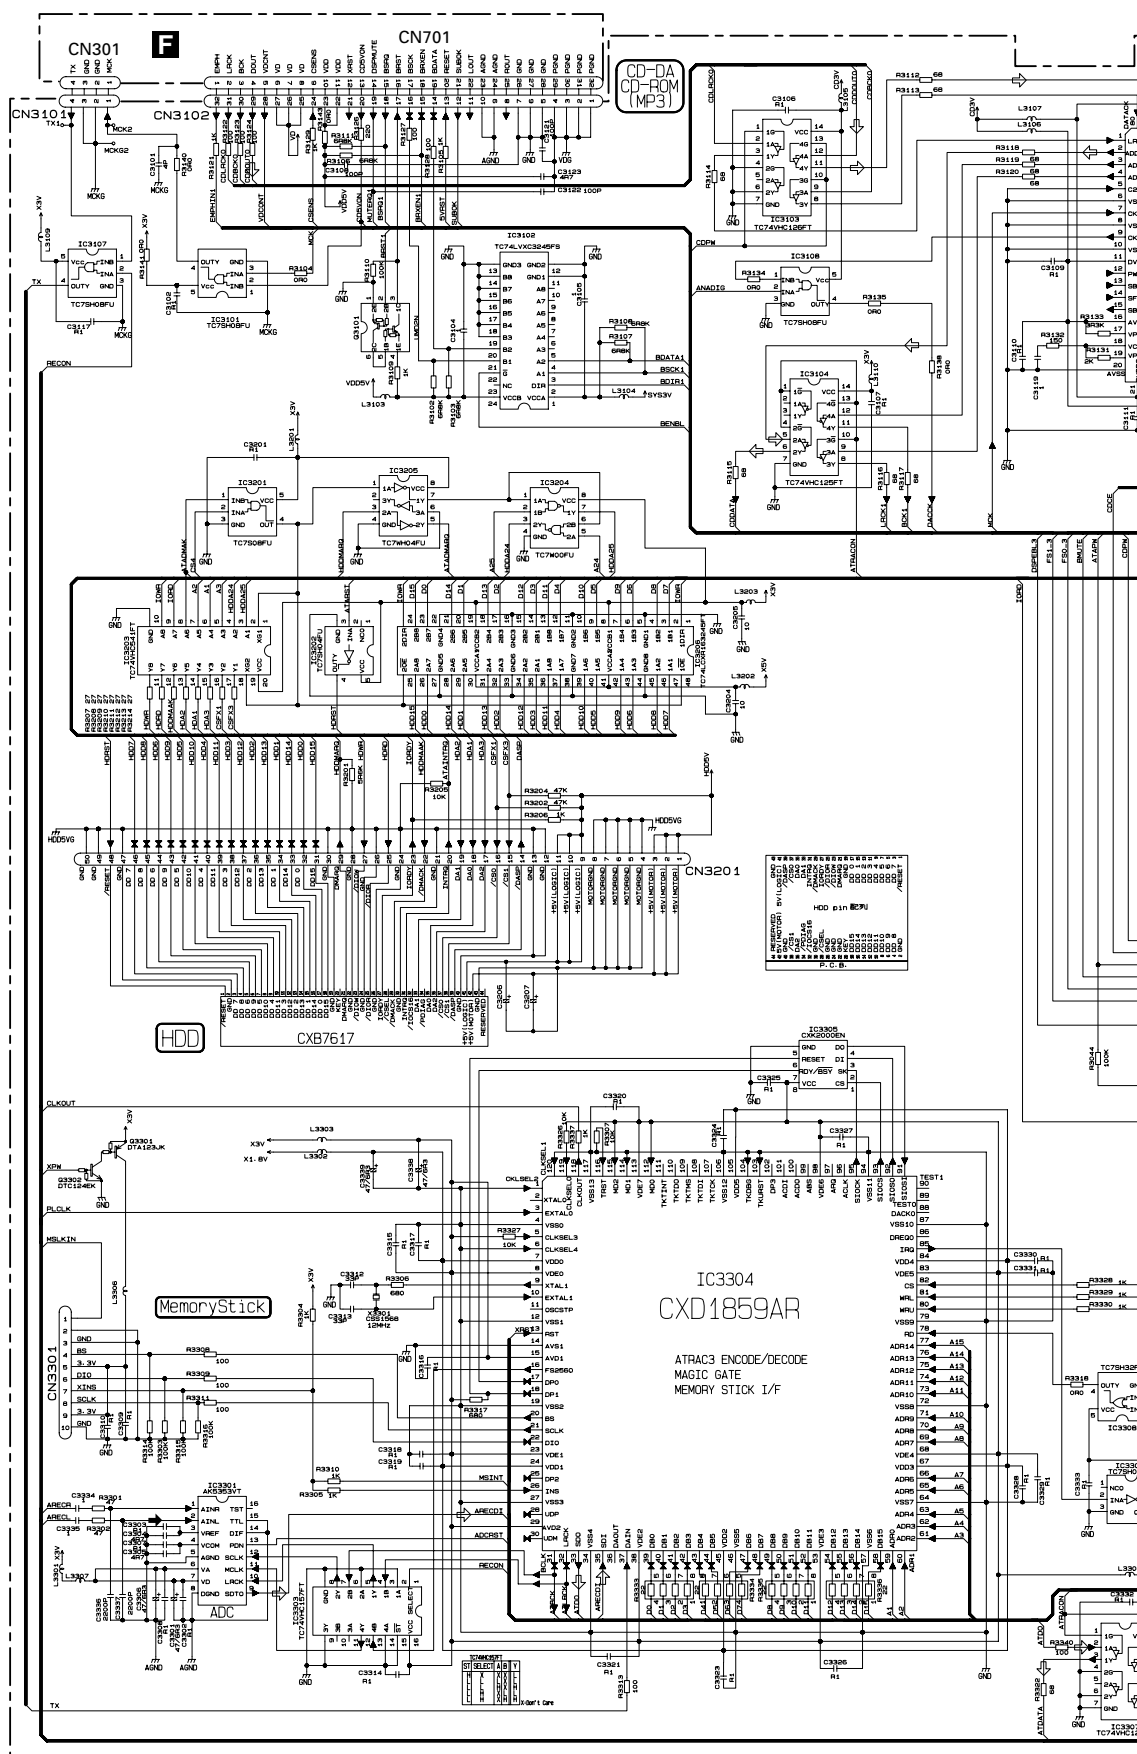

D-a D-b

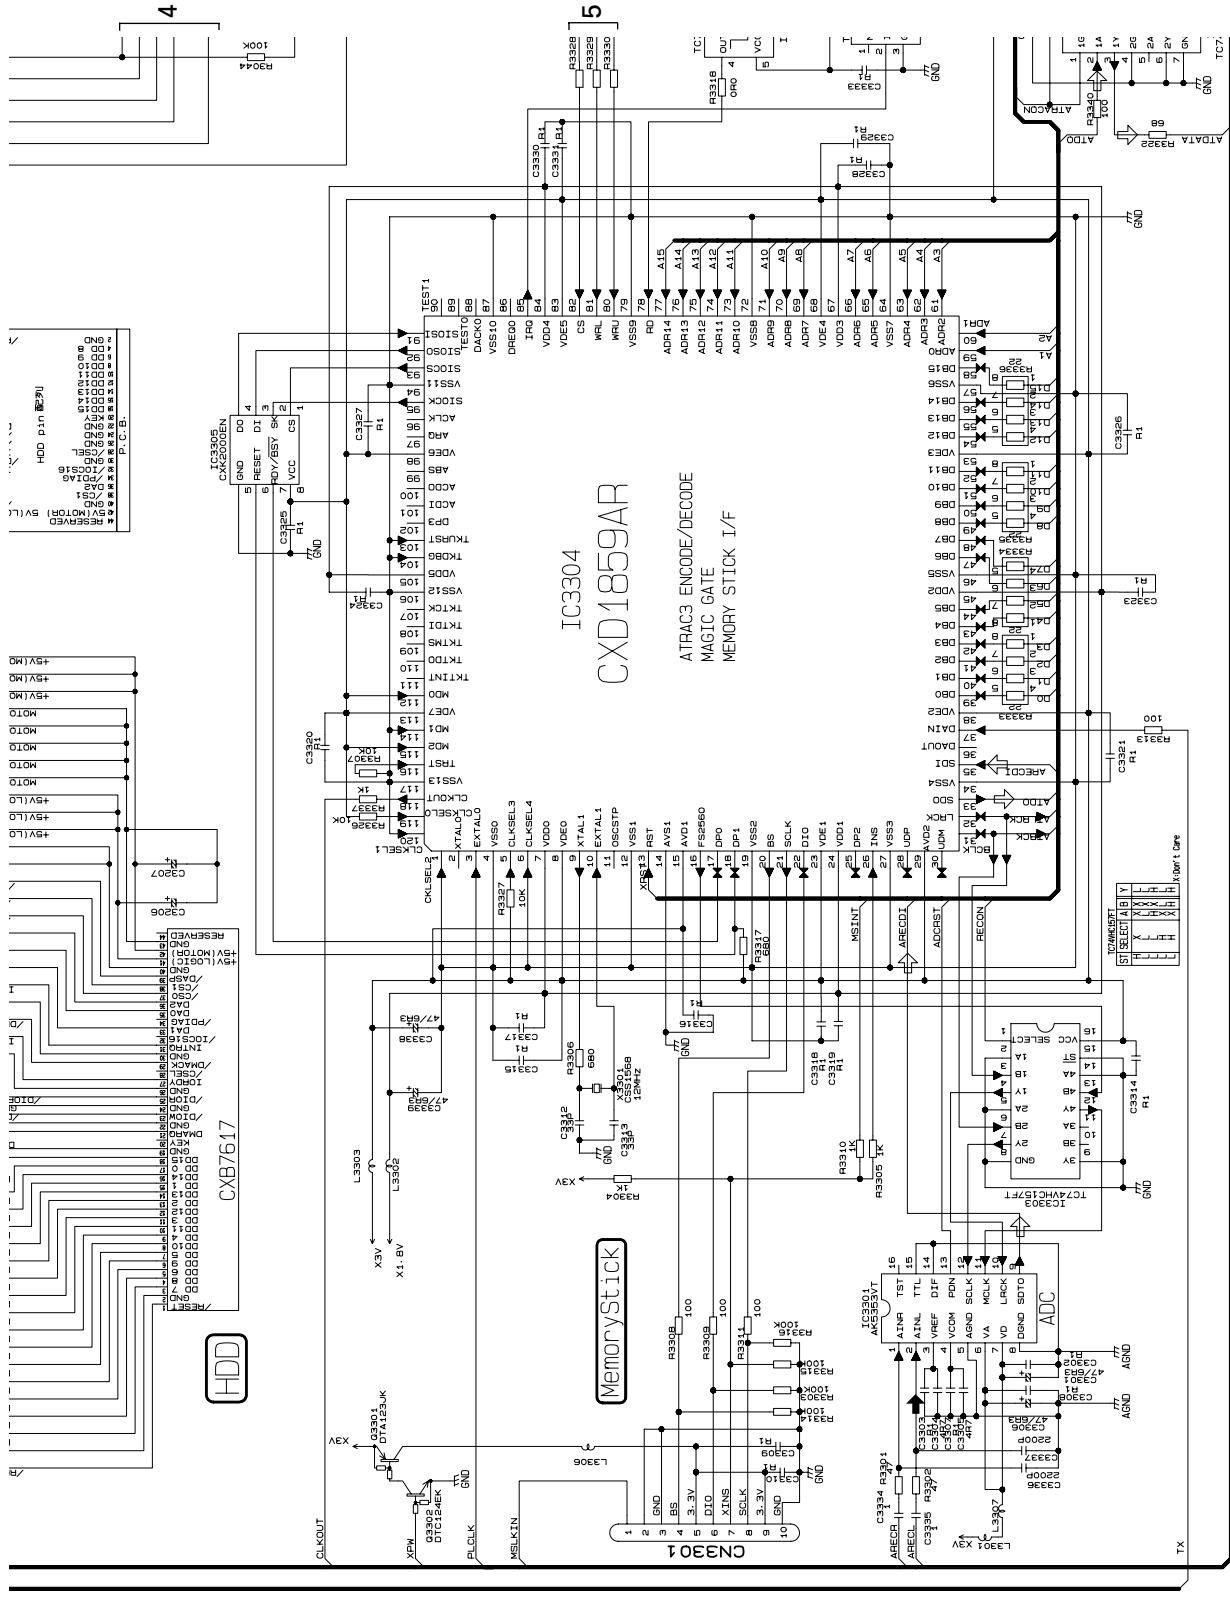


D-a

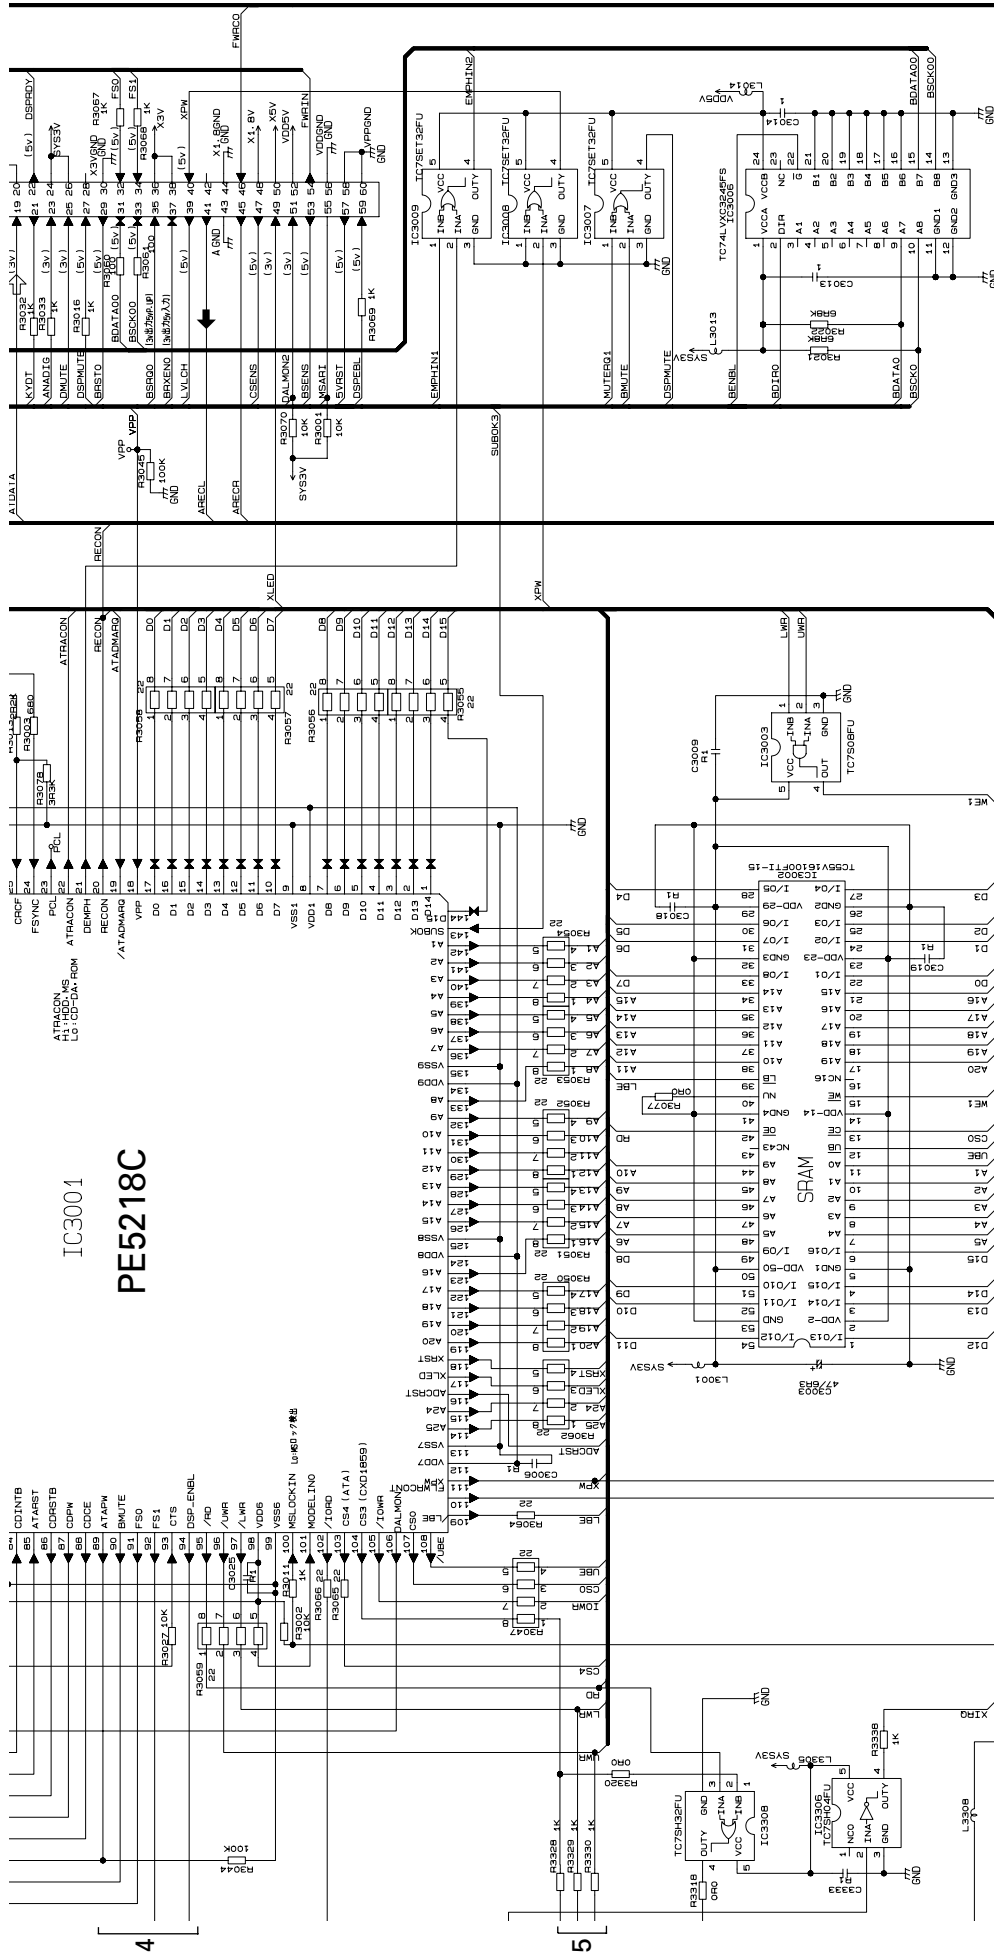

D-a

D-b

3.7 PANEL UNIT

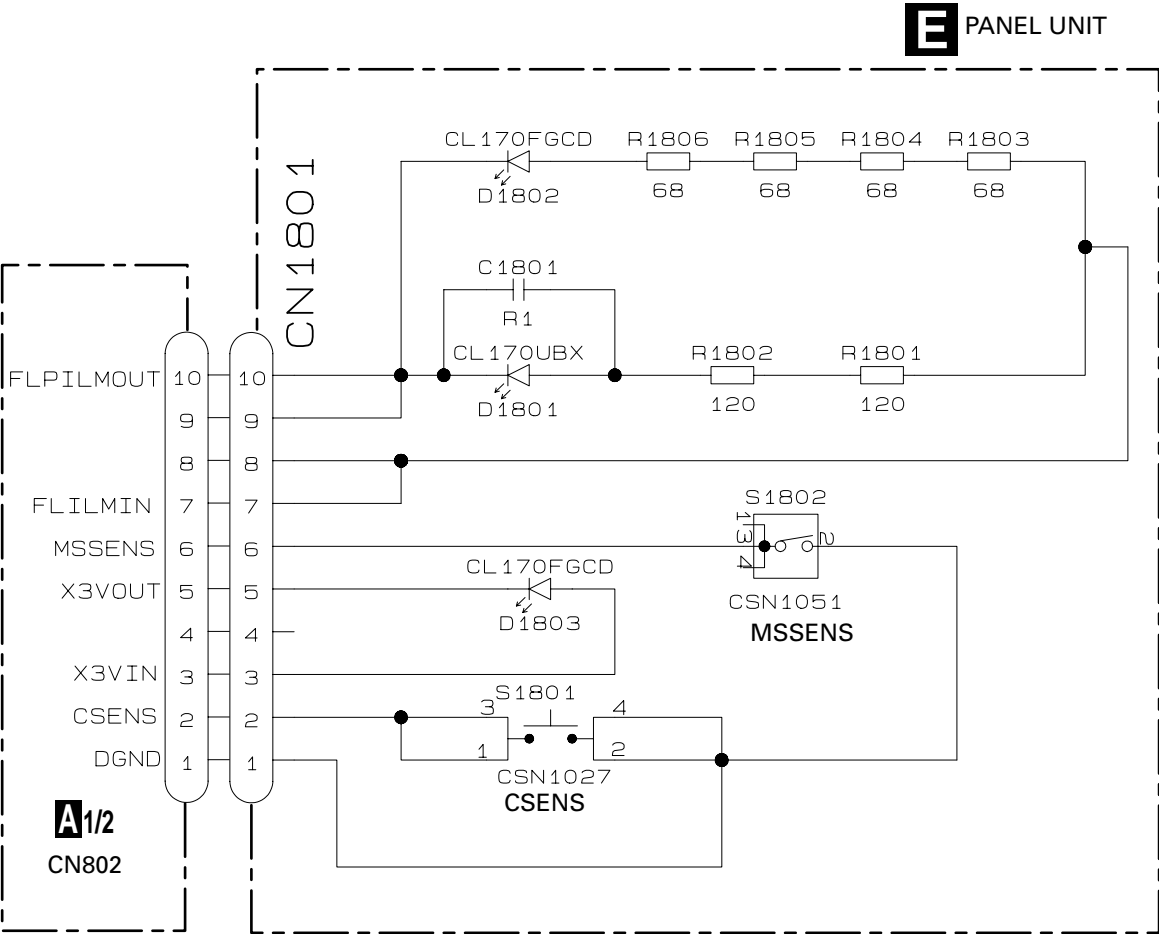


DEH-P90HDD,P900HDD

3.8 CD MECHANISM MODULE


CD CORE UNIT

A

PICKUP UNIT(SERVICE)(P8)

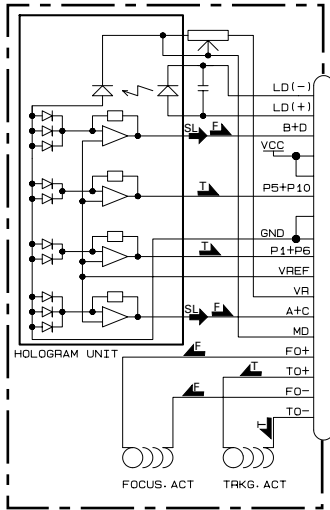

B

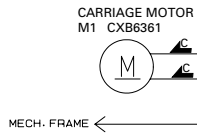


C

SWITCHES:
CD CORE UNIT
S901 :LOAD.EJ SWITCH ON-OFF
S902, 903 :LOAD.EJ SWITCH ON-OFF
S904 :HOME SWITCH ON-OFF
The underlined indicates the switch position.


LOADING MOTOR
M2 CXB6340




SPDL. PCB

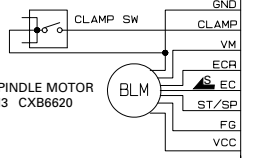


D

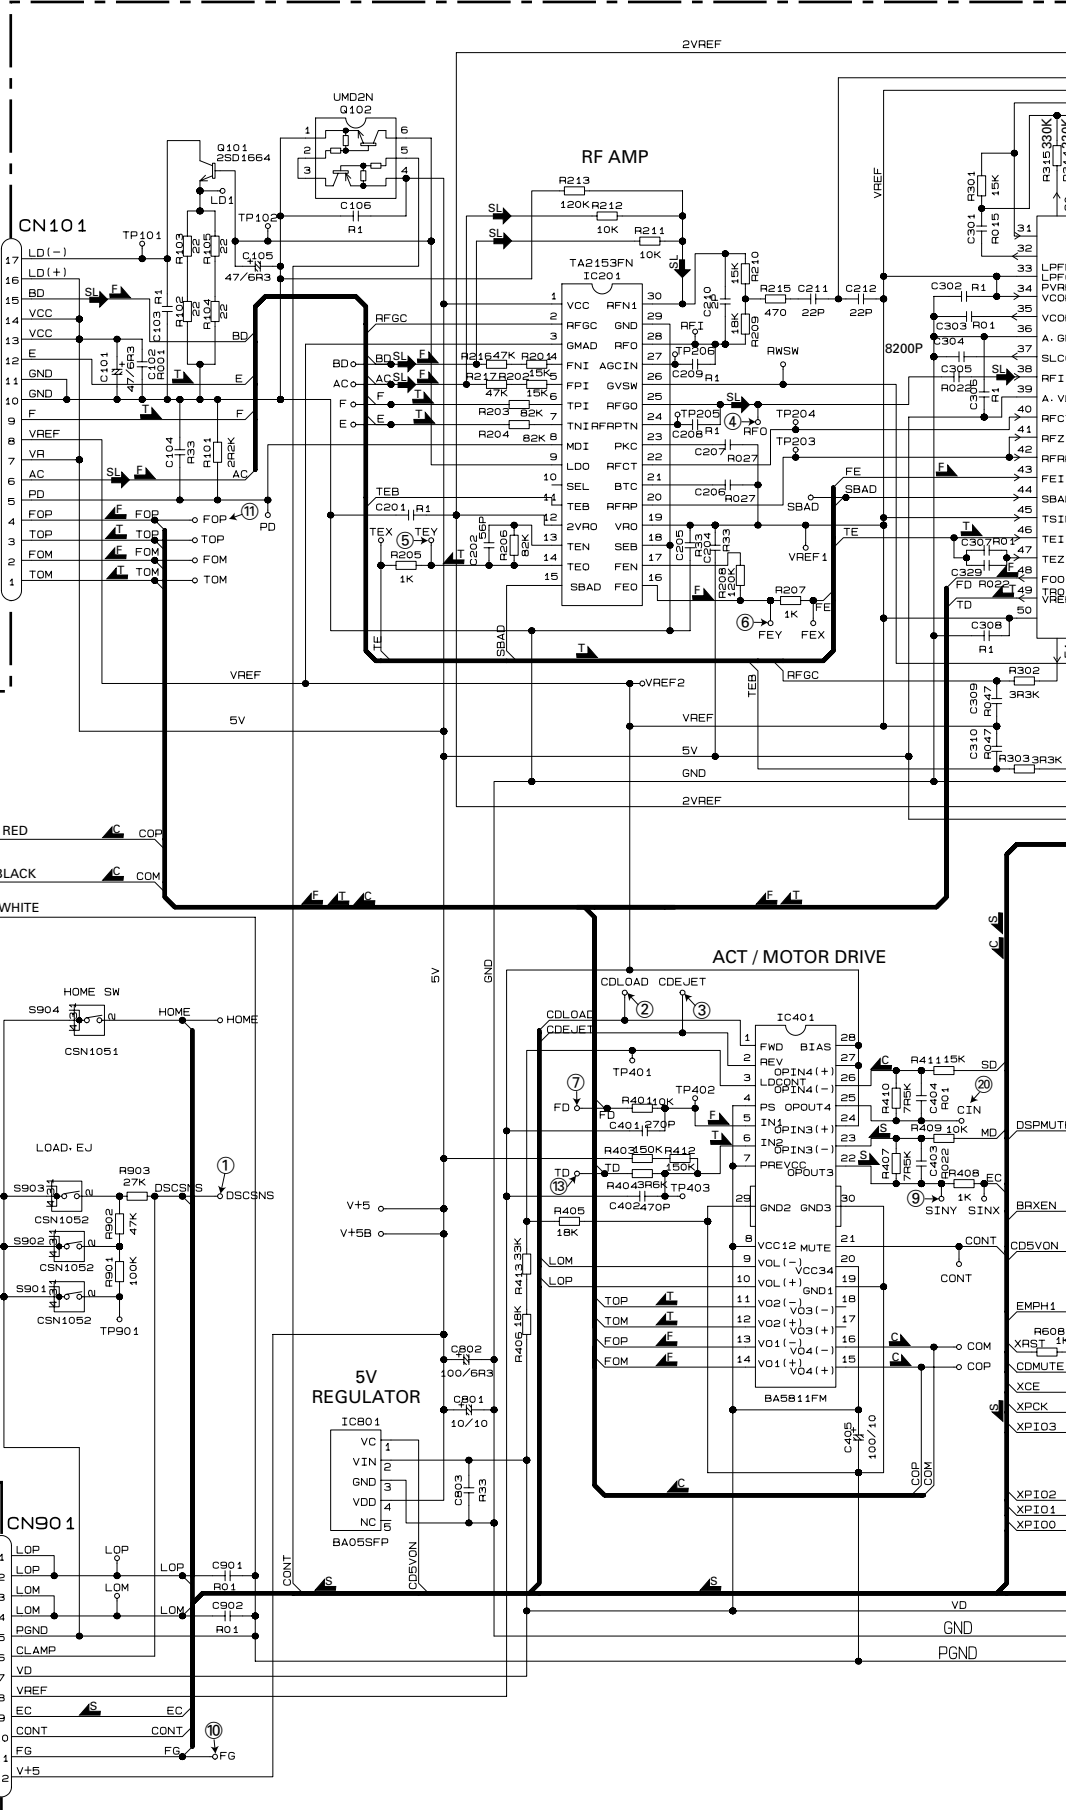


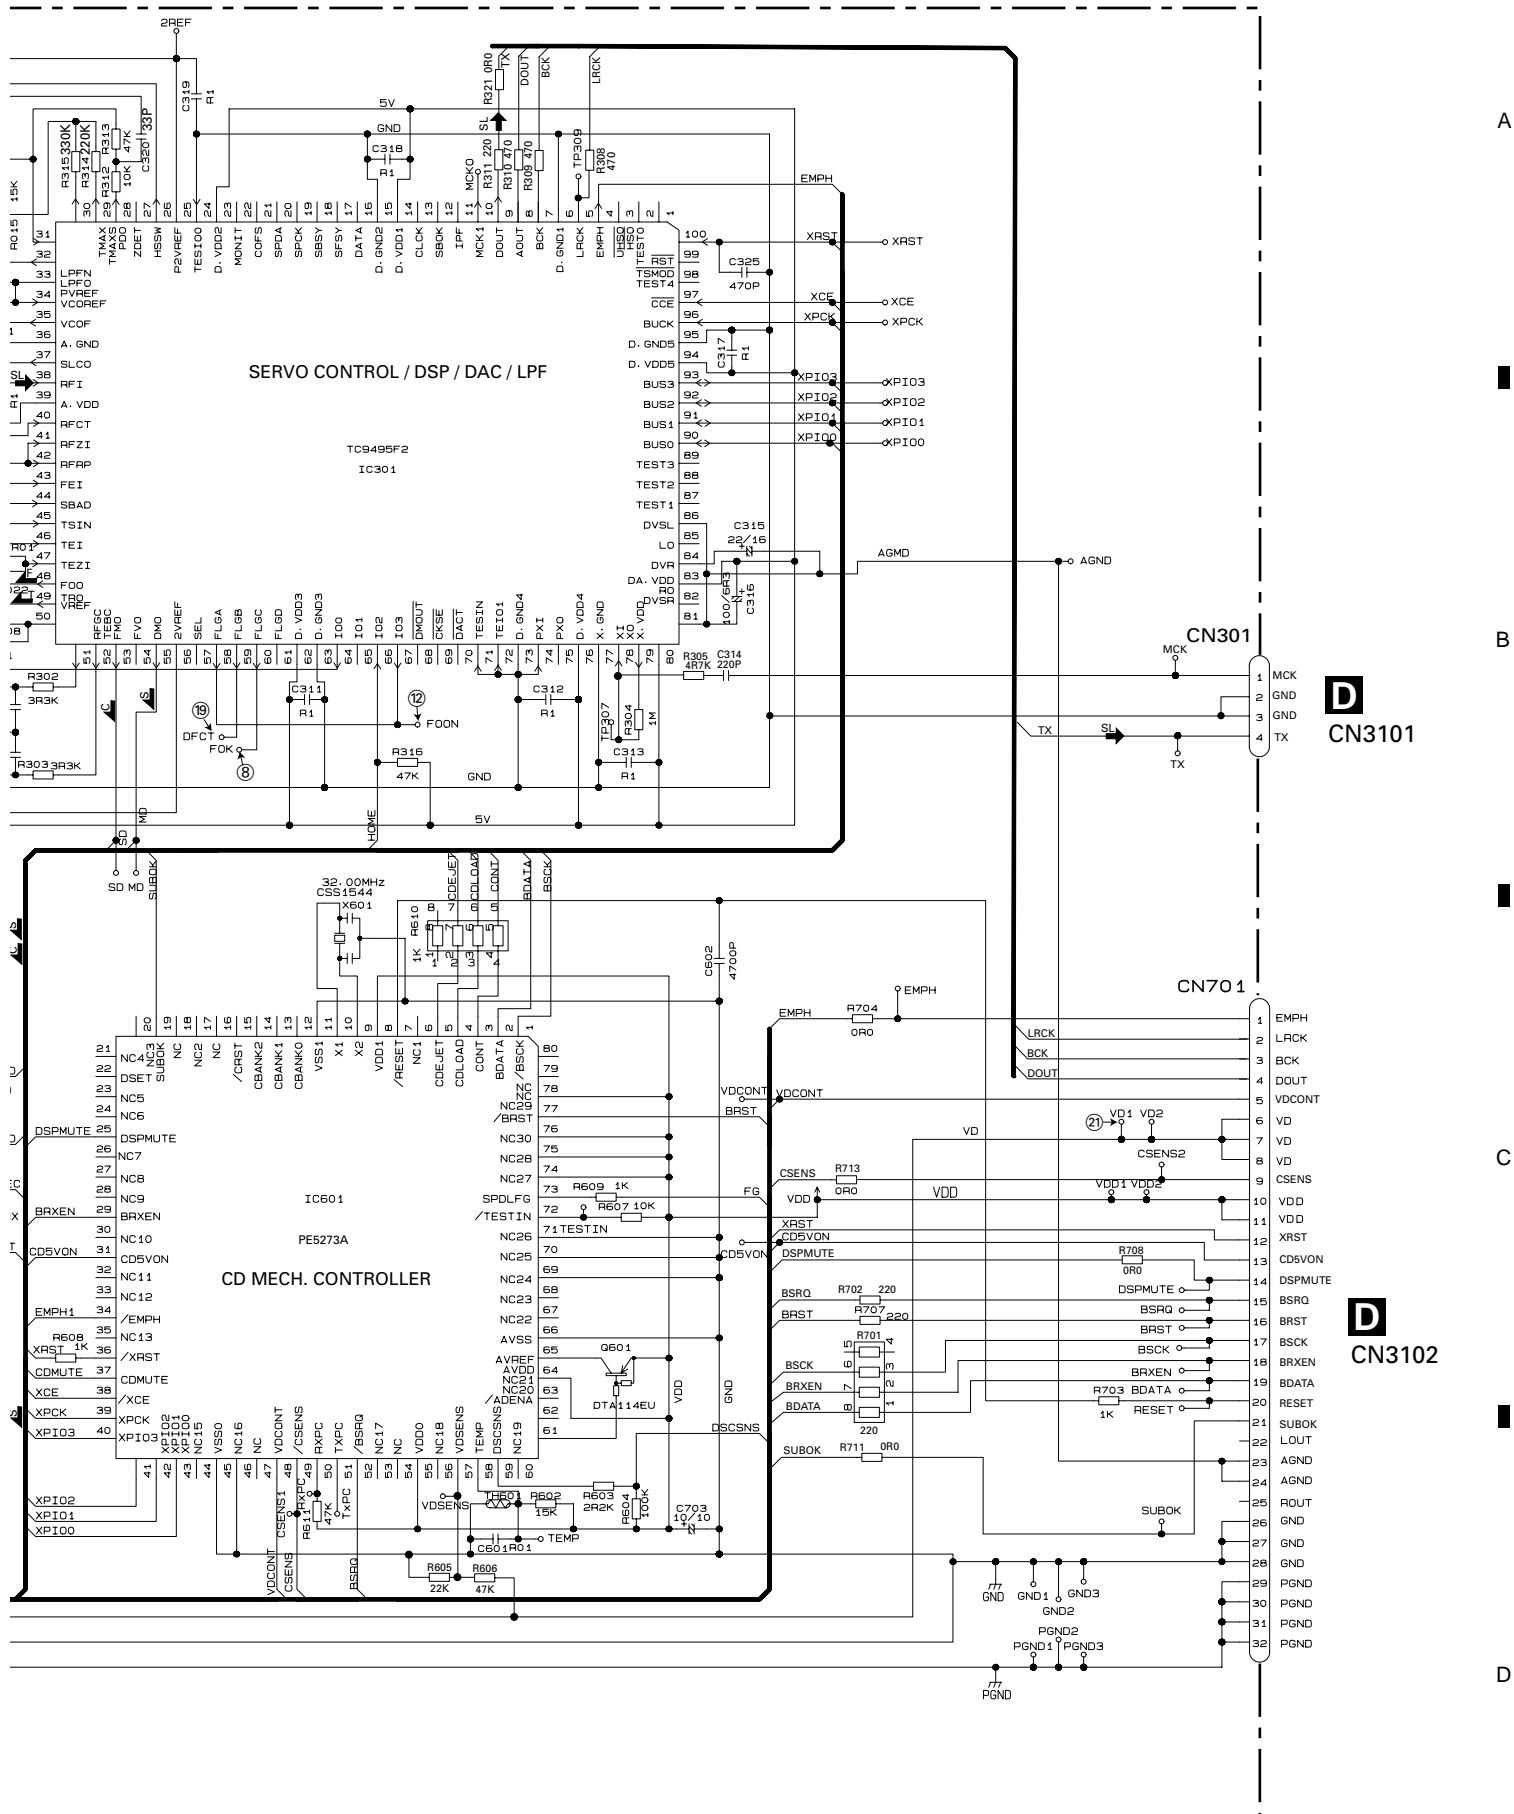


Note:1. The encircled numbers denote measuring points in the circuit diagram.
2. Reference voltage
VREF:2.1V

● Waveforms

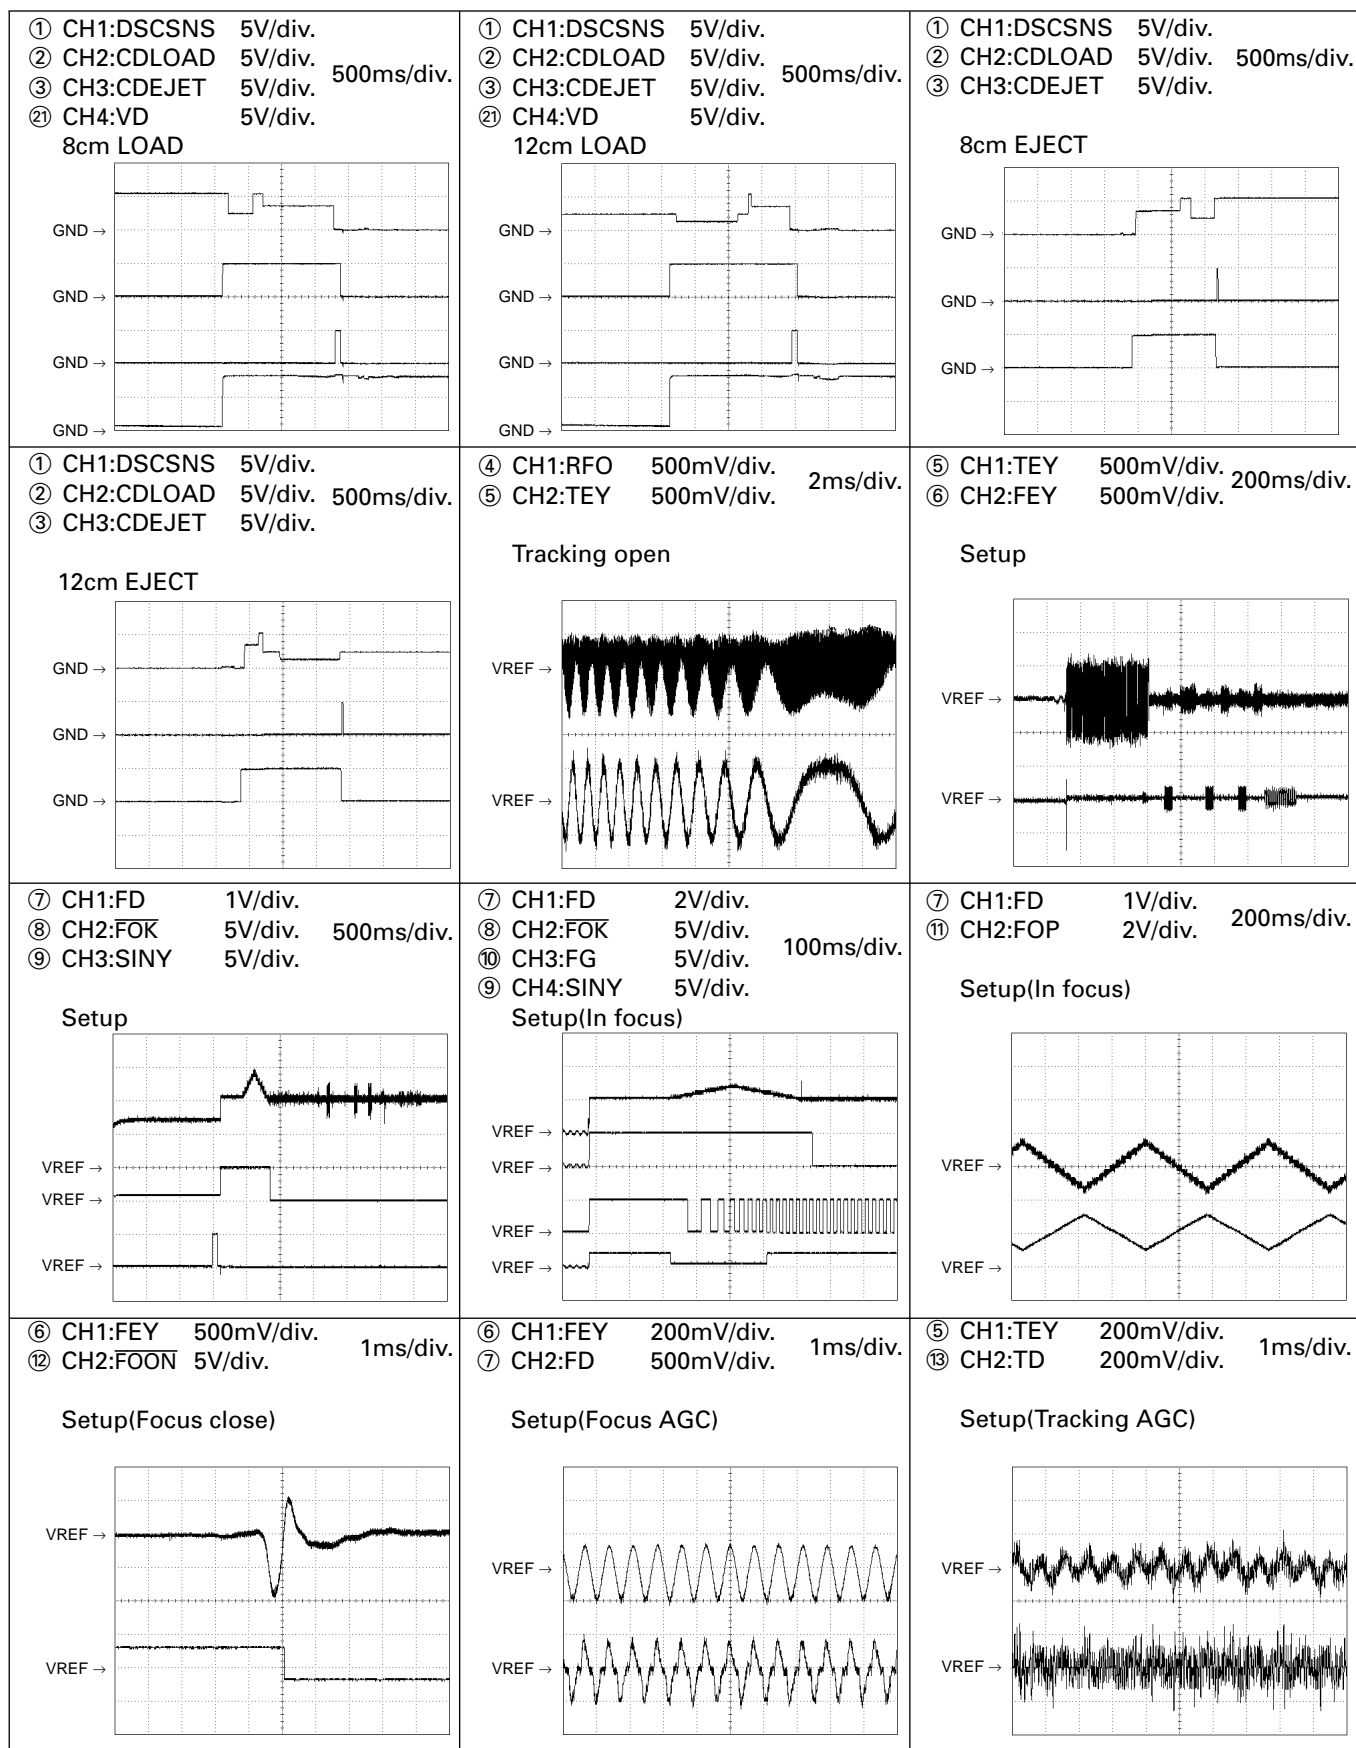

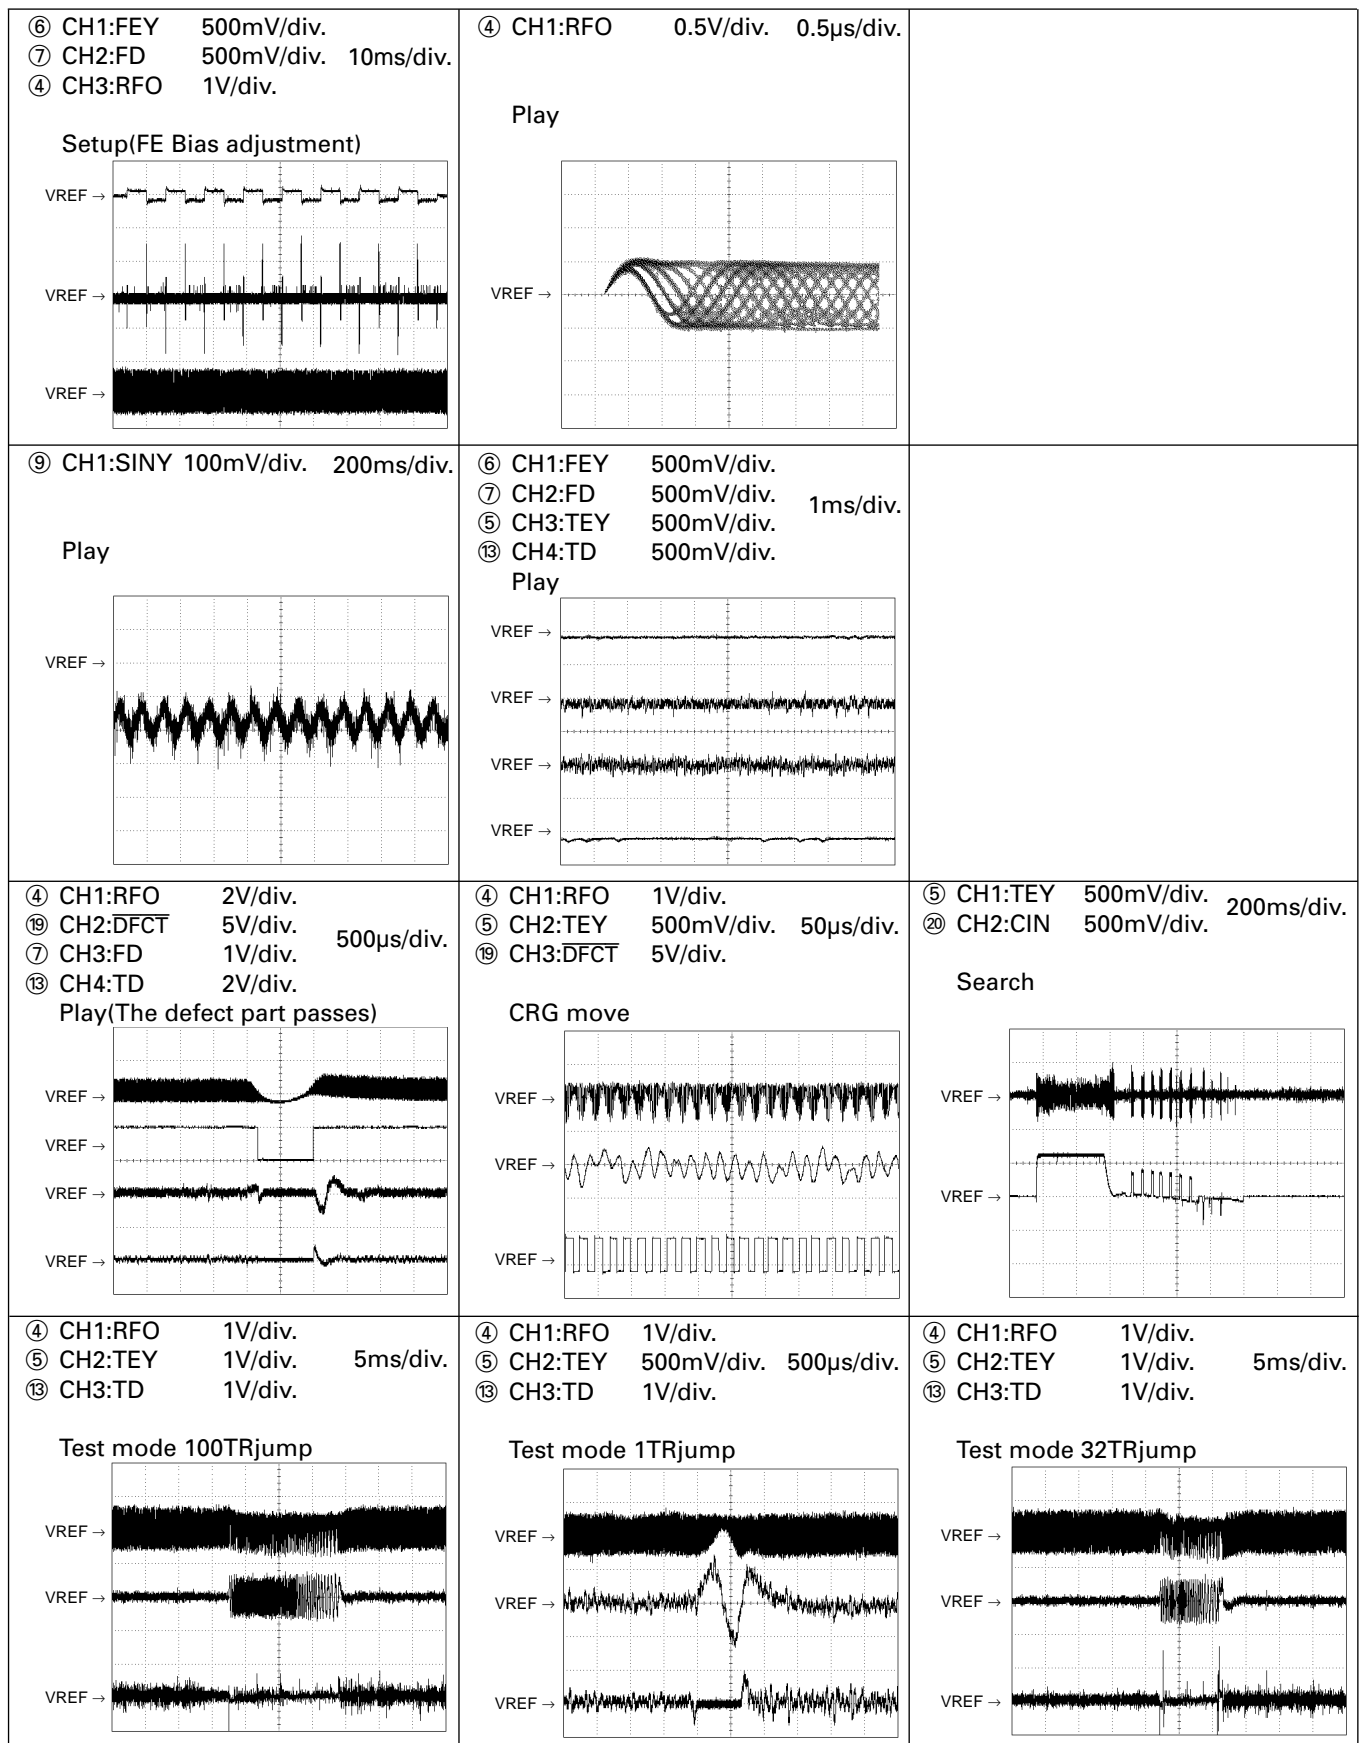


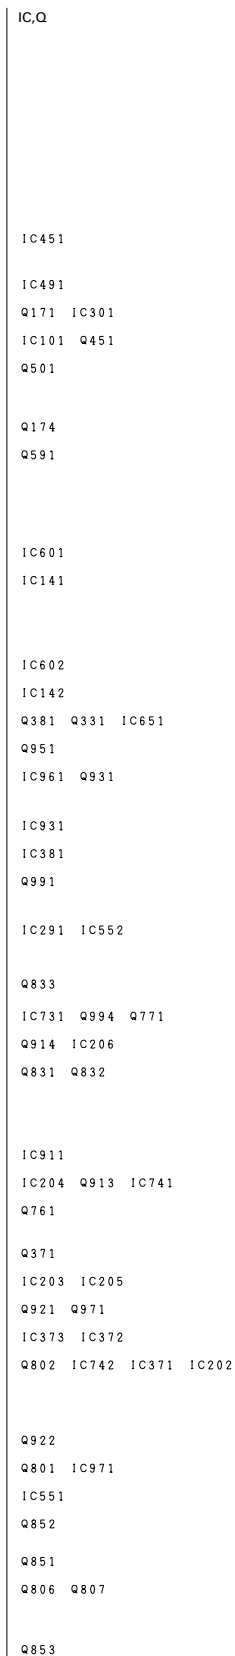


B CN1901

A


A TUNER AMP UNIT

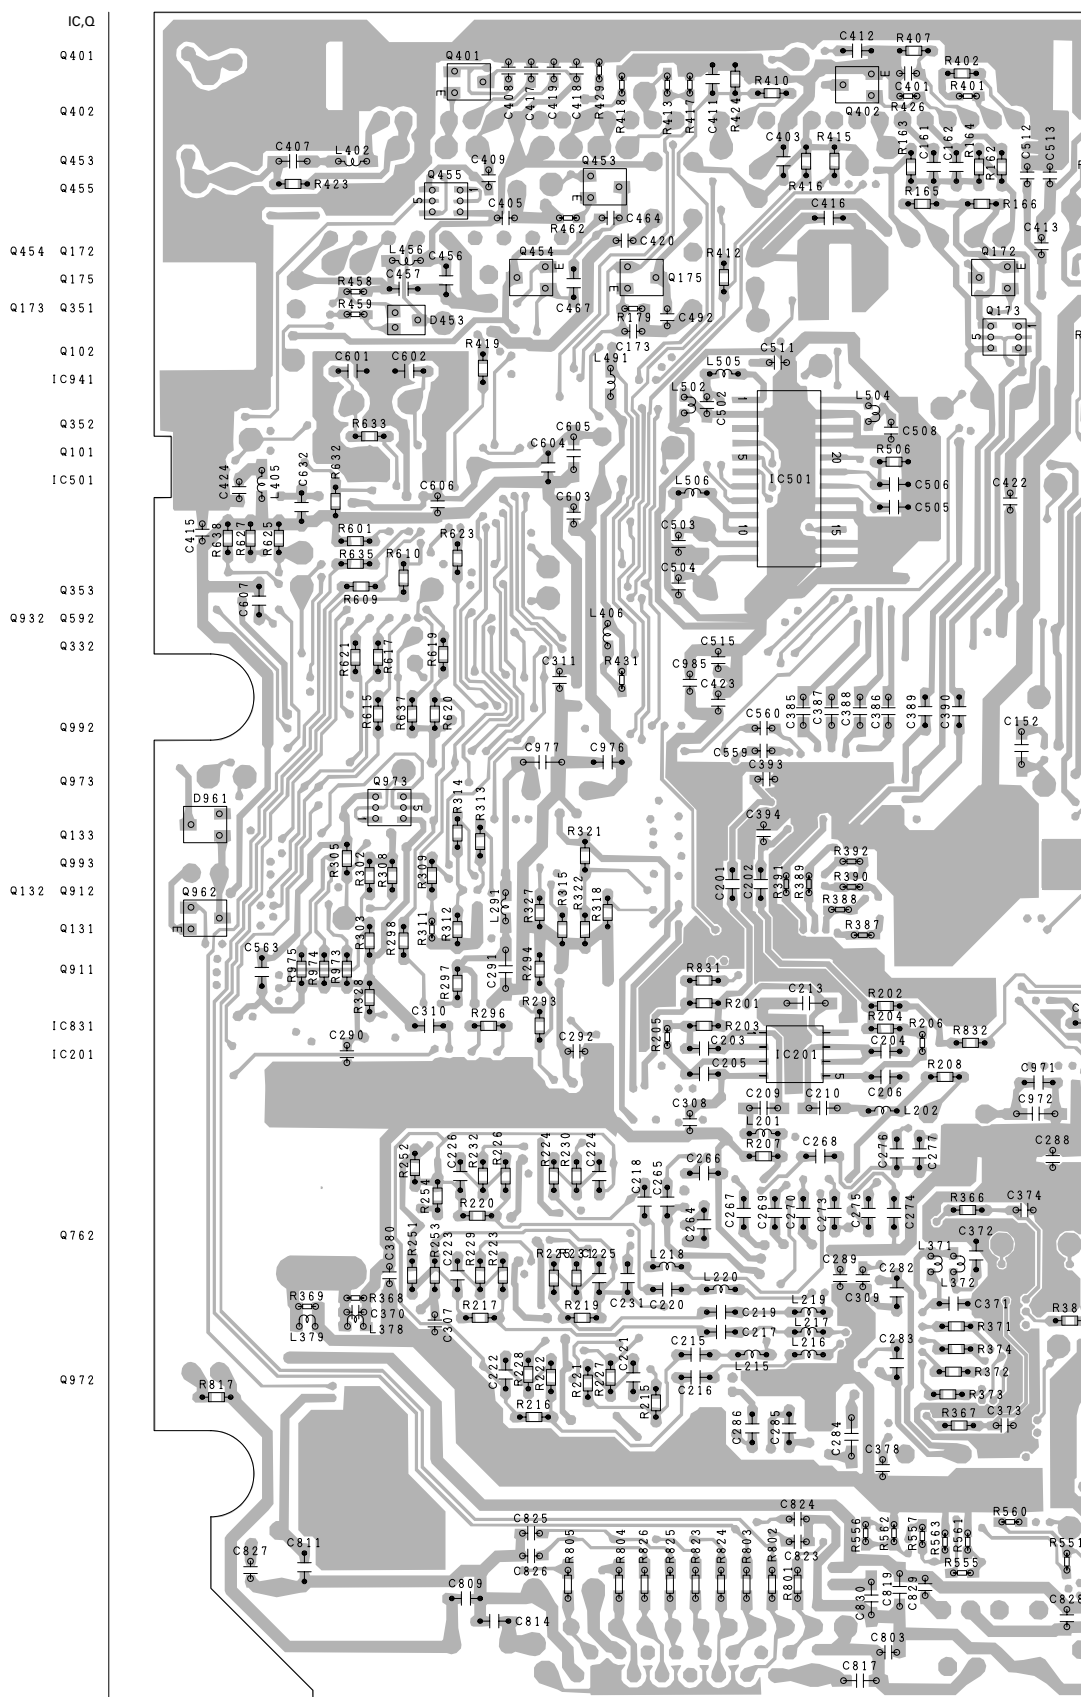

SIDE B

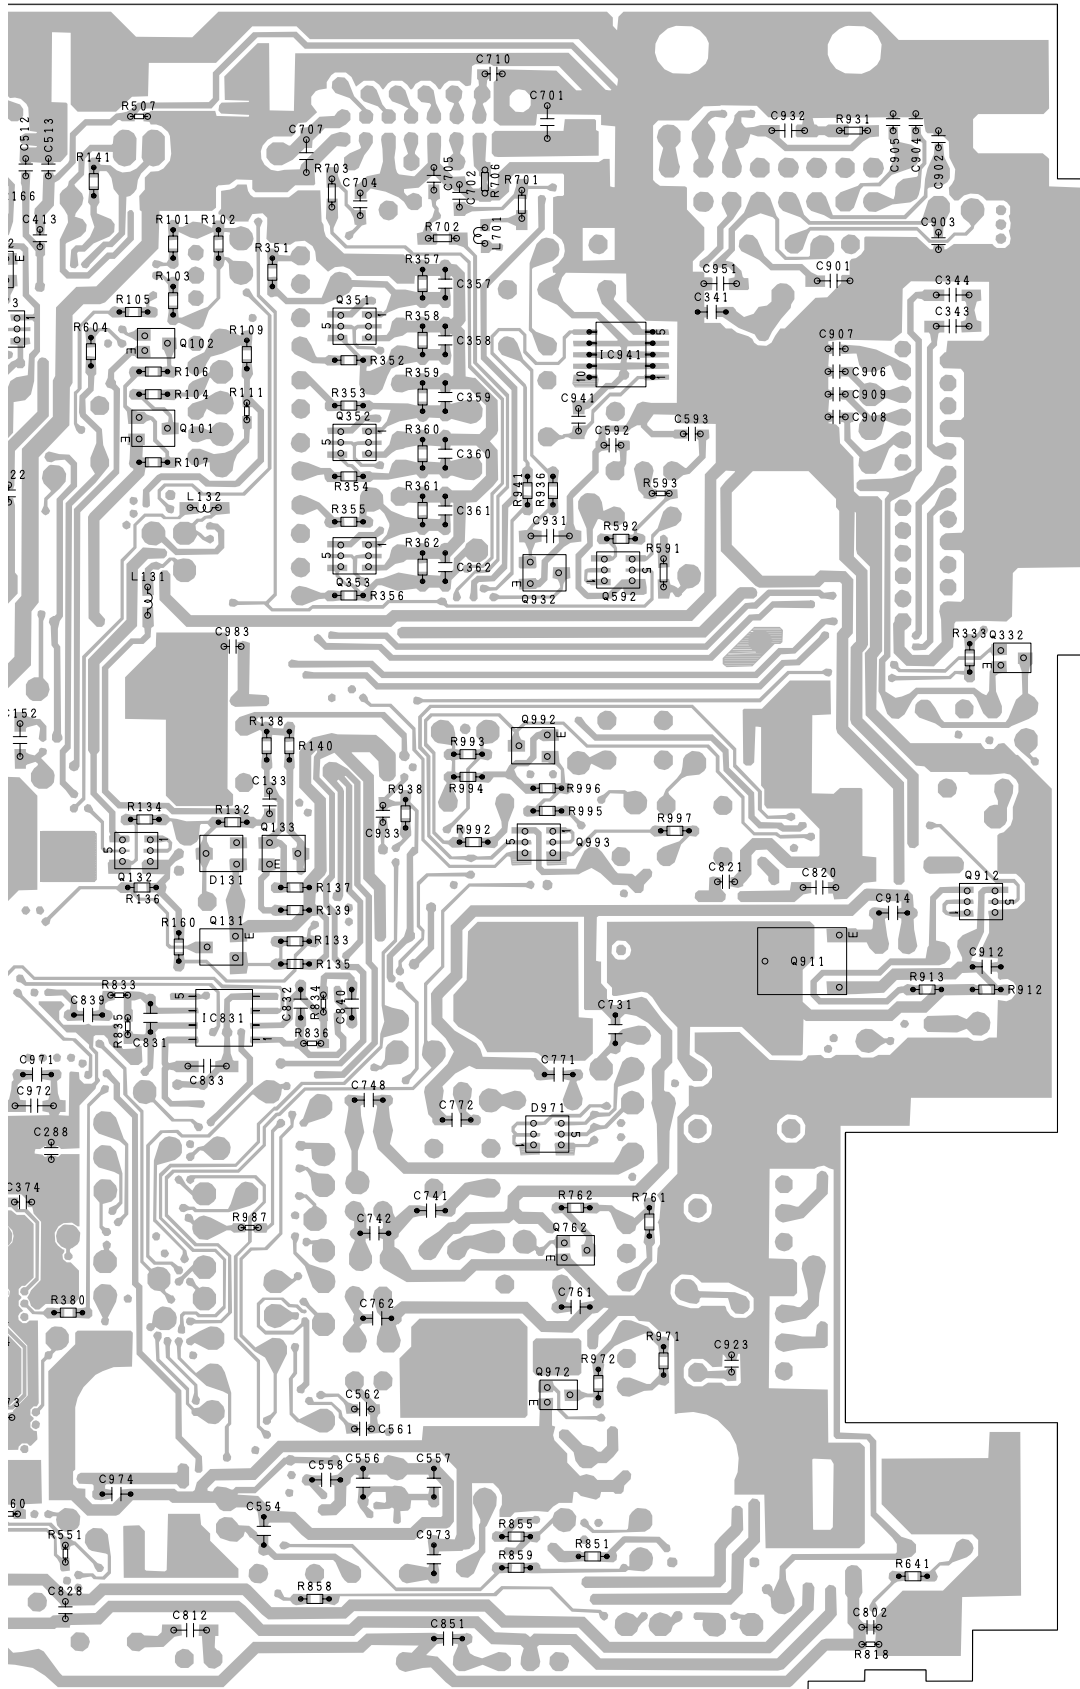


4.2 KEYBOARD UNIT

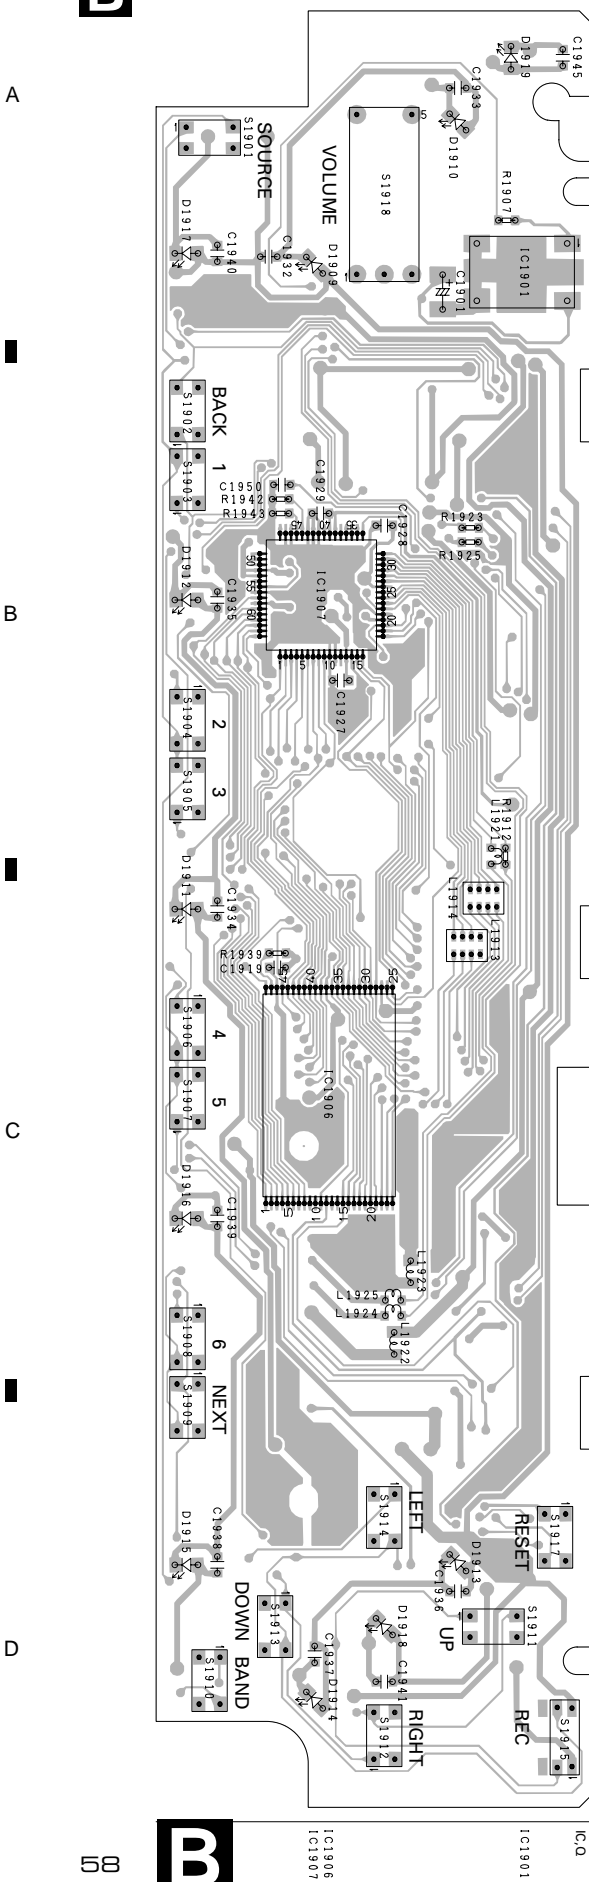B KEYBOARD UNIT

58

B KEYBOARD UNIT

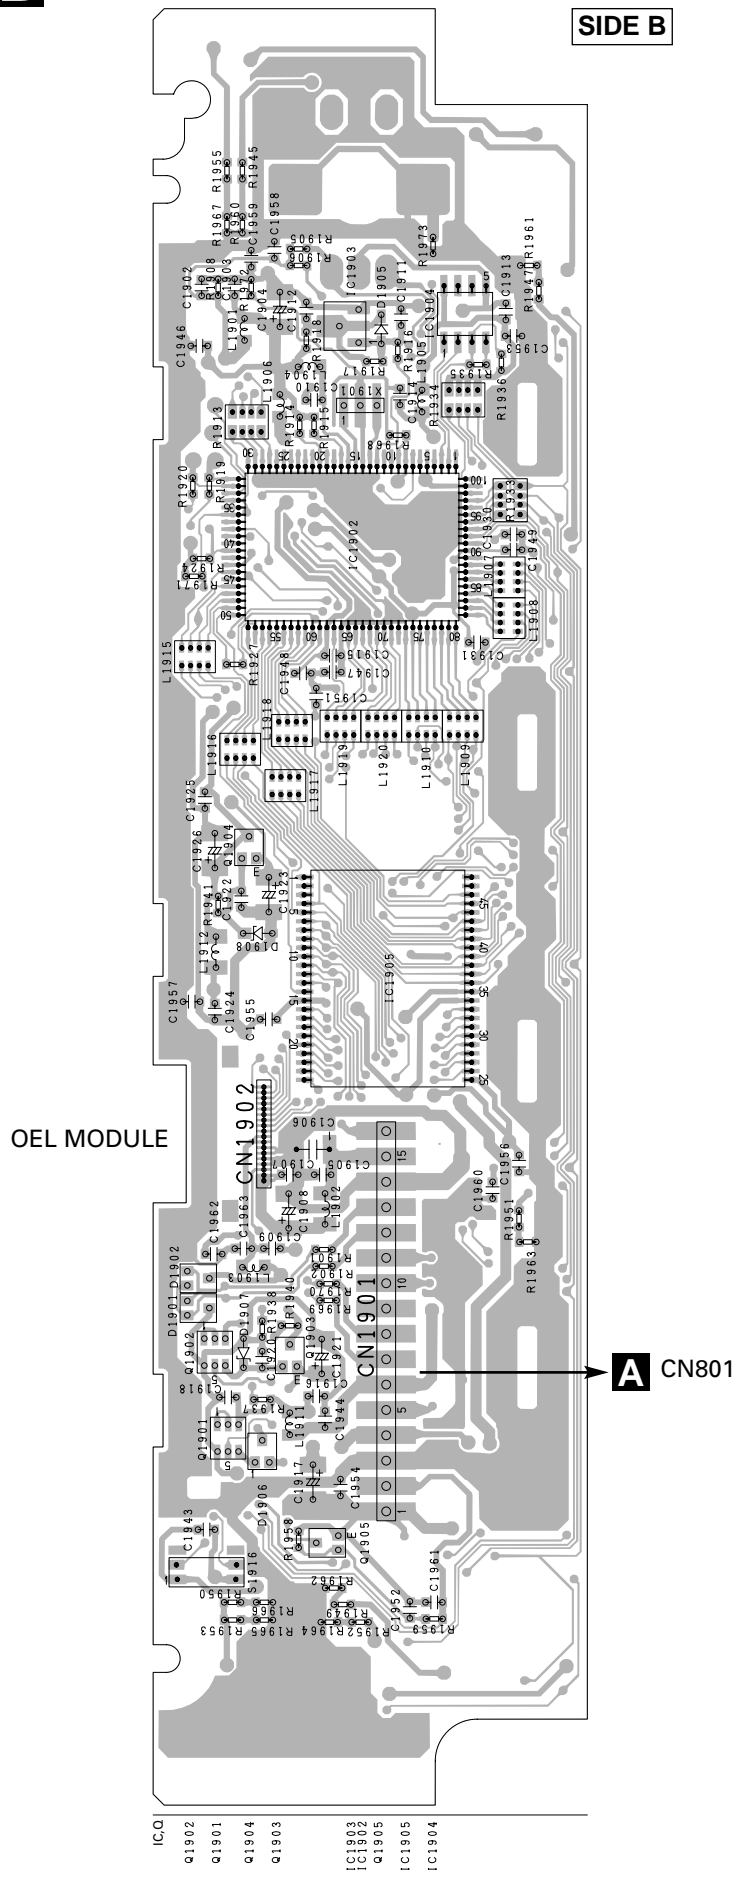


3

4

4.3 POWER SUPPLY UNIT

C POWER SUPPLY UNIT

SIDE A

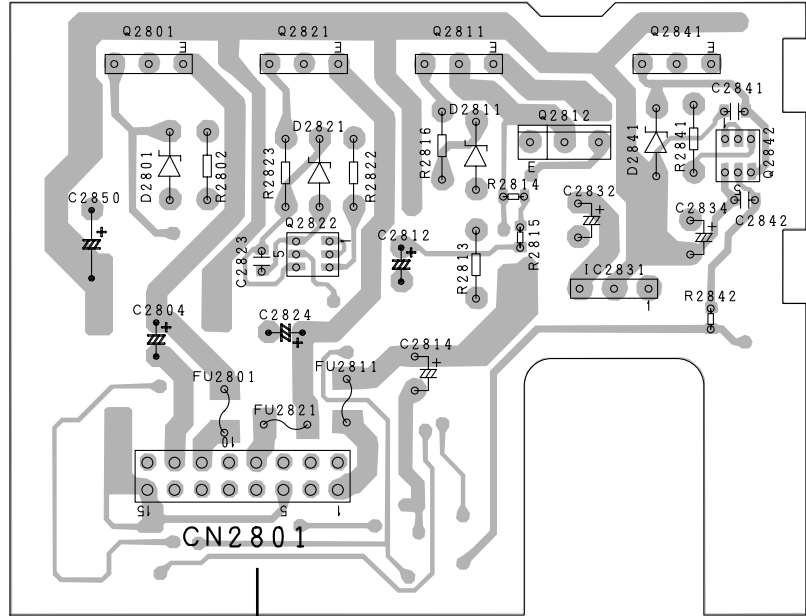


IC,Q
Q2801 Q2821
Q2811 Q2841
Q2842 Q2812
Q2822
IC2831

A CN702

C POWER SUPPLY UNIT

SIDE B

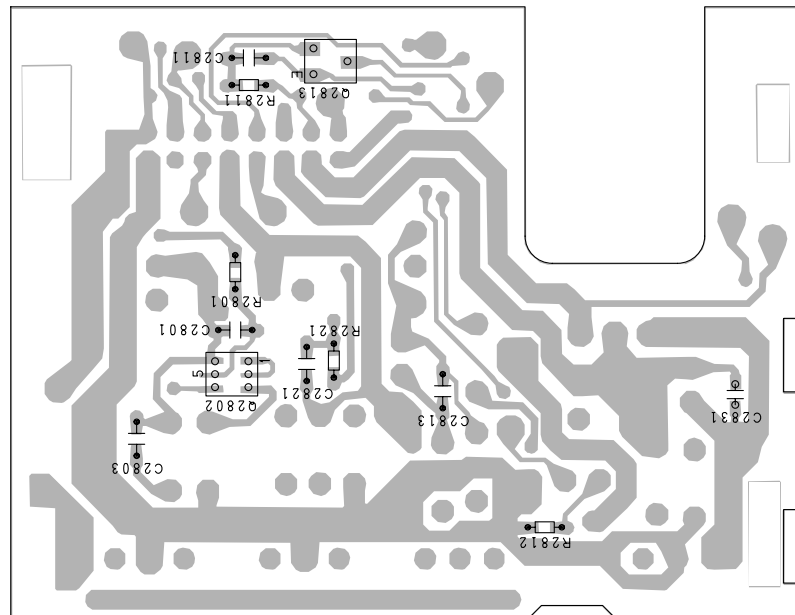


IC,Q
Q2813
Q2802

4.4 DIGITAL UNIT

D DIGITAL UNIT


SIDE A

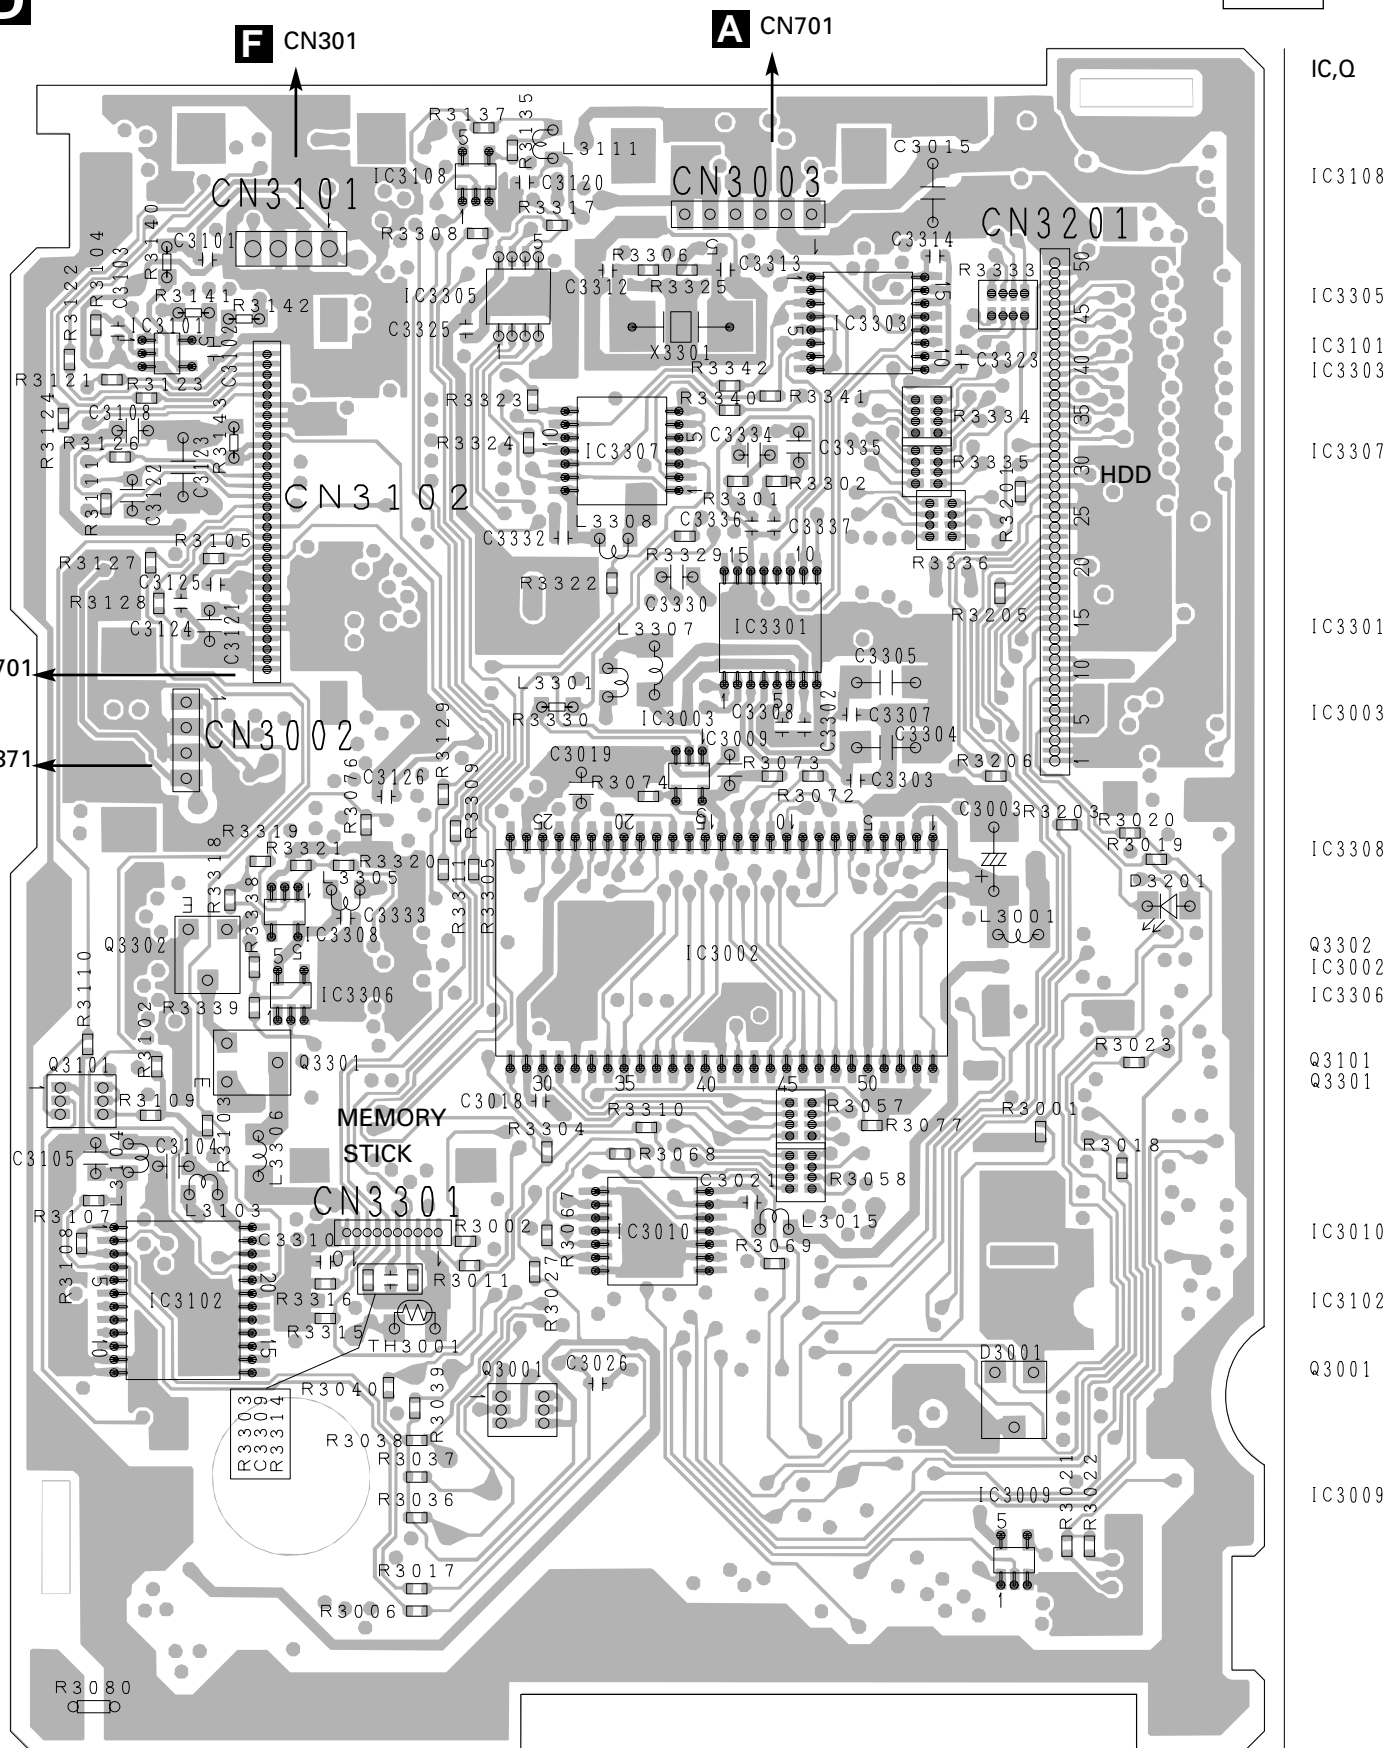

DEH-P90HDD,P900HDD
4.5 PANEL UNIT


E PANEL UNIT

SIDE A

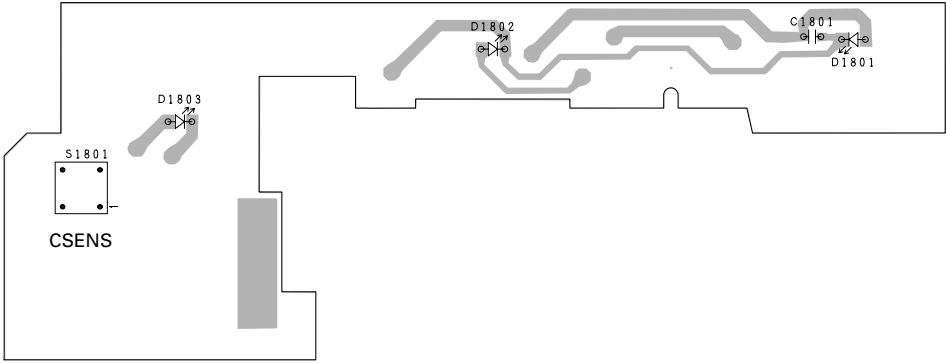

E PANEL UNIT

SIDE B

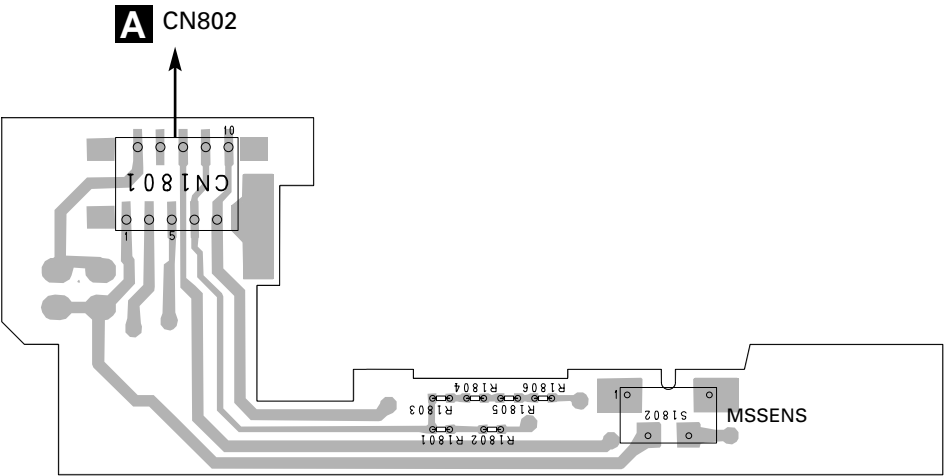



DEH-P90HDD,P900HDD

4.6 CD MECHANISM MODULE

CD CORE UNIT

SIDE A

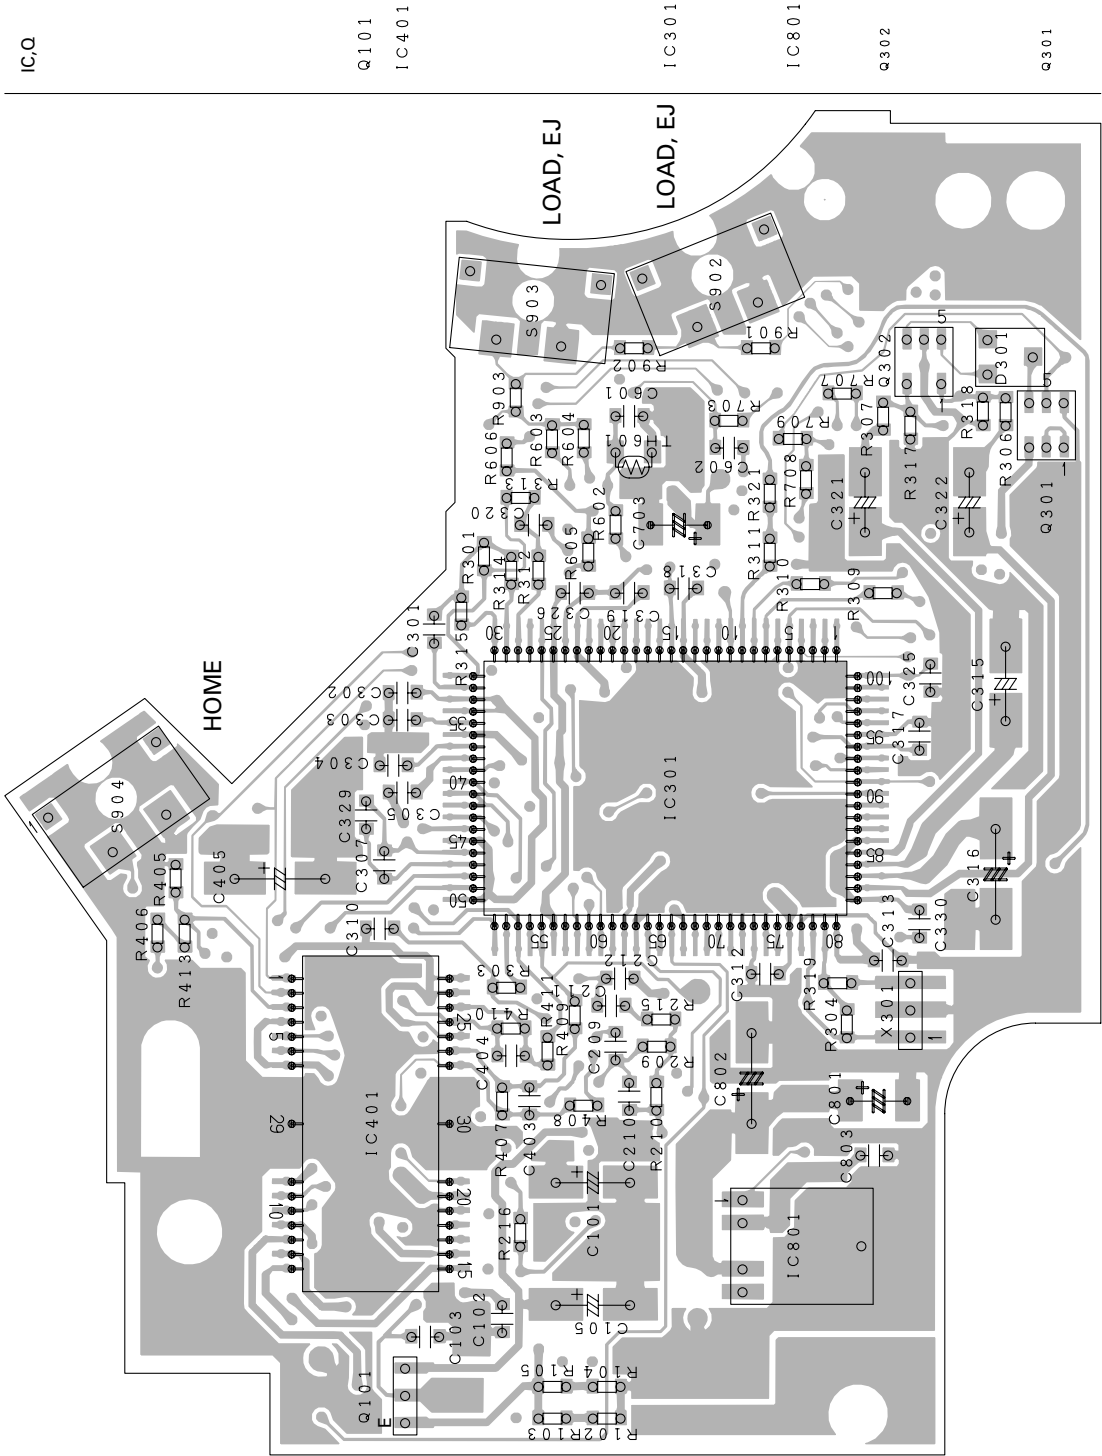

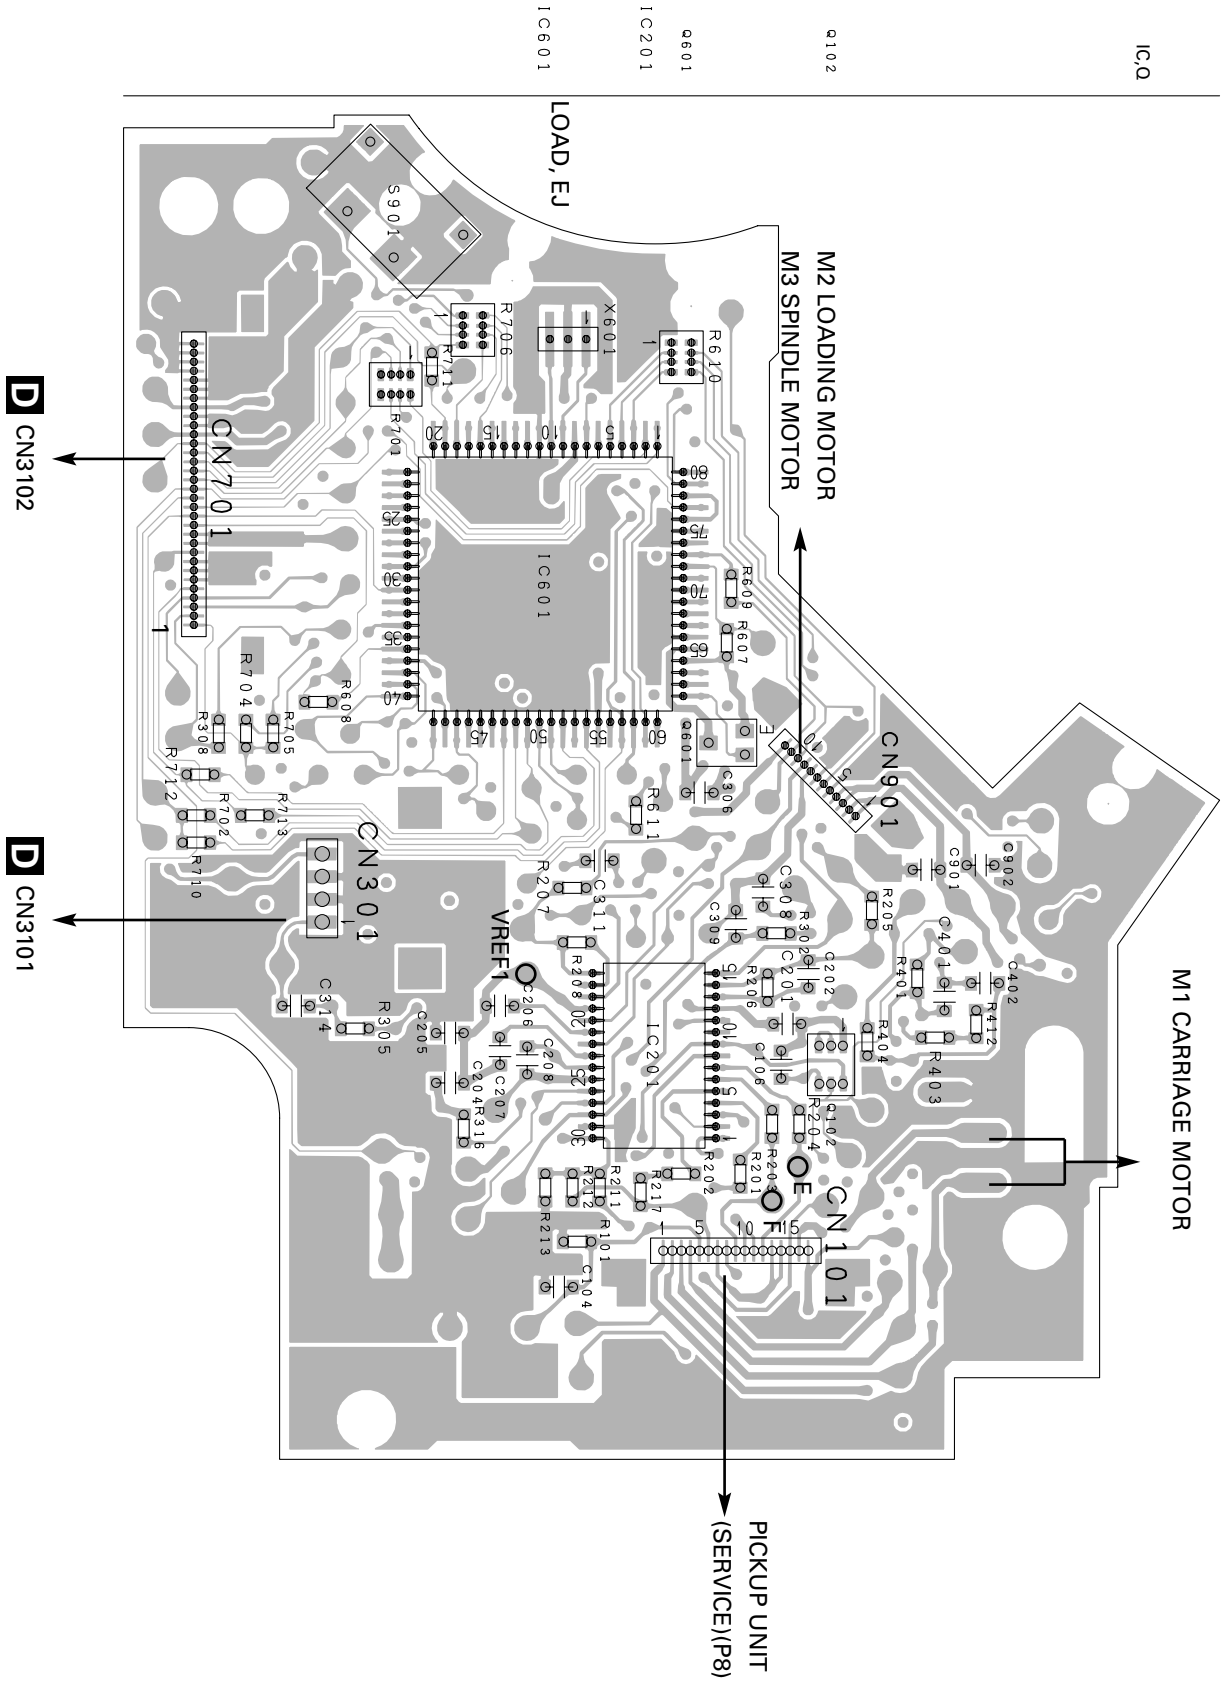

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A Unit Number : CWM7824(DEH-P90HDD/UC)		Q 832 Transistor	DTC314TU
Unit Name : Tuner Amp Unit		Q 833 Transistor	IMD2A
MISCELLANEOUS		Q 851 Transistor	IMD2A
IC 101 IC	HA12187FP	Q 852 Transistor	2SC2412K
IC 141 IC	NJM2068MD	Q 853 Transistor	2SD1859
IC 142 IC	NJM2068MD		
IC 201 IC	NJM2068MD	Q 911 Transistor	2SD1760F5
IC 202 IC	NJM2068MD	Q 912 Transistor	IMD2A
		Q 913 Transistor	2SD2396
		Q 914 Transistor	IMD2A
		Q 921 Transistor	2SD2396
IC 203 IC	NJM2068MD		
IC 204 IC	NJM2068MD	Q 922 Transistor	IMD2A
IC 205 IC	PDG262A	Q 931 Transistor	IMX1
IC 206 IC	TC7WH34FU	Q 932 Transistor	DTC114EK
IC 291 IC	PD5704A	Q 951 Transistor	2SA1162
		Q 962 Transistor	2SC2412K
IC 301 IC	PAL006A		
IC 371 IC	TC74VHC126FT	Q 971 Transistor	2SB1238
IC 372 IC	TC7SH08FU	Q 972 Transistor	DTC114EU
IC 373 IC	TC7SH08FU	Q 973 Transistor	IMD2A
IC 381 IC	PML011A	Q 991 Transistor	2SC2412K
		Q 992 Transistor	2SC2412K
IC 551 IC	AK4321VF		
IC 552 IC	TC7SET08FU	Q 993 Transistor	IMD2A
IC 601 IC	PD5646A	Q 994 Transistor	IMD2A
IC 602 IC	TC7S32FU	D 131 Diode	MA3039(L)
IC 731 IC	NJU7223DL1-33	D 141 Diode	UDZS3R9(B)
		D 142 Diode	RB706F-40
IC 741 IC	NJM2870F18		
IC 742 IC	NJU7223DL1-33	D 381 Diode	DAN202U
IC 831 IC	NJM2068MD	D 591 Diode	HZS12L(A1)
IC 911 IC	TC7SET32FU	D 801 Diode Network	DA204U
IC 931 IC	TC7S08FU	D 802 Diode Network	DA204U
		D 803 Diode Network	DA204U
IC 961 IC	S-80735ANDZI		
IC 971 IC	BA033FP	D 804 Diode Network	DA204U
Q 101 Transistor	2SA1162	D 805 Diode	MA3062(M)
Q 102 Transistor	DTC124EU	D 806 Diode	HZS6L(B1)
Q 131 Transistor	2SC2412K	D 811 Diode Network	DA204U
		D 812 Diode Network	DA204U
Q 132 Transistor	IMD2A		
Q 133 Transistor	2SC2412K	D 813 Diode	HZS11L(A1)
Q 331 Transistor	DTC124EU	D 814 Diode Network	DA204U
Q 332 Transistor	DTC124EU	D 815 Diode Network	DA204U
Q 351 Transistor	IMH3A	D 851 Diode	HZS9L(A2)
		D 901 Diode	MPG06G-6415G50
Q 352 Transistor	IMH3A		
Q 353 Transistor	IMH3A	D 902 Diode	MPG06G-6415G50
Q 371 Transistor	IMD2A	D 903 Diode	MPG06G-6415G50
Q 381 Transistor	DTC124EU	D 904 Diode	MPG06G-6415G50
Q 401 Transistor	2SC2412K	D 911 Diode	MPG06G-6415G50
		D 912 Diode	HZS6L(B1)
Q 591 Transistor	2SD1859		
Q 592 Transistor	IMD2A	D 913 Diode	MPG06G-6415G50
Q 761 Transistor	2SB1238	D 914 Diode	HZS9L(B1)
Q 762 Transistor	DTC143EU	D 921 Diode	HZS6L(C2)
Q 771 Transistor	IMD2A	D 931 Diode	HZS7L(A1)
		D 932 Diode	HZS7L(C3)
Q 801 Transistor	2SD1760F5		
Q 802 Transistor	IMD2A	D 933 Diode	MPG06G-6415G50
Q 806 Transistor	2SD1859	D 951 Diode	DAN202U
Q 807 Transistor	IMD2A	D 961 Diode	MA152K
Q 831 Transistor	DTC314TU	D 971 Diode	IMN10
		D 991 Diode	DAN202U

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
D	992	Diode	HZS9L(A2)	R	111		RS1/16S223J
D	993	Diode	1SS133	R	112		RS1/16S102J
D	994	Diode	DAN202U	R	113		RS1/16S102J
ZNR	451	Surge Protector	DSPS-201M-S00B	R	114		RS1/16S0R0J
L	101	Inductor	LAU3R3K	R	131		RS1/16S104J
L	131	Inductor	CTF1399	R	132		RS1/16S222J
L	132	Inductor	CTF1399	R	133		RS1/16S103J
L	133	Inductor	CTF1399	R	134		RS1/16S561J
L	134	Inductor	CTF1399	R	135		RS1/16S223J
L	201	Inductor	CTF1379	R	136		RS1/16S473J
L	202	Inductor	CTF1379	R	137		RS1/16S153J
L	215	Inductor	CTF1379	R	138		RS1/16S683J
L	216	Inductor	CTF1379	R	139		RS1/16S152J
L	217	Inductor	CTF1379	R	140		RS1/16S682J
L	218	Inductor	CTF1379	R	141		RS1/16S222J
L	219	Inductor	CTF1379	R	142		RS1/16S152J
L	220	Inductor	CTF1379	R	143		RS1/16S152J
L	261	Inductor	CTF1379	R	144		RS1/16S104J
L	262	Ferri-Inductor	LAU101K	R	145		RS1/16S101J
L	263	Ferri-Inductor	LAU151K	R	146		RS1/16S563J
L	291	Inductor	CTF1399	R	147		RS1/16S102J
L	361	Filter	CTF1071	R	148		RS1/16S103J
L	371	Inductor	CTF1379	R	149		RS1/16S103J
L	372	Inductor	CTF1379	R	150		RS1/16S153J
L	376	Inductor	LCYC4R7K1608	R	151		RS1/16S153J
L	377	Inductor	CTF1357	R	152		RS1/16S223J
L	401	Inductor	LAU100K	R	153		RN1/16SE4702D
L	402	Inductor	LCTB4R7K2125	R	154		RN1/16SE4702D
L	404	Ferri-Inductor	LAU2R2K	R	160		RS1/16S473J
L	405	Inductor	CTF1399	R	161		RS1/16S272J
L	491	Inductor	CTF1399	R	162		RS1/16S272J
L	551	Ferri-Inductor	LAU2R2K	R	163		RS1/16S162J
L	601	Inductor	LAU100K	R	164		RS1/16S162J
L	701	Inductor	CTF1379	R	171		RS1/16S0R0J
L	731	Inductor	CTF1484	R	172		RS1/16S0R0J
L	741	Ferri-Inductor	LAU2R2K	R	201		RS1/16S474J
L	742	Inductor	LAU1R0K	R	202		RS1/16S474J
L	761	Inductor	LAU100K	R	203		RS1/16S223J
L	771	Inductor	LAU100K	R	204		RS1/16S223J
L	801	Inductor	LAU100K	R	205		RS1/16S472J
L	802	Inductor	CTF1489	R	206		RS1/16S472J
L	803	Inductor	CTF1488	R	207		RS1/16S225J
L	804	Inductor	CTF1488	R	208		RS1/16S155J
L	951	Ferri-Inductor	LAU2R2K	R	215		RS1/16S474J
L	971	Ferri-Inductor	LAU2R2K	R	216		RS1/16S474J
L	972	Inductor	LAU1R0K	R	217		RS1/16S474J
L	973	Ferri-Inductor	LAU2R2K	R	218		RS1/16S474J
X	261	Radiator 16.9344MHz	CSS1463	R	219		RS1/16S474J
X	291	Radiator 10.00MHz	CSS1428	R	220		RS1/16S474J
X	601	Radiator 10.00MHz	CSS1475	R	221		RS1/16S222J
VR	141	Semi-fixed 10kΩ(B)	CCP1448	R	222		RS1/16S222J
FU	701	Fuse 3.15A	CEK1207	R	223		RS1/16S222J
MIC	141	Microphone	CPM1011	R	224		RS1/16S222J
		FM/AM Tuner Unit	CWE1605	R	225		RS1/16S222J
BZ	641	Buzzer	CPV1050	R	226		RS1/16S222J
		Fan Motor	CXM1186	R	227		RS1/16S333J
				R	228		RS1/16S333J
				R	229		RS1/16S333J
				R	230		RS1/16S333J
				R	231		RS1/16S333J
R	101		RS1/16S101J				
R	102		RS1/16S620J				
R	103		RS1/16S101J	R	232		RS1/16S333J
R	104		RS1/16S222J	R	233		RS1/16S273J
R	105		RS1/16S103J	R	234		RS1/16S273J
				R	235		RS1/16S273J
R	106		RS1/16S562J	R	236		RS1/16S273J
R	107		RS1/16S332J				
R	108		RS1/16S181J				
R	109		RS1/16S181J				
R	110		RS1/16S223J				

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 237	RS1/16S273J	R 334	RS1/16S331J
R 238	RS1/16S273J	R 351	RS1/16S821J
R 239	RS1/16S183J	R 352	RS1/16S821J
R 240	RS1/16S183J	R 353	RS1/16S821J
R 241	RS1/16S183J	R 354	RS1/16S821J
R 242	RS1/16S183J	R 355	RS1/16S821J
R 243	RS1/16S183J	R 356	RS1/16S821J
R 244	RS1/16S183J	R 357	RS1/16S223J
R 245	RS1/16S273J	R 358	RS1/16S223J
R 246	RS1/16S273J	R 359	RS1/16S223J
R 247	RS1/16S273J	R 360	RS1/16S223J
R 248	RS1/16S273J	R 361	RS1/16S223J
R 249	RS1/16S273J	R 362	RS1/16S223J
R 250	RS1/16S273J	R 366	RS1/16S101J
R 251	RS1/16S103J	R 367	RS1/16S0R0J
R 252	RS1/16S103J	R 369	RS1/16S0R0J
R 253	RS1/16S103J	R 371	RS1/16S102J
R 254	RS1/16S103J	R 372	RS1/16S102J
R 261	RS1/16S331J	R 373	RS1/16S102J
R 262	RAB4C221J	R 374	RS1/16S102J
R 263	RS1/16S221J	R 375	RS1/16S102J
R 264	RS1/16S221J	R 376	RS1/16S102J
R 265	RS1/16S221J	R 377	RS1/16S102J
R 266	RS1/16S102J	R 378	RS1/16S102J
R 267	RS1/16S221J	R 379	RS1/16S221J
R 282	RS1/16S103J	R 380	RS1/16S221J
R 283	RS1/16S103J	R 381	RS1/16S682J
R 284	RS1/16S153J	R 385	RS1/10S0R0J
R 291	RAB4C681J	R 401	RS1/16S473J
R 292	RS1/16S473J	R 402	RS1/16S473J
R 293	RS1/16S102J	R 403	RS1/16S681J
R 294	RS1/16S473J	R 404	RS1/16S681J
R 295	RS1/16S102J	R 409	RS1/16S681J
R 296	RS1/16S105J	R 410	RS1/16S103J
R 297	RS1/16S102J	R 411	RS1/16S681J
R 298	RS1/16S471J	R 412	RS1/16S681J
R 299	RS1/16S102J	R 413	RS1/16S681J
R 300	RAB4C473J	R 414	RS1/16S473J
R 301	RAB4C681J	R 415	RS1/16S472J
R 302	RS1/16S222J	R 416	RS1/16S473J
R 303	RS1/16S104J	R 417	RS1/16S473J
R 304	RAB4C471J	R 418	RS1/16S473J
R 305	RS1/16S473J	R 419	RS1/16S222J
R 306	RS1/16S102J	R 420	RS1/16S222J
R 307	RS1/16S102J	R 423	RS1/16S0R0J
R 308	RS1/16S473J	R 424	RS1/16S393J
R 309	RS1/16S102J	R 430	RS1/16S0R0J
R 310	RS1/16S102J	R 431	RS1/16S0R0J
R 312	RS1/16S104J	R 507	RS1/16S0R0J
R 313	RS1/16S222J	R 551	RS1/16S222J
R 314	RS1/16S222J	R 552	RS1/16S102J
R 315	RS1/16S473J	R 553	RS1/16S102J
R 316	RAB4C0R0J	R 554	RS1/16S102J
R 317	RS1/16S102J	R 555	RS1/16S222J
R 318	RS1/16S473J	R 556	RS1/16S222J
R 321	RS1/16S472J	R 557	RS1/16S222J
R 322	RS1/16S104J	R 558	RS1/16S681J
R 325	RS1/16S102J	R 559	RS1/16S681J
R 326	RS1/16S0R0J	R 560	RS1/16S332J
R 327	RS1/16S473J	R 561	RS1/16S332J
R 328	RS1/16S473J	R 562	RS1/16S332J
R 329	RAB4C681J	R 563	RS1/16S332J
R 331	RS1/16S103J	R 564	RS1/16S101J
R 332	RS1/16S103J	R 565	RS1/16S101J
R 333	RS1/16S103J	R 591	RS1/10S1R0J

====Circuit Symbol and No.===Part Name		Part No.	====Circuit Symbol and No.===Part Name		Part No.
R	592	RS1/16S102J	R	838	RS1/16S223J
R	593	RS1/16S102J	R	839	RS1/16S102J
R	601	RS1/16S473J	R	840	RS1/16S102J
R	602	RS1/16S102J	R	851	RS1/16S182J
R	603	RS1/16S473J	R	855	RS1/16S560J
R	604	RS1/16S472J	R	856	RS1/16S222J
R	605	RS1/16S221J	R	857	RS1/16S222J
R	606	RS1/16S682J	R	858	RS1/16S222J
R	607	RS1/16S221J	R	859	RS1/16S102J
R	608	RS1/16S682J	R	912	RS1/16S562J
R	609	RS1/16S102J	R	913	RS1/16S101J
R	610	RS1/16S102J	R	914	RS1/10S0R0J
R	613	RS1/16S473J	R	915	RS1/16S123J
R	615	RS1/16S221J	R	916	RS1/16S471J
R	616	RS1/16S682J	R	921	RS1/16S681J
R	617	RS1/16S221J	R	922	RS1/16S561J
R	618	RS1/16S682J	R	931	RS1/10S472J
R	619	RS1/16S221J	R	932	RS1/16S473J
R	620	RS1/16S473J	R	933	RS1/16S103J
R	621	RS1/16S221J	R	934	RS1/16S473J
R	622	RS1/16S682J	R	935	RS1/16S104J
R	623	RS1/16S102J	R	936	RS1/16S103J
R	624	RS1/16S473J	R	937	RS1/16S473J
R	625	RS1/16S473J	R	938	RS1/16S102J
R	627	RS1/16S473J	R	951	RS1/10S153J
R	631	RS1/16S473J	R	952	RS1/16S472J
R	632	RS1/16S0R0J	R	953	RS1/16S472J
R	633	RS1/16S0R0J	R	954	RS1/16S102J
R	634	RS1/16S0R0J	R	961	RS1/16S102J
R	635	RS1/16S0R0J	R	962	RS1/16S102J
R	636	RS1/16S0R0J	R	963	RS1/16S473J
R	637	RS1/16S473J	R	964	RS1/16S822J
R	639	RS1/16S473J	R	965	RS1/16S102J
R	641	RS1/16S102J	R	971	RS1/16S472J
R	651	RS1/16S473J	R	972	RS1/16S102J
R	701	RS1/10S102J	R	973	RS1/16S473J
R	702	RS1/10S102J	R	974	RS1/16S473J
R	703	RS1/10S102J	R	975	RS1/16S473J
R	704	RS1/10S102J	R	976	RS1/16S0R0J
R	705	RS1/10S102J	R	987	RS1/16S101J
R	706	RS1/10S0R0J	R	991	RS1/16S223J
R	761	RS1/16S472J	R	992	RS1/16S473J
R	762	RS1/16S102J	R	993	RS1/16S104J
R	801	RS1/10S222J	R	994	RS1/16S473J
R	802	RS1/10S222J	R	995	RS1/16S224J
R	803	RS1/10S222J	R	996	RS1/16S473J
R	804	RS1/10S103J	R	997	RS1/16S102J
R	805	RS1/10S472J	CAPACITORS		
R	810	RS1/16S221J			
R	811	RS1/16S221J			
R	812	RS1/16S821J			
R	813	RS1/16S681J			
R	817	RS1/16S473J	C	101	CKSRYB104K16
R	820	RS1/10S1R0J	C	102	CKSRYB104K16
R	823	RS1/10S222J	C	103	CKSRYB104K16
			C	105	CCSRCH101J50
			C	106	CCSRCH101J50
R	824	RS1/10S222J	C	107	CCSRCH101J50
R	825	RS1/10S221J	C	108	CCSRCH101J50
R	826	RS1/10S221J	C	131	CKSRYB681K50
R	831	RS1/16S102J	C	132	CEAL101M10
R	832	RS1/16S102J	C	133	CKSQYB225K10
R	833	RS1/16S333J	C	141	CEJQ470M10
R	834	RS1/16S333J	C	142	CKSRYB105K10
R	835	RS1/16S473J	C	143	CKSRYB105K10
R	836	RS1/16S473J	C	144	CCSRCH101J50
R	837	RS1/16S223J	C	145	CKSYB475K16

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 146	CKSRYP105K10	C 268	CKSRYP104K16
C 147	CKSRYP104K16	C 269	CKSRYP104K16
C 148	CKSYB475K16	C 270	CKSRYP104K16
C 149	CKSRYP474K10	C 271	CCSRCH180J50
C 150	CKSRYP105K10	C 272	CCSRCH180J50
C 151	CKSRYP104K16	C 273	CKSRYP104K16
C 152	CKSYB106K6R3	C 274	CKSRYP104K16
C 153	CKSRYP104K16	C 275	CKSRYP104K16
C 161	CKSRYP183K25	C 276	CKSRYP104K16
C 162	CKSRYP183K25	C 277	CKSRYP104K16
C 201	CKSRYP105K10	C 278	CKSYB475K10
C 202	CKSRYP105K10	C 279	CEV101M6R3
C 203	CKSRYP102K50	C 280	CEV221M4
C 204	CKSRYP102K50	C 281	CKSRYP102K50
C 205	CCSRCH221J50	C 282	CKSRYP104K16
C 206	CCSRCH221J50	C 283	CKSRYP104K16
C 209	CKSQYB225K10	C 284	CKSYB475K10
C 210	CKSQYB225K10	C 285	CKSRYP104K16
C 213	CKSYB475K10	C 286	CKSRYP104K16
C 215	CKSRYP105K10	C 287	CKSRYP105K10
C 216	CKSRYP105K10	C 289	CKSRYP103K50
C 217	CKSRYP105K10	C 290	CKSRYP103K50
C 218	CKSRYP105K10	C 291	CKSYB106K6R3
C 219	CKSRYP105K10	C 301	CCSRCH101J50
C 220	CKSRYP105K10	C 302	CCSRCH101J50
C 221	CCSRCH221J50	C 303	CCSRCH101J50
C 222	CCSRCH221J50	C 304	CCSRCH101J50
C 223	CCSRCH221J50	C 305	CCSRCH101J50
C 224	CCSRCH221J50	C 306	CCSRCH101J50
C 225	CCSRCH221J50	C 307	CKSRYP103K50
C 226	CCSRCH221J50	C 309	CCSRCH101J50
C 227	CCSRCH151J50	C 310	CCSRCH101J50
C 228	CCSRCH151J50	C 331	CKSRYP474K10
C 229	CCSRCH151J50	C 332	CKSRYP474K10
C 230	CCSRCH151J50	C 333	CKSRYP474K10
C 231	CCSRCH151J50	C 334	CKSRYP474K10
C 232	CCSRCH151J50	C 335	CKSRYP474K10
C 233	CCSRCH151J50	C 336	CKSRYP474K10
C 234	CCSRCH151J50	C 337	CKSRYP474K10
C 235	CCSRCH151J50	C 338	CKSRYP474K10
C 236	CCSRCH151J50	C 339	CEHAR330M10
C 237	CCSRCH151J50	C 340	CCH1125
C 238	CCSRCH151J50	C 341	CKSRYP104K16
C 239	CKSQYB225K10	C 342	CEHAR100M16
C 240	CKSQYB225K10	C 343	CKSYB225K16
C 241	CKSQYB225K10	C 344	CKSYB225K16
C 242	CKSQYB225K10	C 351	CEAL100M16
C 243	CKSQYB225K10	C 352	CEAL100M16
C 244	CKSQYB225K10	C 353	CEAL100M16
C 251	CKSRYP105K10	C 354	CEAL100M16
C 252	CKSRYP105K10	C 355	CEAL100M16
C 253	CKSRYP105K10	C 356	CEAL100M16
C 254	CKSRYP105K10	C 357	CCSRCH221J50
C 255	CKSRYP105K10	C 358	CCSRCH221J50
C 256	CKSRYP105K10	C 359	CCSRCH221J50
C 257	CSZSR100M16	C 360	CCSRCH221J50
C 258	CSZSR100M16	C 361	CCSRCH221J50
C 259	CKSYB475K10	C 362	CCSRCH221J50
C 261	CKSRYP102K50	C 370	CKSRYP105K10
C 262	CKSRYP102K50	C 371	CKSRYP103K50
C 263	CKSYB475K10	C 372	CKSRYP103K50
C 264	CKSRYP104K16	C 376	CCSRCH7R0D50
C 265	CKSRYP104K16	C 381	CKSRYP104K16
C 266	CKSRYP104K16	C 382	CSZSR100M10
C 267	CKSRYP104K16	C 383	CSZSR100M10

3300μF/16V

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 384	CKSBYB105K10	C 741	CKSBYB103K50
C 385	CKSQYB225K10	C 742	CKSBYB103K50
C 386	CKSQYB225K10	C 743	CEAL470M6R3
C 387	CKSQYB225K10	C 744	CKSBYB104K16
C 388	CKSQYB225K10	C 745	CKSBYB104K16
C 389	CKSBYB105K10	C 747	CKSBYB475K10
C 390	CKSBYB105K10	C 748	CKSBYB103K50
C 391	CKSBYB105K10	C 749	CEAL470M6R3
C 392	CKSBYB104K16	C 750	CKSBYB105K10
C 393	CKSBYB472K50	C 755	CKSBYB104K16
C 394	CKSBYB472K50	C 761	CKSBYB103K50
C 403	CKSBYB473K50	C 762	CKSBYB103K50
C 404	CEJQ101M10	C 763	CEAL220M16
C 405	CKSBYB103K50	C 771	CKSBYB103K50
C 406	CEJQ220M10	C 772	CKSBYB103K50
C 407	CKSQYB103K50	C 773	CEAL220M16
C 408	CKSBYB223K50	C 805	CEJQ470M10
C 409	CKSBYB223K50	C 807	CKSBYB102K50
C 411	CKSBYB472K50	C 808	CKSBYB475K16
C 416	CKSBYB473K50	C 809	CKSBYB104K16
C 420	CCSRCH101J50	C 810	CEJQ470M10
C 421	CKSBYB104K16	C 811	CKSBYB103K50
C 422	CKSBYB104K16	C 812	CKSBYB475K16
C 424	CKSBYB103K50	C 814	CKSBYB103K50
C 512	CKSBYB104K16	C 815	CKSBYB104K16
C 551	CEAL470M10	C 816	CEJQ470M10
C 552	CEAL100M16	C 817	CKSBYB475K16
C 553	CEAL100M16	C 818	CEVQ220M16
C 554	CKSBYB104K16	C 820	CKSBYB475K16
C 555	CKSBYB104K16	C 827	CKSBYB103K50
C 556	CKSBYB104K16	C 828	CCSRCH101J50
C 557	CKSBYB104K16	C 831	CCSRCH470J50
C 558	CKSBYB104K16	C 832	CCSRCH470J50
C 559	CKSBYB105K10	C 833	CKSBYB475K10
C 560	CKSBYB105K10	C 835	CKSBYB475K10
C 561	CKSBYB222K50	C 836	CKSBYB475K10
C 562	CKSBYB222K50	C 837	CKSBYB475K10
C 563	CKSBYB103K50	C 838	CKSBYB475K10
C 591	CEJQ100M16	C 839	CKSBYB105K10
C 592	CKSBYB103K50	C 840	CKSBYB105K10
C 593	CKSBYB103K50	C 851	CKSBYB104K16
C 601	CCSRCH220J50	C 902	CKSBYB102K50
C 602	CCSRCH150J50	C 903	CKSBYB102K50
C 604	CKSBYB103K50	C 904	CKSBYB102K50
C 605	CKSBYB475K10	C 905	CKSBYB102K50
C 607	CCSRCH101J50	C 906	CKSBYB102K50
C 631	CKSBYB103K50	C 907	CKSBYB102K50
C 632	CKSBYB103K50	C 908	CKSBYB102K50
C 633	CKSBYB103K50	C 909	CKSBYB102K50
C 701	CKSBYB225K16	C 911	CEHAT102M16
C 702	CKSQYB104K16	C 912	CKSBYB103K50
C 703	CKSBYB225K16	C 913	CEAL470M10
C 704	CKSQYB104K16	C 914	CKSBYB103K50
C 705	CKSQYB104K16	C 915	CKSBYB103K50
C 706	CKSQYB104K16	C 916	CEAL470M16
C 707	CKSBYB225K16	C 917	CKSBYB103K50
C 708	CEAL101M10	C 918	CCH1439
C 709	CKSBYB225K16	C 921	CEALR33M50
C 710	CKSBYB104K16	C 922	CEAL470M10
C 731	CKSBYB103K50	C 923	CKSBYB103K50
C 732	CKSBYB103K50	C 931	CKSBYB105K16
C 733	CEAL220M16	C 933	CKSBYB103K50
C 734	CEAL101M10	C 961	CKSBYB102K50
C 735	CKSBYB104K16	C 962	CKSBYB104K16
C 736	CKSBYB104K16	C 963	CEJQ2R2M50

2200μF/16V

72

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
D 994 Diode	DAN202U	R 106	RS1/16S562J
ZNR 451 Surge Protector	DSPS-201M-S00B	R 107	RS1/16S332J
L 101 Inductor	LAU3R3K	R 108	RS1/16S181J
L 102 Inductor	CTF1399	R 109	RS1/16S181J
L 131 Inductor	CTF1399	R 110	RS1/16S223J
L 132 Inductor	CTF1399	R 111	RS1/16S223J
L 133 Inductor	CTF1399	R 112	RS1/16S102J
L 134 Inductor	CTF1399	R 113	RS1/16S102J
L 201 Inductor	CTF1379	R 131	RS1/16S104J
L 202 Inductor	CTF1379	R 132	RS1/16S222J
L 215 Inductor	CTF1379	R 133	RS1/16S103J
L 216 Inductor	CTF1379	R 134	RS1/16S561J
L 217 Inductor	CTF1379	R 135	RS1/16S223J
L 218 Inductor	CTF1379	R 136	RS1/16S473J
L 219 Inductor	CTF1379	R 137	RS1/16S153J
L 220 Inductor	CTF1379	R 138	RS1/16S683J
L 261 Inductor	CTF1379	R 139	RS1/16S152J
L 262 Ferri-Inductor	LAU101K	R 140	RS1/16S682J
L 263 Ferri-Inductor	LAU151K	R 141	RS1/16S222J
L 291 Inductor	CTF1399	R 142	RS1/16S152J
L 361 Filter	CTF1071	R 143	RS1/16S152J
L 371 Inductor	CTF1379	R 144	RS1/16S104J
L 372 Inductor	CTF1379	R 145	RS1/16S101J
L 376 Inductor	LCYC4R7K1608	R 146	RS1/16S563J
L 377 Inductor	CTF1357	R 147	RS1/16S102J
L 401 Inductor	LAU100K	R 148	RS1/16S103J
L 402 Inductor	LCTB4R7K2125	R 149	RS1/16S103J
L 404 Ferri-Inductor	LAU2R2K	R 150	RS1/16S153J
L 405 Inductor	CTF1399	R 151	RS1/16S153J
L 491 Inductor	CTF1399	R 152	RS1/16S223J
L 501 Inductor	LCTB1R0K2125	R 153	RN1/16SE4702D
L 502 Inductor	CTF1378	R 154	RN1/16SE4702D
L 504 Inductor	CTF1378	R 160	RS1/16S473J
L 505 Inductor	CTF1389	R 161	RS1/16S162J
L 506 Inductor	CTF1378	R 162	RS1/16S162J
L 551 Ferri-Inductor	LAU2R2K	R 163	RS1/16S272J
L 601 Inductor	LAU100K	R 164	RS1/16S272J
L 701 Inductor	CTF1379	R 165	RS1/16S104J
L 731 Inductor	CTF1484	R 166	RS1/16S104J
L 741 Ferri-Inductor	LAU2R2K	R 173	RS1/16S224J
L 742 Inductor	LAU1R0K	R 174	RS1/16S224J
L 761 Inductor	LAU100K	R 175	RS1/16S222J
L 771 Inductor	LAU100K	R 176	RS1/16S222J
L 801 Inductor	LAU100K	R 177	RS1/16S223J
L 802 Inductor	CTF1489	R 178	RS1/16S223J
L 803 Inductor	CTF1488	R 179	RS1/16S224J
L 804 Inductor	CTF1488	R 180	RS1/16S473J
L 951 Ferri-Inductor	LAU2R2K	R 201	RS1/16S474J
L 971 Ferri-Inductor	LAU2R2K	R 202	RS1/16S474J
L 972 Inductor	LAU1R0K	R 203	RS1/16S223J
L 973 Ferri-Inductor	LAU2R2K	R 204	RS1/16S223J
X 261 Radiator 16.9344MHz	CSS1463	R 205	RS1/16S472J
X 291 Radiator 10.00MHz	CSS1428	R 206	RS1/16S472J
X 501 Crystal Resonator 3.648MHz	CSS1447	R 207	RS1/16S225J
X 601 Radiator 10.00MHz	CSS1475	R 208	RS1/16S155J
VR 141 Semi-fixed 10kΩ(B)	CCP1448	R 215	RS1/16S474J
FU 701 Fuse 3.15A	CEK1207	R 216	RS1/16S474J
MIC 141 Microphone	CPM1011	R 217	RS1/16S474J
FM/AM Tuner Unit	CWE1604	R 218	RS1/16S474J
BZ 641 Buzzer	CPV1050	R 219	RS1/16S474J
Fan Motor	CXM1186	R 220	RS1/16S474J
		R 221	RS1/16S222J
		R 222	RS1/16S222J
		R 223	RS1/16S222J
		R 224	RS1/16S222J
RESISTORS			
R 101	RS1/16S101J		
R 102	RS1/16S620J		
R 103	RS1/16S101J		
R 104	RS1/16S222J		
R 105	RS1/16S103J		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 225	RS1/16S222J	R 317	RS1/16S102J
R 226	RS1/16S222J	R 318	RS1/16S473J
R 227	RS1/16S333J	R 321	RS1/16S472J
R 228	RS1/16S333J	R 322	RS1/16S104J
R 229	RS1/16S333J	R 325	RS1/16S102J
R 230	RS1/16S333J	R 326	RS1/16S0R0J
R 231	RS1/16S333J	R 327	RS1/16S473J
R 232	RS1/16S333J	R 328	RS1/16S473J
R 233	RS1/16S273J	R 329	RAB4C681J
R 234	RS1/16S273J	R 331	RS1/16S103J
R 235	RS1/16S273J	R 332	RS1/16S103J
R 236	RS1/16S273J	R 333	RS1/16S103J
R 237	RS1/16S273J	R 334	RS1/16S331J
R 238	RS1/16S273J	R 351	RS1/16S821J
R 239	RS1/16S183J	R 352	RS1/16S821J
R 240	RS1/16S183J	R 353	RS1/16S821J
R 241	RS1/16S183J	R 354	RS1/16S821J
R 242	RS1/16S183J	R 355	RS1/16S821J
R 243	RS1/16S183J	R 356	RS1/16S821J
R 244	RS1/16S183J	R 357	RS1/16S223J
R 245	RS1/16S273J	R 358	RS1/16S223J
R 246	RS1/16S273J	R 359	RS1/16S223J
R 247	RS1/16S273J	R 360	RS1/16S223J
R 248	RS1/16S273J	R 361	RS1/16S223J
R 249	RS1/16S273J	R 362	RS1/16S223J
R 250	RS1/16S273J	R 366	RS1/16S101J
R 251	RS1/16S103J	R 367	RS1/16S0R0J
R 252	RS1/16S103J	R 369	RS1/16S0R0J
R 253	RS1/16S103J	R 371	RS1/16S102J
R 254	RS1/16S103J	R 372	RS1/16S102J
R 261	RS1/16S331J	R 373	RS1/16S102J
R 262	RAB4C221J	R 374	RS1/16S102J
R 263	RS1/16S221J	R 375	RS1/16S102J
R 264	RS1/16S221J	R 376	RS1/16S102J
R 265	RS1/16S221J	R 377	RS1/16S102J
R 266	RS1/16S102J	R 378	RS1/16S102J
R 267	RS1/16S221J	R 379	RS1/16S221J
R 282	RS1/16S103J	R 380	RS1/16S221J
R 283	RS1/16S103J	R 381	RS1/16S682J
R 284	RS1/16S153J	R 385	RS1/10S0R0J
R 291	RAB4C681J	R 401	RS1/16S473J
R 292	RS1/16S473J	R 402	RS1/16S473J
R 293	RS1/16S102J	R 403	RS1/16S681J
R 294	RS1/16S473J	R 404	RS1/16S681J
R 295	RS1/16S102J	R 405	RS1/16S681J
R 296	RS1/16S105J	R 406	RS1/16S102J
R 297	RS1/16S102J	R 407	RS1/16S473J
R 298	RS1/16S471J	R 409	RS1/16S681J
R 299	RS1/16S102J	R 410	RS1/16S103J
R 300	RAB4C473J	R 411	RS1/16S681J
R 301	RAB4C681J	R 412	RS1/16S681J
R 302	RS1/16S222J	R 413	RS1/16S681J
R 303	RS1/16S104J	R 414	RS1/16S473J
R 304	RAB4C471J	R 415	RS1/16S472J
R 305	RS1/16S473J	R 416	RS1/16S473J
R 306	RS1/16S102J	R 417	RS1/16S473J
R 307	RS1/16S102J	R 418	RS1/16S473J
R 308	RS1/16S473J	R 419	RS1/16S222J
R 309	RS1/16S102J	R 420	RS1/16S222J
R 310	RS1/16S102J	R 421	RS1/16S681J
R 312	RS1/16S104J	R 422	RS1/16S681J
R 313	RS1/16S222J	R 423	RS1/16S0R0J
R 314	RS1/16S222J	R 424	RS1/16S393J
R 315	RS1/16S473J	R 426	RS1/16S153J
R 316	RAB4C0R0J	R 427	RS1/16S474J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 428	RS1/16S681J	R 706	RS1/10S0R0J
R 430	RS1/16S0R0J	R 761	RS1/16S472J
R 431	RS1/16S0R0J	R 762	RS1/16S102J
R 501	RS1/16S102J	R 801	RS1/10S222J
R 502	RS1/16S102J	R 802	RS1/10S222J
R 503	RS1/16S102J	R 803	RS1/10S222J
R 504	RS1/16S681J	R 804	RS1/10S103J
R 505	RS1/16S102J	R 805	RS1/10S472J
R 506	RS1/16S225J	R 810	RS1/16S221J
R 507	RS1/16S0R0J	R 811	RS1/16S221J
R 551	RS1/16S222J	R 812	RS1/16S821J
R 552	RS1/16S102J	R 813	RS1/16S681J
R 553	RS1/16S102J	R 817	RS1/16S473J
R 554	RS1/16S102J	R 820	RS1/10S1R0J
R 555	RS1/16S222J	R 823	RS1/10S222J
R 556	RS1/16S222J	R 824	RS1/10S222J
R 557	RS1/16S222J	R 825	RS1/10S221J
R 558	RS1/16S681J	R 826	RS1/10S221J
R 559	RS1/16S681J	R 831	RS1/16S102J
R 560	RS1/16S332J	R 832	RS1/16S102J
R 561	RS1/16S332J	R 833	RS1/16S333J
R 562	RS1/16S332J	R 834	RS1/16S333J
R 563	RS1/16S332J	R 835	RS1/16S473J
R 564	RS1/16S101J	R 836	RS1/16S473J
R 565	RS1/16S101J	R 837	RS1/16S223J
R 591	RS1/10S1R0J	R 838	RS1/16S223J
R 592	RS1/16S102J	R 839	RS1/16S102J
R 593	RS1/16S102J	R 840	RS1/16S102J
R 601	RS1/16S473J	R 851	RS1/16S182J
R 602	RS1/16S102J	R 855	RS1/16S560J
R 603	RS1/16S473J	R 856	RS1/16S222J
R 604	RS1/16S472J	R 857	RS1/16S222J
R 605	RS1/16S221J	R 858	RS1/16S222J
R 606	RS1/16S682J	R 859	RS1/16S102J
R 607	RS1/16S221J	R 912	RS1/16S562J
R 608	RS1/16S682J	R 913	RS1/16S101J
R 609	RS1/16S102J	R 914	RS1/10S0R0J
R 610	RS1/16S102J	R 915	RS1/16S123J
R 613	RS1/16S473J	R 916	RS1/16S471J
R 615	RS1/16S221J	R 921	RS1/16S681J
R 616	RS1/16S682J	R 922	RS1/16S561J
R 617	RS1/16S221J	R 931	RS1/10S472J
R 618	RS1/16S682J	R 932	RS1/16S473J
R 619	RS1/16S221J	R 933	RS1/16S103J
R 620	RS1/16S473J	R 934	RS1/16S473J
R 621	RS1/16S221J	R 935	RS1/16S104J
R 622	RS1/16S682J	R 936	RS1/16S103J
R 623	RS1/16S102J	R 937	RS1/16S473J
R 624	RS1/16S473J	R 938	RS1/16S102J
R 625	RS1/16S473J	R 951	RS1/10S153J
R 631	RS1/16S473J	R 952	RS1/16S472J
R 632	RS1/16S0R0J	R 953	RS1/16S472J
R 633	RS1/16S0R0J	R 954	RS1/16S102J
R 634	RS1/16S0R0J	R 961	RS1/16S102J
R 635	RS1/16S0R0J	R 962	RS1/16S102J
R 636	RS1/16S0R0J	R 963	RS1/16S473J
R 637	RS1/16S473J	R 964	RS1/16S822J
R 639	RS1/16S473J	R 965	RS1/16S102J
R 641	RS1/16S102J	R 971	RS1/16S472J
R 651	RS1/16S473J	R 972	RS1/16S102J
R 701	RS1/10S102J	R 973	RS1/16S473J
R 702	RS1/10S102J	R 974	RS1/16S473J
R 703	RS1/10S102J	R 975	RS1/16S473J
R 704	RS1/10S102J	R 976	RS1/16S0R0J
R 705	RS1/10S102J	R 987	RS1/16S101J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 991	RS1/16S223J	C 237	CCSRCH151J50
R 992	RS1/16S473J	C 238	CCSRCH151J50
R 993	RS1/16S104J	C 239	CKSQYB225K10
R 994	RS1/16S473J	C 240	CKSQYB225K10
R 995	RS1/16S224J	C 241	CKSQYB225K10
R 996	RS1/16S473J	C 242	CKSQYB225K10
R 997	RS1/16S102J	C 243	CKSQYB225K10
		C 244	CKSQYB225K10
		C 251	CKSRYB105K10
		C 252	CKSRYB105K10
CAPACITORS			
C 101	CKSRYB104K16	C 253	CKSRYB105K10
C 102	CKSRYB104K16	C 254	CKSRYB105K10
C 103	CKSRYB104K16	C 255	CKSRYB105K10
C 131	CKSRYB681K50	C 256	CKSRYB105K10
C 132	CEAL101M10	C 257	CSZSR100M16
C 133	CKSQYB225K10		
C 141	CEJQ470M10	C 258	CSZSR100M16
C 142	CKSRYB105K10	C 259	CKSYB475K10
C 143	CKSRYB105K10	C 261	CKSRYB102K50
C 144	CCSRCH101J50	C 262	CKSRYB102K50
		C 263	CKSYB475K10
C 145	CKSYB475K16		
C 146	CKSRYB105K10	C 264	CKSRYB104K16
C 147	CKSRYB104K16	C 265	CKSRYB104K16
C 148	CKSYB475K16	C 266	CKSRYB104K16
C 149	CKSRYB474K10	C 267	CKSRYB104K16
		C 268	CKSRYB104K16
C 150	CKSRYB105K10		
C 151	CKSRYB104K16	C 269	CKSRYB104K16
C 152	CKSYB106K6R3	C 270	CKSRYB104K16
C 153	CKSRYB104K16	C 271	CCSRCH180J50
C 161	CKSRYB123K25	C 272	CCSRCH180J50
		C 273	CKSRYB104K16
C 162	CKSRYB123K25		
C 171	CEJQ1R0M50	C 274	CKSRYB104K16
C 172	CEJQ1R0M50	C 275	CKSRYB104K16
C 173	CKSRYB223K50	C 276	CKSRYB104K16
C 201	CKSRYB105K10	C 277	CKSRYB104K16
		C 278	CKSYB475K10
C 202	CKSRYB105K10		
C 203	CKSRYB102K50	C 279	CEV101M6R3
C 204	CKSRYB102K50	C 280	CEV221M4
C 205	CCSRCH221J50	C 281	CKSRYB102K50
C 206	CCSRCH221J50	C 282	CKSRYB104K16
		C 283	CKSRYB104K16
C 209	CKSQYB225K10		
C 210	CKSQYB225K10	C 284	CKSYB475K10
C 213	CKSYB475K10	C 285	CKSRYB104K16
C 215	CKSRYB105K10	C 286	CKSRYB104K16
C 216	CKSRYB105K10	C 287	CKSRYB105K10
		C 289	CKSRYB103K50
C 217	CKSRYB105K10		
C 218	CKSRYB105K10	C 290	CKSRYB103K50
C 219	CKSRYB105K10	C 291	CKSYB106K6R3
C 220	CKSRYB105K10	C 301	CCSRCH101J50
C 221	CCSRCH221J50	C 302	CCSRCH101J50
		C 303	CCSRCH101J50
C 222	CCSRCH221J50		
C 223	CCSRCH221J50	C 304	CCSRCH101J50
C 224	CCSRCH221J50	C 305	CCSRCH101J50
C 225	CCSRCH221J50	C 306	CCSRCH101J50
C 226	CCSRCH221J50	C 307	CKSRYB103K50
		C 309	CCSRCH101J50
C 227	CCSRCH151J50		
C 228	CCSRCH151J50	C 310	CCSRCH101J50
C 229	CCSRCH151J50	C 331	CKSRYB474K10
C 230	CCSRCH151J50	C 332	CKSRYB474K10
C 231	CCSRCH151J50	C 333	CKSRYB474K10
		C 334	CKSRYB474K10
C 232	CCSRCH151J50		
C 233	CCSRCH151J50	C 335	CKSRYB474K10
C 234	CCSRCH151J50	C 336	CKSRYB474K10
C 235	CCSRCH151J50	C 337	CKSRYB474K10
C 236	CCSRCH151J50	C 338	CKSRYB474K10
		C 339	CEHAR330M10

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 340 3300μF/16V	CCH1125	C 553	CEAL100M16
C 341	CKSRYB104K16	C 554	CKSRYB104K16
C 342	CEHAR100M16	C 555	CKSRYB104K16
C 343	CKSYB225K16	C 556	CKSRYB104K16
C 344	CKSYB225K16	C 557	CKSRYB104K16
C 351	CEAL100M16	C 558	CKSRYB104K16
C 352	CEAL100M16	C 559	CKSRYB105K10
C 353	CEAL100M16	C 560	CKSRYB105K10
C 354	CEAL100M16	C 561	CKSRYB222K50
C 355	CEAL100M16	C 562	CKSRYB222K50
C 356	CEAL100M16	C 563	CKSRYB103K50
C 357	CCSRCH221J50	C 591	CEJQ100M16
C 358	CCSRCH221J50	C 592	CKSRYB103K50
C 359	CCSRCH221J50	C 593	CKSRYB103K50
C 360	CCSRCH221J50	C 601	CCSRCH220J50
C 361	CCSRCH221J50	C 602	CCSRCH150J50
C 362	CCSRCH221J50	C 604	CKSRYB103K50
C 370	CKSRYB105K10	C 605	CKSYB475K10
C 371	CKSRYB103K50	C 607	CCSRCH101J50
C 372	CKSRYB103K50	C 631	CKSRYB103K50
C 376	CCSRCH7R0D50	C 632	CKSRYB103K50
C 381	CKSRYB104K16	C 633	CKSRYB103K50
C 382	CSZSR100M10	C 701	CKSYB225K16
C 383	CSZSR100M10	C 702	CKSQYB104K16
C 384	CKSRYB105K10	C 703	CKSYB225K16
C 385	CKSQYB225K10	C 704	CKSQYB104K16
C 386	CKSQYB225K10	C 705	CKSQYB104K16
C 387	CKSQYB225K10	C 706	CKSQYB104K16
C 388	CKSQYB225K10	C 707	CKSYB225K16
C 389	CKSRYB105K10	C 708	CEAL101M10
C 390	CKSRYB105K10	C 709	CKSYB225K16
C 391	CKSRYB105K10	C 710	CKSRYB104K16
C 392	CKSRYB104K16	C 731	CKSRYB103K50
C 393	CKSRYB472K50	C 732	CKSRYB103K50
C 394	CKSRYB472K50	C 733	CEAL220M16
C 401	CKSRYB182K50	C 734	CEAL101M10
C 403	CKSRYB473K50	C 735	CKSRYB104K16
C 404	CEJQ101M10	C 736	CKSRYB104K16
C 405	CKSRYB103K50	C 741	CKSRYB103K50
C 406	CEJQ220M10	C 742	CKSRYB103K50
C 407	CKSQYB103K50	C 743	CEAL470M6R3
C 408	CKSRYB223K50	C 744	CKSRYB104K16
C 409	CKSRYB223K50	C 745	CKSRYB104K16
C 411	CKSRYB472K50	C 747	CKSYB475K10
C 412	CKSRYB472K50	C 748	CKSRYB103K50
C 416	CKSRYB473K50	C 749	CEAL470M6R3
C 420	CCSRCH101J50	C 750	CKSRYB105K10
C 421	CKSRYB104K16	C 755	CKSRYB104K16
C 422	CKSRYB104K16	C 761	CKSRYB103K50
C 423	CKSRYB104K16	C 762	CKSRYB103K50
C 424	CKSRYB103K50	C 763	CEAL220M16
C 501	CSZSC220M16	C 771	CKSRYB103K50
C 502	CCSRCH101J50	C 772	CKSRYB103K50
C 503	CCSRCH270J50	C 773	CEAL220M16
C 504	CCSRCH270J50	C 805	CEJQ470M10
C 505	CKSRYB104K16	C 807	CKSRYB102K50
C 506	CKSRYB471K50	C 808	CKSYB475K16
C 507	CKSRYB471K50	C 809	CKSRYB104K16
C 508	CKSRYB473K50	C 810	CEJQ470M10
C 509	CSZSC220M16	C 811	CKSRYB103K50
C 511	CKSRYB104K16	C 812	CKSYB475K16
C 512	CKSRYB104K16	C 814	CKSRYB103K50
C 515	CCSRCH101J50	C 815	CKSRYB104K16
C 551	CEAL470M10	C 816	CEJQ470M10
C 552	CEAL100M16	C 817	CKSYB475K16

78

====Circuit Symbol and No.===Part Name			Part No.	====Circuit Symbol and No.===Part Name			Part No.
D	381	Diode	DAN202U	L	731	Inductor	CTF1484
D	591	Diode	HZS12L(A1)	L	741	Ferri-Inductor	LAU2R2K
D	801	Diode Network	DA204U	L	742	Inductor	LAU1R0K
D	802	Diode Network	DA204U	L	761	Inductor	LAU100K
D	803	Diode Network	DA204U	L	771	Inductor	LAU100K
D	804	Diode Network	DA204U	L	801	Inductor	LAU100K
D	805	Diode	MA3062(M)	L	802	Inductor	CTF1489
D	806	Diode	HZS6L(B1)	L	803	Inductor	CTF1488
D	811	Diode Network	DA204U	L	804	Inductor	CTF1488
D	812	Diode Network	DA204U	L	951	Ferri-Inductor	LAU2R2K
D	813	Diode	HZS11L(A1)	L	971	Ferri-Inductor	LAU2R2K
D	814	Diode Network	DA204U	L	972	Inductor	LAU1R0K
D	815	Diode Network	DA204U	L	973	Ferri-Inductor	LAU2R2K
D	851	Diode	HZS9L(A2)	X	261	Radiator 16.9344MHz	CSS1463
D	901	Diode	MPG06G-6415G50	X	291	Radiator 10.00MHz	CSS1428
D	902	Diode	MPG06G-6415G50	X	601	Radiator 10.00MHz	CSS1475
D	903	Diode	MPG06G-6415G50	VR	141	Semi-fixed 10kΩ(B)	CCP1448
D	904	Diode	MPG06G-6415G50	FU	701	Fuse 3.15A	CEK1207
D	911	Diode	MPG06G-6415G50	MIC	141	Microphone	CPM1011
D	912	Diode	HZS6L(B1)			FM/AM Tuner Unit	CWE1605
D	913	Diode	MPG06G-6415G50	BZ	641	Buzzer	CPV1050
D	914	Diode	HZS9L(B1)			Fan Motor	CXM1186
D	921	Diode	HZS6L(C2)				
D	931	Diode	HZS7L(A1)				
D	932	Diode	HZS7L(C3)				
D	933	Diode	MPG06G-6415G50				
D	951	Diode	DAN202U	R	101		RS1/16S101J
D	961	Diode	MA152K	R	102		RS1/16S620J
D	971	Diode	IMN10	R	103		RS1/16S101J
D	991	Diode	DAN202U	R	104		RS1/16S222J
				R	105		RS1/16S103J
D	992	Diode	HZS9L(A2)	R	106		RS1/16S562J
D	993	Diode	1SS133	R	107		RS1/16S332J
D	994	Diode	DAN202U	R	108		RS1/16S181J
ZNR	451	Surge Protector	DSPS-201M-S00B	R	109		RS1/16S181J
L	101	Inductor	LAU3R3K	R	110		RS1/16S223J
L	102	Inductor	CTF1399	R	111		RS1/16S223J
L	131	Inductor	CTF1399	R	112		RS1/16S102J
L	132	Inductor	CTF1399	R	113		RS1/16S102J
L	133	Inductor	CTF1399	R	131		RS1/16S104J
L	134	Inductor	CTF1399	R	132		RS1/16S222J
L	201	Inductor	CTF1379	R	133		RS1/16S103J
L	202	Inductor	CTF1379	R	134		RS1/16S561J
L	215	Inductor	CTF1379	R	135		RS1/16S223J
L	216	Inductor	CTF1379	R	136		RS1/16S473J
L	217	Inductor	CTF1379	R	137		RS1/16S153J
L	218	Inductor	CTF1379	R	138		RS1/16S683J
L	219	Inductor	CTF1379	R	139		RS1/16S152J
L	220	Inductor	CTF1379	R	140		RS1/16S682J
L	261	Inductor	CTF1379	R	141		RS1/16S222J
L	262	Ferri-Inductor	LAU101K	R	142		RS1/16S152J
L	263	Ferri-Inductor	LAU151K	R	143		RS1/16S152J
L	291	Inductor	CTF1399	R	144		RS1/16S104J
L	361	Filter	CTF1071	R	145		RS1/16S101J
L	371	Inductor	CTF1379	R	146		RS1/16S563J
L	372	Inductor	CTF1379	R	147		RS1/16S102J
L	376	Inductor	LCYC4R7K1608	R	148		RS1/16S103J
L	377	Inductor	CTF1357	R	149		RS1/16S103J
L	401	Inductor	LAU100K	R	150		RS1/16S153J
L	402	Inductor	LCTB4R7K2125	R	151		RS1/16S153J
L	404	Ferri-Inductor	LAU2R2K	R	152		RS1/16S223J
L	405	Inductor	CTF1399	R	153		RN1/16SE4702D
L	491	Inductor	CTF1399	R	154		RN1/16SE4702D
L	551	Ferri-Inductor	LAU2R2K	R	160		RS1/16S473J
L	601	Inductor	LAU100K	R	161		RS1/16S272J
L	701	Inductor	CTF1379	R	162		RS1/16S272J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 163	RS1/16S162J	R 294	RS1/16S473J
R 164	RS1/16S162J	R 295	RS1/16S102J
R 171	RS1/16S0R0J	R 296	RS1/16S105J
R 172	RS1/16S0R0J	R 297	RS1/16S102J
R 201	RS1/16S474J	R 298	RS1/16S471J
R 202	RS1/16S474J	R 299	RS1/16S102J
R 203	RS1/16S223J	R 300	RAB4C473J
R 204	RS1/16S223J	R 301	RAB4C681J
R 205	RS1/16S472J	R 302	RS1/16S222J
R 206	RS1/16S472J	R 303	RS1/16S104J
R 207	RS1/16S225J	R 304	RAB4C471J
R 208	RS1/16S155J	R 305	RS1/16S473J
R 215	RS1/16S474J	R 306	RS1/16S102J
R 216	RS1/16S474J	R 307	RS1/16S102J
R 217	RS1/16S474J	R 308	RS1/16S473J
R 218	RS1/16S474J	R 309	RS1/16S102J
R 219	RS1/16S474J	R 310	RS1/16S102J
R 220	RS1/16S474J	R 312	RS1/16S104J
R 221	RS1/16S222J	R 313	RS1/16S222J
R 222	RS1/16S222J	R 314	RS1/16S222J
R 223	RS1/16S222J	R 315	RS1/16S473J
R 224	RS1/16S222J	R 316	RAB4C0R0J
R 225	RS1/16S222J	R 317	RS1/16S102J
R 226	RS1/16S222J	R 318	RS1/16S473J
R 227	RS1/16S333J	R 321	RS1/16S472J
R 228	RS1/16S333J	R 322	RS1/16S104J
R 229	RS1/16S333J	R 325	RS1/16S102J
R 230	RS1/16S333J	R 326	RS1/16S0R0J
R 231	RS1/16S333J	R 327	RS1/16S473J
R 232	RS1/16S333J	R 328	RS1/16S473J
R 233	RS1/16S273J	R 329	RAB4C681J
R 234	RS1/16S273J	R 331	RS1/16S103J
R 235	RS1/16S273J	R 332	RS1/16S103J
R 236	RS1/16S273J	R 333	RS1/16S103J
R 237	RS1/16S273J	R 334	RS1/16S331J
R 238	RS1/16S273J	R 351	RS1/16S821J
R 239	RS1/16S183J	R 352	RS1/16S821J
R 240	RS1/16S183J	R 353	RS1/16S821J
R 241	RS1/16S183J	R 354	RS1/16S821J
R 242	RS1/16S183J	R 355	RS1/16S821J
R 243	RS1/16S183J	R 356	RS1/16S821J
R 244	RS1/16S183J	R 357	RS1/16S223J
R 245	RS1/16S273J	R 358	RS1/16S223J
R 246	RS1/16S273J	R 359	RS1/16S223J
R 247	RS1/16S273J	R 360	RS1/16S223J
R 248	RS1/16S273J	R 361	RS1/16S223J
R 249	RS1/16S273J	R 362	RS1/16S223J
R 250	RS1/16S273J	R 366	RS1/16S101J
R 251	RS1/16S103J	R 367	RS1/16S0R0J
R 252	RS1/16S103J	R 369	RS1/16S0R0J
R 253	RS1/16S103J	R 371	RS1/16S102J
R 254	RS1/16S103J	R 372	RS1/16S102J
R 261	RS1/16S331J	R 373	RS1/16S102J
R 262	RAB4C221J	R 374	RS1/16S102J
R 263	RS1/16S221J	R 375	RS1/16S102J
R 264	RS1/16S221J	R 376	RS1/16S102J
R 265	RS1/16S221J	R 377	RS1/16S102J
R 266	RS1/16S102J	R 378	RS1/16S102J
R 267	RS1/16S221J	R 379	RS1/16S221J
R 282	RS1/16S103J	R 380	RS1/16S221J
R 283	RS1/16S103J	R 381	RS1/16S682J
R 284	RS1/16S153J	R 385	RS1/10S0R0J
R 291	RAB4C681J	R 401	RS1/16S473J
R 292	RS1/16S473J	R 402	RS1/16S473J
R 293	RS1/16S102J	R 403	RS1/16S681J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 404	RS1/16S681J	R 637	RS1/16S473J
R 409	RS1/16S681J	R 639	RS1/16S473J
R 410	RS1/16S103J	R 641	RS1/16S102J
R 411	RS1/16S681J	R 651	RS1/16S473J
R 412	RS1/16S681J	R 701	RS1/10S102J
R 413	RS1/16S681J	R 702	RS1/10S102J
R 414	RS1/16S473J	R 703	RS1/10S102J
R 415	RS1/16S472J	R 704	RS1/10S102J
R 416	RS1/16S473J	R 705	RS1/10S102J
R 417	RS1/16S473J	R 706	RS1/10S0R0J
R 418	RS1/16S473J	R 761	RS1/16S472J
R 419	RS1/16S222J	R 762	RS1/16S102J
R 420	RS1/16S222J	R 801	RS1/10S222J
R 423	RS1/16S0R0J	R 802	RS1/10S222J
R 424	RS1/16S393J	R 803	RS1/10S222J
R 430	RS1/16S0R0J	R 804	RS1/10S103J
R 431	RS1/16S0R0J	R 805	RS1/10S472J
R 507	RS1/16S0R0J	R 810	RS1/16S221J
R 551	RS1/16S222J	R 811	RS1/16S221J
R 552	RS1/16S102J	R 812	RS1/16S821J
R 553	RS1/16S102J	R 813	RS1/16S681J
R 554	RS1/16S102J	R 817	RS1/16S473J
R 555	RS1/16S222J	R 820	RS1/10S1R0J
R 556	RS1/16S222J	R 823	RS1/10S222J
R 557	RS1/16S222J	R 824	RS1/10S222J
R 558	RS1/16S681J	R 825	RS1/10S221J
R 559	RS1/16S681J	R 826	RS1/10S221J
R 560	RS1/16S332J	R 831	RS1/16S102J
R 561	RS1/16S332J	R 832	RS1/16S102J
R 562	RS1/16S332J	R 833	RS1/16S333J
R 563	RS1/16S332J	R 834	RS1/16S333J
R 564	RS1/16S101J	R 835	RS1/16S473J
R 565	RS1/16S101J	R 836	RS1/16S473J
R 591	RS1/10S1R0J	R 837	RS1/16S223J
R 592	RS1/16S102J	R 838	RS1/16S223J
R 593	RS1/16S102J	R 839	RS1/16S102J
R 601	RS1/16S473J	R 840	RS1/16S102J
R 602	RS1/16S102J	R 851	RS1/16S182J
R 603	RS1/16S473J	R 855	RS1/16S560J
R 604	RS1/16S472J	R 856	RS1/16S222J
R 605	RS1/16S221J	R 857	RS1/16S222J
R 606	RS1/16S682J	R 858	RS1/16S222J
R 607	RS1/16S221J	R 859	RS1/16S102J
R 608	RS1/16S682J	R 912	RS1/16S562J
R 609	RS1/16S102J	R 913	RS1/16S101J
R 610	RS1/16S102J	R 914	RS1/10S0R0J
R 613	RS1/16S473J	R 915	RS1/16S123J
R 615	RS1/16S221J	R 916	RS1/16S471J
R 616	RS1/16S682J	R 921	RS1/16S681J
R 617	RS1/16S221J	R 922	RS1/16S561J
R 618	RS1/16S682J	R 931	RS1/10S472J
R 619	RS1/16S221J	R 932	RS1/16S473J
R 620	RS1/16S473J	R 933	RS1/16S103J
R 621	RS1/16S221J	R 934	RS1/16S473J
R 622	RS1/16S682J	R 935	RS1/16S104J
R 623	RS1/16S102J	R 936	RS1/16S103J
R 624	RS1/16S473J	R 937	RS1/16S473J
R 625	RS1/16S473J	R 938	RS1/16S102J
R 626	RS1/16S473J	R 951	RS1/10S153J
R 631	RS1/16S473J	R 952	RS1/16S472J
R 632	RS1/16S0R0J	R 953	RS1/16S472J
R 633	RS1/16S0R0J	R 954	RS1/16S102J
R 634	RS1/16S0R0J	R 961	RS1/16S102J
R 635	RS1/16S0R0J	R 962	RS1/16S102J
R 636	RS1/16S0R0J	R 963	RS1/16S473J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 964	RS1/16S822J	C 230	CCSRCH151J50
R 965	RS1/16S102J	C 231	CCSRCH151J50
R 971	RS1/16S472J	C 232	CCSRCH151J50
R 972	RS1/16S102J	C 233	CCSRCH151J50
R 973	RS1/16S473J	C 234	CCSRCH151J50
R 974	RS1/16S473J	C 235	CCSRCH151J50
R 975	RS1/16S473J	C 236	CCSRCH151J50
R 976	RS1/16S0R0J	C 237	CCSRCH151J50
R 987	RS1/16S101J	C 238	CCSRCH151J50
R 991	RS1/16S223J	C 239	CKSQYB225K10
R 992	RS1/16S473J	C 240	CKSQYB225K10
R 993	RS1/16S104J	C 241	CKSQYB225K10
R 994	RS1/16S473J	C 242	CKSQYB225K10
R 995	RS1/16S224J	C 243	CKSQYB225K10
R 996	RS1/16S473J	C 244	CKSQYB225K10
R 997	RS1/16S102J	C 251	CKSRYB105K10
CAPACITORS		C 252	CKSRYB105K10
C 101	CKSRYB104K16	C 253	CKSRYB105K10
C 102	CKSRYB104K16	C 254	CKSRYB105K10
C 103	CKSRYB104K16	C 255	CKSRYB105K10
C 131	CKSRYB681K50	C 256	CKSRYB105K10
C 132	CEAL101M10	C 257	CSZSR100M16
C 133	CKSQYB225K10	C 258	CSZSR100M16
C 141	CEJQ470M10	C 259	CKSYB475K10
C 142	CKSRYB105K10	C 261	CKSRYB102K50
C 143	CKSRYB105K10	C 262	CKSRYB102K50
C 144	CCSRCH101J50	C 263	CKSYB475K10
C 145	CKSYB475K16	C 264	CKSRYB104K16
C 146	CKSRYB105K10	C 265	CKSRYB104K16
C 147	CKSRYB104K16	C 266	CKSRYB104K16
C 148	CKSYB475K16	C 267	CKSRYB104K16
C 149	CKSRYB474K10	C 268	CKSRYB104K16
C 150	CKSRYB105K10	C 269	CKSRYB104K16
C 151	CKSRYB104K16	C 270	CKSRYB104K16
C 152	CKSYB106K6R3	C 271	CCSRCH180J50
C 153	CKSRYB104K16	C 272	CCSRCH180J50
C 161	CKSRYB183K25	C 273	CKSRYB104K16
C 162	CKSRYB183K25	C 274	CKSRYB104K16
C 201	CKSRYB105K10	C 275	CKSRYB104K16
C 202	CKSRYB105K10	C 276	CKSRYB104K16
C 203	CKSRYB102K50	C 277	CKSRYB104K16
C 204	CKSRYB102K50	C 278	CKSYB475K10
C 205	CCSRCH221J50	C 279	CEV101M6R3
C 206	CCSRCH221J50	C 280	CEV221M4
C 209	CKSQYB225K10	C 281	CKSRYB102K50
C 210	CKSQYB225K10	C 282	CKSRYB104K16
C 213	CKSYB475K10	C 283	CKSRYB104K16
C 215	CKSRYB105K10	C 284	CKSYB475K10
C 216	CKSRYB105K10	C 285	CKSRYB104K16
C 217	CKSRYB105K10	C 286	CKSRYB104K16
C 218	CKSRYB105K10	C 287	CKSRYB105K10
C 219	CKSRYB105K10	C 289	CKSRYB103K50
C 220	CKSRYB105K10	C 290	CKSRYB103K50
C 221	CCSRCH221J50	C 291	CKSYB106K6R3
C 222	CCSRCH221J50	C 301	CCSRCH101J50
C 223	CCSRCH221J50	C 302	CCSRCH101J50
C 224	CCSRCH221J50	C 303	CCSRCH101J50
C 225	CCSRCH221J50	C 304	CCSRCH101J50
C 226	CCSRCH221J50	C 305	CCSRCH101J50
C 227	CCSRCH151J50	C 306	CCSRCH101J50
C 228	CCSRCH151J50	C 307	CKSRYB103K50
C 229	CCSRCH151J50	C 309	CCSRCH101J50
		C 310	CCSRCH101J50
		C 331	CKSRYB474K10
		C 332	CKSRYB474K10

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 333	CKSRYPB474K10	C 559	CKSRYPB105K10
C 334	CKSRYPB474K10	C 560	CKSRYPB105K10
C 335	CKSRYPB474K10	C 561	CKSRYPB222K50
C 336	CKSRYPB474K10	C 562	CKSRYPB222K50
C 337	CKSRYPB474K10	C 563	CKSRYPB103K50
C 338	CKSRYPB474K10	C 591	CEJQ100M16
C 339	CEHAR330M10	C 592	CKSRYPB103K50
C 340	CCH1125	C 593	CKSRYPB103K50
C 341	CKSRYPB104K16	C 601	CCSRCH220J50
C 342	CEHAR100M16	C 602	CCSRCH150J50
C 343	CKSYB225K16	C 604	CKSRYPB103K50
C 344	CKSYB225K16	C 605	CKSYB475K10
C 351	CEAL100M16	C 607	CCSRCH101J50
C 352	CEAL100M16	C 631	CKSRYPB103K50
C 353	CEAL100M16	C 632	CKSRYPB103K50
C 354	CEAL100M16	C 633	CKSRYPB103K50
C 355	CEAL100M16	C 701	CKSYB225K16
C 356	CEAL100M16	C 702	CKSQYB104K16
C 357	CCSRCH221J50	C 703	CKSYB225K16
C 358	CCSRCH221J50	C 704	CKSQYB104K16
C 359	CCSRCH221J50	C 705	CKSQYB104K16
C 360	CCSRCH221J50	C 706	CKSQYB104K16
C 361	CCSRCH221J50	C 707	CKSYB225K16
C 362	CCSRCH221J50	C 708	CEAL101M10
C 370	CKSRYPB105K10	C 709	CKSYB225K16
C 371	CKSRYPB103K50	C 710	CKSRYPB104K16
C 372	CKSRYPB103K50	C 731	CKSRYPB103K50
C 376	CCSRCH7R0D50	C 732	CKSRYPB103K50
C 381	CKSRYPB104K16	C 733	CEAL220M16
C 382	CSZSR100M10	C 734	CEAL101M10
C 383	CSZSR100M10	C 735	CKSRYPB104K16
C 384	CKSRYPB105K10	C 736	CKSRYPB104K16
C 385	CKSQYB225K10	C 741	CKSRYPB103K50
C 386	CKSQYB225K10	C 742	CKSRYPB103K50
C 387	CKSQYB225K10	C 743	CEAL470M6R3
C 388	CKSQYB225K10	C 744	CKSRYPB104K16
C 389	CKSRYPB105K10	C 745	CKSRYPB104K16
C 390	CKSRYPB105K10	C 747	CKSYB475K10
C 391	CKSRYPB105K10	C 748	CKSRYPB103K50
C 392	CKSRYPB104K16	C 749	CEAL470M6R3
C 393	CKSRYPB472K50	C 750	CKSRYPB105K10
C 394	CKSRYPB472K50	C 755	CKSRYPB104K16
C 403	CKSRYPB473K50	C 761	CKSRYPB103K50
C 404	CEJQ101M10	C 762	CKSRYPB103K50
C 405	CKSRYPB103K50	C 763	CEAL220M16
C 406	CEJQ220M10	C 771	CKSRYPB103K50
C 407	CKSQYB103K50	C 772	CKSRYPB103K50
C 408	CKSRYPB223K50	C 773	CEAL220M16
C 409	CKSRYPB223K50	C 805	CEJQ470M10
C 411	CKSRYPB472K50	C 807	CKSRYPB102K50
C 416	CKSRYPB473K50	C 808	CKSYB475K16
C 420	CCSRCH101J50	C 809	CKSRYPB104K16
C 421	CKSRYPB104K16	C 810	CEJQ470M10
C 422	CKSRYPB104K16	C 811	CKSRYPB103K50
C 423	CKSRYPB104K16	C 812	CKSYB475K16
C 424	CKSRYPB103K50	C 814	CKSRYPB103K50
C 512	CKSRYPB104K16	C 815	CKSRYPB104K16
C 551	CEAL470M10	C 816	CEJQ470M10
C 552	CEAL100M16	C 817	CKSYB475K16
C 553	CEAL100M16	C 818	CEVQ220M16
C 554	CKSRYPB104K16	C 820	CKSYB475K16
C 555	CKSRYPB104K16	C 827	CKSRYPB103K50
C 556	CKSRYPB104K16	C 828	CCSRCH101J50
C 557	CKSRYPB104K16	C 831	CCSRCH470J50
C 558	CKSRYPB104K16	C 832	CCSRCH470J50

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 833	CKSYB475K10	D 1908 Diode	UDZS3R9(B)
C 835	CKSYB475K10	D 1909 LED	CL170UBX
C 836	CKSYB475K10	D 1910 LED	CL170UBX
C 837	CKSYB475K10	D 1911 LED	CL170UBX
C 838	CKSYB475K10	D 1912 LED	CL170UBX
C 839	CKSRYB105K10	D 1913 LED	CL170UBX
C 840	CKSRYB105K10	D 1914 LED	CL170UBX
C 851	CKSRYB104K16	D 1915 LED	CL170UBX
C 902	CKSRYB102K50	D 1916 LED	CL170UBX
C 903	CKSRYB102K50	D 1917 LED	CL170UBX
C 904	CKSRYB102K50	D 1918 LED	CL170UBX
C 905	CKSRYB102K50	D 1919 LED	CL170UBX
C 906	CKSRYB102K50	L 1901 Inductor	CTF1295
C 907	CKSRYB102K50	L 1902 Inductor	CTF1484
C 908	CKSRYB102K50	L 1903 Inductor	CTF1305
C 909	CKSRYB102K50	L 1904 Inductor	CTF1399
C 911	CEHAT102M16	L 1905 Inductor	CTF1399
C 912	CKSRYB103K50	L 1906 Inductor	CTF1399
C 913	CEAL470M10	L 1907 Inductor-Array	CTF1421
C 914	CKSRYB103K50	L 1908 Inductor-Array	CTF1421
C 915	CKSRYB103K50	L 1909 Inductor-Array	CTF1421
C 916	CEAL470M16	L 1910 Inductor-Array	CTF1421
C 917	CKSRYB103K50	L 1911 Inductor	CTF1399
C 918 2200μF/16V	CCH1439	L 1912 Inductor	CTF1530
C 921	CEALR33M50	L 1913 Inductor-Array	CTF1421
C 922	CEAL470M10	L 1914 Inductor-Array	CTF1421
C 923	CKSRYB103K50	L 1915 Inductor-Array	CTF1421
C 931	CKSYB105K16	L 1916 Inductor-Array	CTF1421
C 933	CKSRYB103K50	L 1917 Inductor-Array	CTF1421
C 961	CKSRYB102K50	L 1918 Inductor-Array	CTF1421
C 962	CKSRYB104K16	L 1919 Inductor-Array	CTF1421
C 963	CEJQ2R2M50	L 1920 Inductor-Array	CTF1421
C 971	CKSRYB104K16	L 1921 Inductor	CTF1379
C 972	CKSYB106K6R3	L 1922 Inductor	CTF1399
C 973	CKSRYB103K50	L 1923 Inductor	CTF1399
C 974	CKSRYB103K50	L 1924 Inductor	CTF1379
C 975	CEVQ220M16	L 1925 Inductor	CTF1379
C 976	CKSRYB103K50	X 1901 Ceramic Resonator 20MHz	CSS1491
C 977	CKSYB475K16	S 1901 Push Switch	CSG1111
C 978	CKSRYB103K50	S 1902 Push Switch	CSG1111
C 979	CEAL470M16	S 1903 Push Switch	CSG1111
C 980	CKSRYB103K50	S 1904 Push Switch	CSG1111
C 981	CEAL220M16	S 1905 Push Switch	CSG1111
C 982	CEALR33M50	S 1906 Push Switch	CSG1111
C 991	CEAL220M16	S 1907 Push Switch	CSG1111
		S 1908 Push Switch	CSG1111
		S 1909 Push Switch	CSG1111
		S 1910 Push Switch	CSG1111
		S 1911 Push Switch	CSG1111
		S 1912 Push Switch	CSG1111
		S 1913 Push Switch	CSG1111
		S 1914 Push Switch	CSG1111
		S 1915 Push Switch	CSG1135
		S 1916 Push Switch	CSG1145
		S 1917 Push Switch	CSG1111
		S 1918 Encoder	CSD1059
RESISTORS			
IC 1901	RS-140	R 1901	RS1/16S222J
IC 1902 IC	PD5658A	R 1902	RS1/16S222J
IC 1903 IC	S-80734ANDYI	R 1905	RS1/16S103J
IC 1905 IC	PD8081A	R 1906	RS1/16S121J
IC 1906 IC	PD6364A	R 1907	RS1/16S2R2J
IC 1907 IC	PD3428A	R 1908	RS1/16S222J
Q 1901 Transistor	IMD2A	R 1913	RAB4C102J
Q 1902 Transistor	IMD2A	R 1914	RS1/16S473J
Q 1903 Transistor	2SC4081	R 1915	RS1/16S473J
Q 1904 Transistor	2SC4081	R 1916	RS1/16S102J
D 1901 Diode	DAP202U		
D 1902 Diode	DAN202U		
D 1905 Diode	MA111		
D 1906 Diode	DAN202U		
D 1907 Diode	UDZS13(B)		

B Unit Number : CWM7664
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1901	RS-140
IC 1902 IC	PD5658A
IC 1903 IC	S-80734ANDYI
IC 1905 IC	PD8081A
IC 1906 IC	PD6364A
IC 1907 IC	PD3428A
Q 1901 Transistor	IMD2A
Q 1902 Transistor	IMD2A
Q 1903 Transistor	2SC4081
Q 1904 Transistor	2SC4081
D 1901 Diode	DAP202U
D 1902 Diode	DAN202U
D 1905 Diode	MA111
D 1906 Diode	DAN202U
D 1907 Diode	UDZS13(B)

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
R 1917	RS1/16S104J	C 1937	CKSRYB104K16
R 1918	RS1/16S0R0J	C 1938	CKSRYB104K16
R 1919	RS1/16S101J	C 1939	CKSRYB104K16
R 1920	RS1/16S101J	C 1940	CKSRYB104K16
R 1923	RS1/16S101J	C 1941	CKSRYB104K16
R 1924	RS1/16S473J	C 1943	CKSRYB104K16
R 1925	RS1/16S101J	C 1945	CKSRYB104K16
R 1927	RS1/16S101J	C 1946	CCSRCH101J50
R 1933	RAB4C102J	C 1947	CCSRCH101J50
R 1934	RAB4C473J	C 1948	CCSRCH101J50
R 1936	RS1/16S473J	C 1949	CKSRYB103K50
R 1937	RS1/16S473J	C 1950	CCSRCH220J50
R 1938	RS1/16S473J	C 1954	CKSRYB103K50
R 1939	RS1/16S473J	C 1955	CCSRCH101J50
R 1940	RS1/16S102J	C 1957	CCSRCH101J50
R 1941	RS1/16S221J	C 1961	CCSRCH101J50
R 1942	RS1/16S223J	C 1962	CCSRCH101J50
R 1943	RS1/16S223J	C 1963	CCSRCH101J50
R 1945	RS1/16S470J		
R 1947	RS1/16S470J		
R 1949	RS1/16S470J		
R 1950	RS1/16S391J		
R 1951	RS1/16S470J		
R 1952	RS1/16S470J		
R 1953	RS1/16S391J		
R 1955	RS1/16S470J		
R 1960	RS1/16S560J		
R 1961	RS1/16S560J		
R 1962	RS1/16S560J		
R 1963	RS1/16S560J		
R 1964	RS1/16S560J		
R 1965	RS1/16S391J		
R 1966	RS1/16S391J		
R 1967	RS1/16S560J		
R 1968	RS1/16S0R0J		
R 1969	RS1/16S221J		
R 1970	RS1/16S221J		
R 1971	RS1/16S473J		
R 1972	RS1/16S0R0J		
CAPACITORS		Unit Number : CWM7665 Unit Name : Power Supply Unit	
C 1901	CSZSR100M10	MISCELLANEOUS	
C 1902	CKSRYB105K10	IC 2831	IC
C 1904	CSZSR100M10	Q 2801	Transistor
C 1906	CCG1111	Q 2802	Transistor
C 1908	CSZSR100M16	Q 2811	Transistor
		Q 2812	Transistor
C 1909	CKSRYB105K10		
C 1910	CKSRYB103K50	Q 2813	Transistor
C 1911	CKSRYB104K16	Q 2821	Transistor
C 1914	CKSRYB103K50	Q 2822	Transistor
C 1915	CKSRYB103K50	Q 2841	Transistor
		Q 2842	Transistor
C 1917	CSZSR100M10	D 2801	Diode
C 1918	CKSRYB103K50	D 2811	Diode
C 1919	CKSRYB104K16	D 2821	Diode
C 1920	CKSRYB103K50	D 2841	Diode
C 1921	CSZSR100M16	FU 2801	Fuse 800mA
C 1922	CKSRYB103K50	FU 2811	Fuse 800mA
C 1923	CSZSR100M10	FU 2821	Fuse 2A
C 1924	CCSRCH101J50		
C 1926	CSZSR100M10		
C 1931	CKSRYB104K16		
C 1932	CKSRYB104K16		
C 1933	CKSRYB104K16		
C 1934	CKSRYB104K16		
C 1935	CKSRYB104K16		
C 1936	CKSRYB104K16		

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
C 2831	CKSRYB104K16	L 3301 Inductor	CTF1379
C 2832 330μF/10V	CCH1181	L 3302 Inductor	CTF1399
C 2834 330μF/10V	CCH1181	L 3303 Inductor	CTF1399
C 2841	CKSRYB473K50	L 3305 Inductor	CTF1379
C 2842	CKSRYB103K50	L 3306 Inductor	CTF1399
C 2850 470μF/16V	CCH1331	L 3307 Coil	LCYA101J2520
D Unit Number : CWM7667		L 3308 Inductor	CTF1473
Unit Name : Digital Unit		X 3001 Radiator 4.97MHz	CSS1574
		X 3301 Radiator 12.0MHz	CSS1568
MISCELLANEOUS		RESISTORS	
IC 3001 IC	PE5218C	R 3001	RS1/16SS103J
IC 3002 IC	TC55V16100FTI-15	R 3002	RS1/16SS103J
IC 3003 IC	TC7S08FU	R 3003	RS1/16SS681J
IC 3004 IC	S-80818ANUP-EDF	R 3004	RS1/16SS103J
IC 3005 IC	TC7SH08FU	R 3005	RS1/16SS221J
IC 3006 IC	TC74LVXC3245FS	R 3006	RS1/16SS221J
IC 3007 IC	TC7SET32FU	R 3007	RS1/16SS221J
IC 3008 IC	TC7SET32FU	R 3008	RS1/16SS0R0J
IC 3009 IC	TC7SET32FU	R 3009	RS1/16SS222J
IC 3010 IC	TC74VHCT125AFT	R 3010	RS1/16SS473J
IC 3011 IC	TC7WH34FU	R 3011	RS1/16SS102J
IC 3101 IC	TC7SH08FU	R 3012	RS1/16SS103J
IC 3102 IC	TC74LVXC3245FS	R 3013	RS1/16SS222J
IC 3103 IC	TC74VHC126FT	R 3015	RS1/16SS105J
IC 3104 IC	TC74VHC125FT	R 3016	RS1/16SS102J
IC 3105 IC	LC78683ES	R 3017	RS1/16SS221J
IC 3106 IC	MSM51V16165DSL-50	R 3018	RS1/16SS221J
IC 3107 IC	TC7SH08FU	R 3019	RS1/16SS103J
IC 3108 IC	TC7SH08FU	R 3020	RS1/16SS103J
IC 3201 IC	TC7S08FU	R 3021	RS1/16SS682J
IC 3202 IC	TC7SH04FU	R 3022	RS1/16SS682J
IC 3203 IC	TC74VHC541FT	R 3023	RS1/16SS221J
IC 3204 IC	TC7W00FU	R 3024	RS1/16SS221J
IC 3205 IC	TC7WH04FU	R 3025	RS1/16SS221J
IC 3206 IC	TC74LCXR163245FT	R 3027	RS1/16SS103J
IC 3301 IC	AK5353VT	R 3028	RS1/16SS221J
IC 3303 IC	TC74VHC157FT	R 3029	RS1/16SS221J
IC 3304 IC	CXD1859AR	R 3030	RS1/16SS221J
IC 3305 IC	CXK2000EN	R 3031	RS1/16SS102J
IC 3306 IC	TC7SH04FU	R 3032	RS1/16SS102J
IC 3307 IC	TC74VHC126FT	R 3033	RS1/16SS102J
IC 3308 IC	TC7SH32FU	R 3034	RS1/16SS103J
Q 3001 Transistor	UMD2N	R 3036	RS1/16SS682J
Q 3101 Transistor	UMD2N	R 3037	RS1/16SS682J
Q 3301 Transistor	DTA123JK	R 3038	RS1/16SS682J
Q 3302 Transistor	DTC124EK	R 3039	RS1/16SS682J
L 3001 Inductor	CTF1399	R 3040	RS1/16SS682J
L 3002 Inductor	CTF1473	R 3041	RS1/16SS681J
L 3012 Inductor	CTF1399	R 3042	RS1/16SS681J
L 3013 Inductor	CTF1379	R 3043	RS1/16SS681J
L 3014 Inductor	CTF1379	R 3044	RS1/16SS104J
L 3015 Inductor	CTF1379	R 3045	RS1/16SS104J
L 3016 Inductor	CTF1379	R 3046	RS1/16SS104J
L 3103 Inductor	CTF1379	R 3047	RAB4CQ220J
L 3104 Inductor	CTF1379	R 3049	RS1/16SS0R0J
L 3105 Inductor	CTF1379	R 3050	RAB4CQ220J
L 3106 Inductor	CTF1379	R 3051	RAB4CQ220J
L 3107 Inductor	CTF1379	R 3052	RAB4CQ220J
L 3108 Inductor	CTF1379	R 3053	RAB4CQ220J
L 3109 Inductor	CTF1379	R 3054	RAB4CQ220J
L 3110 Inductor	CTF1379	R 3055	RAB4CQ220J
L 3111 Inductor	LCYC4R7K1608	R 3056	RAB4CQ220J
L 3201 Inductor	CTF1379	R 3057	RAB4CQ220J
L 3202 Inductor	CTF1379	R 3058	RAB4CQ220J
L 3203 Inductor	CTF1379	R 3059	RAB4CQ220J

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
R 3060	RS1/16SS101J	R 3302	RS1/16SS470J
R 3061	RS1/16SS101J	R 3303	RS1/16SS104J
R 3062	RAB4CQ220J	R 3304	RS1/16SS102J
R 3064	RS1/16SS220J	R 3305	RS1/16SS102J
R 3065	RS1/16SS220J	R 3306	RS1/16SS681J
R 3066	RS1/16SS220J	R 3307	RS1/16SS103J
R 3067	RS1/16SS102J	R 3308	RS1/16SS101J
R 3068	RS1/16SS102J	R 3309	RS1/16SS101J
R 3069	RS1/16SS102J	R 3310	RS1/16SS102J
R 3070	RS1/16SS103J	R 3311	RS1/16SS101J
R 3071	RS1/16SS102J	R 3313	RS1/16SS101J
R 3077	RS1/16SS0R0J	R 3314	RS1/16SS104J
R 3078	RS1/16SS332J	R 3315	RS1/16SS104J
R 3079	RS1/16SS102J	R 3316	RS1/16SS104J
R 3080	RS1/10S0R0J	R 3317	RS1/16SS681J
R 3102	RS1/16SS682J	R 3318	RS1/16SS0R0J
R 3103	RS1/16SS682J	R 3320	RS1/16SS0R0J
R 3104	RS1/16SS0R0J	R 3322	RS1/16SS680J
R 3105	RS1/16SS102J	R 3323	RS1/16SS680J
R 3106	RS1/16SS682J	R 3324	RS1/16SS680J
R 3107	RS1/16SS682J	R 3326	RS1/16SS103J
R 3108	RS1/16SS682J	R 3327	RS1/16SS103J
R 3109	RS1/16SS102J	R 3328	RS1/16SS102J
R 3110	RS1/16SS104J	R 3329	RS1/16SS102J
R 3111	RS1/16SS682J	R 3330	RS1/16S102J
R 3112	RS1/16SS680J	R 3333	RAB4CQ220J
R 3113	RS1/16SS680J	R 3334	RAB4CQ220J
R 3114	RS1/16SS680J	R 3335	RAB4CQ220J
R 3115	RS1/16SS680J	R 3336	RAB4CQ220J
R 3116	RS1/16SS680J	R 3337	RS1/16SS102J
R 3117	RS1/16SS680J	R 3338	RS1/16SS102J
R 3118	RS1/16SS680J	R 3340	RS1/16SS101J
R 3119	RS1/16SS680J	R 3341	RS1/16SS101J
R 3120	RS1/16SS680J	R 3342	RS1/16SS101J
R 3121	RS1/16SS102J		
R 3122	RS1/16SS101J	CAPACITORS	
R 3123	RS1/16SS101J	C 3001	CKSRYB104K16
R 3124	RS1/16SS101J	C 3002	CCSSCH220J50
R 3125	RS1/16SS472J	C 3003	CSZSR470M6R3
R 3126	RS1/16SS221J	C 3004	CCSSCH220J50
		C 3005	CKSSYB103K16
R 3127	RS1/16SS101J		
R 3128	RS1/16SS101J	C 3006	CKSRYB104K16
R 3129	RS1/16SS102J	C 3007	CKSSYB104K10
R 3131	RS1/16SS202J	C 3008	CKSRYB104K16
R 3132	RS1/16SS151J	C 3009	CKSRYB104K16
		C 3010	CSZSR470M6R3
R 3133	RS1/16SS332J		
R 3134	RS1/16SS0R0J	C 3011	CKSSYB104K10
R 3135	RS1/16SS0R0J	C 3012	CKSSYB103K16
R 3140	RS1/16S0R0J	C 3013	CKSRYB105K10
R 3141	RS1/16S0R0J	C 3014	CKSRYB105K10
		C 3015	CKSYB106K6R3
R 3143	RS1/16S0R0J		
R 3201	RS1/16SS562J	C 3016	CKSSYB104K10
R 3202	RS1/16SS473J	C 3017	CKSRYB105K10
R 3204	RS1/16SS473J	C 3018	CKSSYB104K10
R 3205	RS1/16SS103J	C 3019	CKSRYB104K16
		C 3020	CKSSYB104K10
R 3206	RS1/16SS102J		
R 3207	RS1/16SS270J	C 3021	CKSSYB104K10
R 3208	RS1/16SS270J	C 3024	CKSRYB104K16
R 3209	RS1/16SS270J	C 3025	CKSSYB104K10
R 3210	RS1/16SS270J	C 3101	CCSSCH4R0C50
		C 3102	CKSSYB104K10
R 3211	RS1/16SS270J		
R 3212	RS1/16SS270J	C 3104	CKSRYB105K10
R 3213	RS1/16SS270J	C 3105	CKSRYB105K10
R 3214	RS1/16SS270J	C 3106	CKSSYB104K10
R 3301	RS1/16SS470J	C 3107	CKSSYB104K10
		C 3108	CCSRCH101J50

====Circuit Symbol and No.==Part Name	Part No.
C 3109	CKSSYB104K10
C 3110	CKSSYB104K10
C 3111	CKSSYB104K10
C 3112	CKSSYB104K10
C 3113	CKSSYB104K10
C 3114	CKSRYB105K10
C 3115	CKSSYB104K10
C 3116	CKSSYB104K10
C 3117	CKSSYB104K10
C 3118	CKSSYB104K10
C 3119	CKSRYB105K10
C 3120	CCSSCH220J50
C 3121	CCSRCH101J50
C 3122	CCSRCH101J50
C 3123	CKSYB475K10
C 3201	CKSSYB104K10
C 3204	CKSYB106K6R3
C 3205	CKSYB106K6R3
C 3301	CSZSR470M6R3
C 3302	CKSSYB104K10
C 3303	CKSSYB104K10
C 3304	CKSYB475K10
C 3305	CKSYB475K10
C 3306	CSZSR470M6R3
C 3307	CKSSYB104K10
C 3308	CKSSYB104K10
C 3309	CKSSYB104K10
C 3310	CKSSYB104K10
C 3312	CCSSCH330J50
C 3313	CCSSCH330J50
C 3314	CKSSYB104K10
C 3315	CKSSYB104K10
C 3316	CKSSYB104K10
C 3317	CKSRYB104K16
C 3318	CKSSYB104K10
C 3319	CKSSYB104K10
C 3320	CKSRYB104K16
C 3321	CKSRYB104K16
C 3323	CKSSYB104K10
C 3324	CKSRYB104K16
C 3325	CKSSYB104K10
C 3326	CKSSYB104K10
C 3327	CKSRYB104K16
C 3328	CKSSYB104K10
C 3329	CKSSYB104K10
C 3330	CKSRYB104K16
C 3331	CKSRYB104K16
C 3332	CKSSYB104K10
C 3333	CKSSYB104K10
C 3334	CKSRYB105K10
C 3335	CKSRYB105K10
C 3336	CKSSYB222K50
C 3337	CKSSYB222K50
C 3338	CSZSR470M6R3
C 3339	CSZSR470M6R3

E Unit Number : CWM7826
Unit Name : Panel Unit

MISCELLANEOUS

D 1801	LED	CL170UBX
D 1802	LED	CL170FGCD
D 1803	LED	CL170FGCD
S 1801	Switch(CSENS)	CSN1027
S 1802	Spring Switch(MSSENS)	CSN1051

====Circuit Symbol and No.==Part Name	Part No.
RESISTORS	
R 1801	RS1/16S121J
R 1802	RS1/16S121J
R 1803	RS1/16S680J
R 1804	RS1/16S680J
R 1805	RS1/16S680J
R 1806	RS1/16S680J
CAPACITORS	
C 1801	CKSRYB104K16

F Unit Number : CWX2532
Unit Name : CD Core Unit

MISCELLANEOUS

IC 201	IC	TA2153FN
IC 301	IC	TC9495F2
IC 401	IC	BA5811FM
IC 601	IC	PE5273A
IC 801	IC	BA05SFP
Q 101	Transistor	2SD1664
Q 102	Transistor	UMD2N
Q 601	Transistor	DTA114EU
TH 601	Thermistor	CCX1037
X 601	Ceramic Resonator 32.00MHz	CSS1544
S 901	Spring Switch(LOAD,EJ)	CSN1052
S 902	Spring Switch(LOAD,EJ)	CSN1052
S 903	Spring Switch(LOAD,EJ)	CSN1052
S 904	Spring Switch(HOME)	CSN1051


RESISTORS

R 101	RS1/16S222J
R 102	RS1/16S220J
R 103	RS1/16S220J
R 104	RS1/16S220J
R 105	RS1/16S220J
R 201	RS1/16S153J
R 202	RS1/16S153J
R 203	RS1/16S823J
R 204	RS1/16S823J
R 205	RS1/16S102J
R 206	RS1/16S823J
R 207	RS1/16S102J
R 208	RS1/16S124J
R 209	RS1/16S183J
R 210	RS1/16S153J
R 211	RS1/16S103J
R 212	RS1/16S103J
R 213	RS1/16S124J
R 215	RS1/16S471J
R 216	RS1/16S473J
R 217	RS1/16S473J
R 301	RS1/16S153J
R 302	RS1/16S332J
R 303	RS1/16S332J
R 304	RS1/16S105J
R 305	RS1/16S472J
R 308	RS1/16S471J
R 309	RS1/16S471J
R 310	RS1/16S471J
R 311	RS1/16S221J
R 312	RS1/16S103J
R 313	RS1/16S473J
R 314	RS1/16S224J
R 315	RS1/16S334J
R 316	RS1/16S473J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 321	RS1/16S0R0J	C 314	CCSRCH221J50
R 401	RS1/16S103J	C 315	CEVL220M16
R 403	RS1/16S154J	C 316	CEVL101M6R3
R 404	RS1/16S362J	C 317	CKSRYPB104K16
R 405	RS1/16S183J	C 318	CKSRYPB104K16
R 406	RS1/16S183J	C 319	CKSRYPB104K16
R 407	RS1/16S752J	C 320	CCSRCH330J50
R 408	RS1/16S102J	C 325	CCSRCH471J50
R 409	RS1/16S103J	C 329	CKSRYPB223K25
R 410	RS1/16S752J	C 401	CCSRCH271J50
R 411	RS1/16S153J	C 402	CCSRCH471J50
R 412	RS1/16S154J	C 403	CKSRYPB223K25
R 413	RS1/16S333J	C 404	CKSRYPB103K50
R 602	RS1/16S1502D	C 405	CEVL101M10
R 603	RS1/16S222J	C 601	CKSRYPB103K50
R 604	RS1/16S104J	C 602	CKSRYPB472K50
R 605	RS1/16S223J	C 703	CCH1349
R 606	RS1/16S473J	C 801	CCH1349
R 607	RS1/16S103J	C 802	CEVL101M6R3
R 608	RS1/16S102J	C 803	CKSRYPB334K10
R 609	RS1/16S102J	C 901	CKSRYPB103K50
R 610	RAB4CQ102J	C 902	CKSRYPB103K50
R 611	RS1/16S473J	Miscellaneous Parts List M 1 Carriage Motor Assy(-D) M 2 Load Motor Assy(-D) M 3 Motor Unit(SPINDLE) Pickup Unit(Service)(P8)	
R 701	RAB4CQ221J		
R 702	RS1/16S221J		
R 703	RS1/16S102J		
R 704	RS1/16S0R0J		CXB6361
R 707	RS1/16S221J		CXB6340
R 708	RS1/16S0R0J		CXB6620
R 711	RS1/16S0R0J		CXX1305
R 713	RS1/16S0R0J		
R 901	RS1/16S104J		
R 902	RS1/16S473J		
R 903	RS1/16S273J		
CAPACITORS			
C 101	CEVL470M6R3		
C 102	CKSRYPB102K50		
C 103	CKSRYPB104K16		
C 104	CKSRYPB334K10		
C 105	CEVL470M6R3		
C 106	CKSRYPB104K16		
C 201	CKSRYPB104K16		
C 202	CCSRCH560J50		
C 204	CKSRYPB334K10		
C 205	CKSRYPB334K10		
C 206	CKSRYPB273K25		
C 207	CKSRYPB273K25		
C 208	CKSRYPB104K16		
C 209	CKSRYPB104K16		
C 210	CCSRCK2R0C50		
C 211	CCSRCH220J50		
C 212	CCSRCH220J50		
C 301	CKSRYPB153K25		
C 302	CKSRYPB104K16		
C 303	CKSRYPB103K50		
C 304	CKSRYPB822K50		
C 305	CKSRYPB223K25		
C 306	CKSRYPB104K16		
C 307	CKSRYPB103K50		
C 308	CKSRYPB104K16		
C 309	CKSRYPB473K16		
C 310	CKSRYPB473K16		
C 311	CKSRYPB104K16		
C 312	CKSRYPB104K16		
C 313	CKSRYPB104K16		

6. ADJUSTMENT

6.1 CONNECTION DIAGRAM

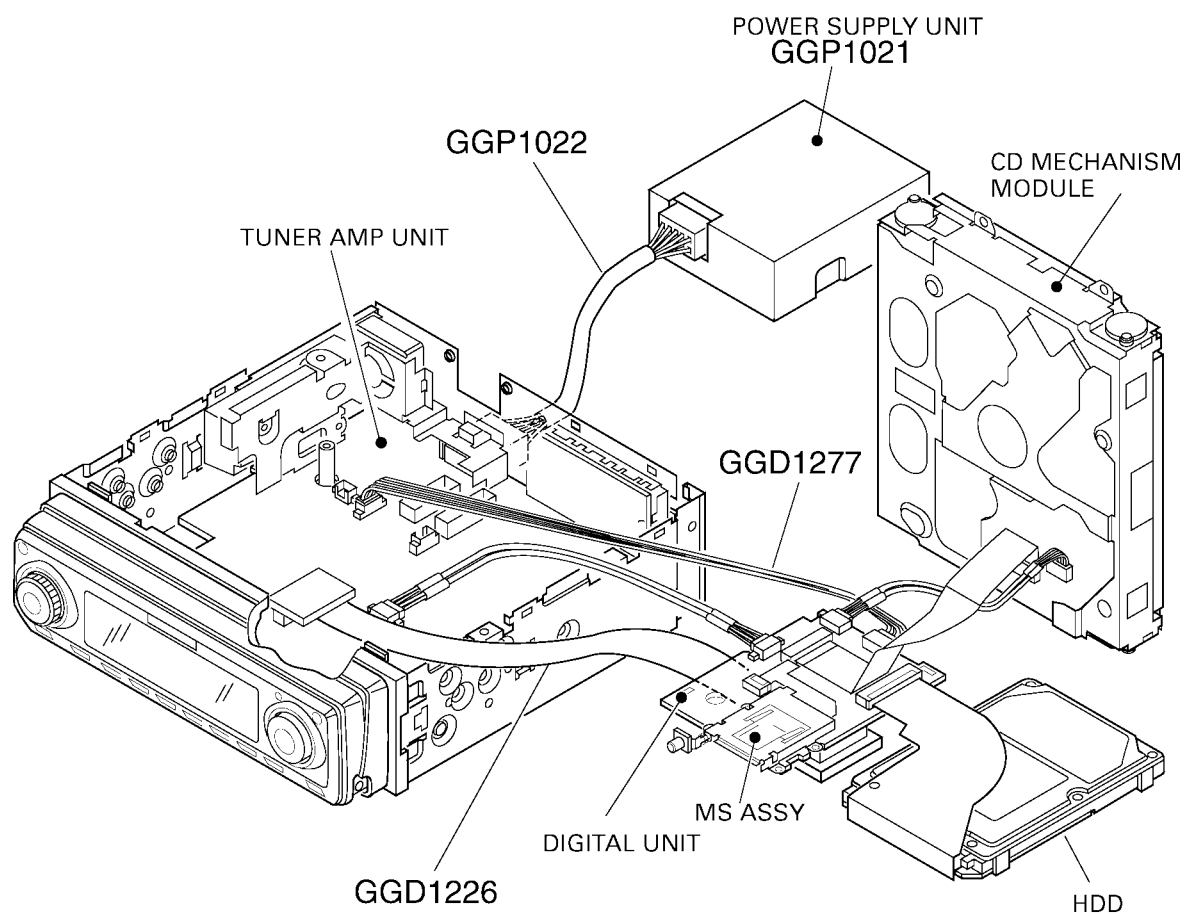

6.2 CD ADJUSTMENT

1) Precautions


- This unit uses a single power supply (+5V) for the regulator. The signal reference potential, therefore, is connected to VREF(approx. 2.1V) instead of GND. If VREF and GND are connected to each other by mistake during adjustments, not only will it be impossible to measure the potential correctly, but the servo will malfunction and a severe shock will be applied to the pick-up. To avoid this, take special note of the following.
Do not connect the negative probe of the measuring equipment to VREF and GND together. It is especially important not to connect the channel 1 negative probe of the oscilloscope to VREF with the channel 2 negative probe connected to GND.
Since the frame of the measuring instrument is usually at the same potential as the negative probe, change the frame of the measuring instrument to floating status.
If by accident VREF comes in contact with GND, immediately switch the regulator or power OFF.
- Always make sure the regulator is OFF when connecting and disconnecting the various filters and wiring required for measurements.
- Before proceeding to further adjustments and measurements after switching regulator ON, let the player run for about one minute to allow the circuits to stabilize.
- Since the protective systems in the unit's software are rendered inoperative in test mode, be very careful to avoid mechanical and /or electrical shocks to the system when making adjustment.
- The RFI and RFO signals are easy to oscillate because of a wide band. When observing them, insert a resistor of about 1 k Ω to the series.
- This equipment will not guarantee the load ejection operation when the mechanical unit is turned upside down. In particular, if the ejection operation is incorrectly performed and recovery is disabled, the recovery is enabled by resetting a product or turning ACC off to on.

2) Test Mode

This mode is used for adjusting the CD mechanism module of the device.

- Test mode starting procedure
Reset while pressing the **DISP** and **▶** keys together.
- Test mode cancellation
Switch ACC, back-up OFF.
- After pressing the EJECT key, do not press any other key until the disk is completely ejected.
- If the **▶** or **◀** key is pressed while focus search is in progress, immediately turn the power off (otherwise the actuator may be damaged due to adhesion of the lenses).
- Jump operation of TRs other than 100TR continues after releasing the key. CRG move and 100TR jump operations are brought into the "Tracking close" status when the key is released.
- Powering Off/On resets the jump mode to "1TR", the RF AMP gain setting to TYP, and the automatic adjustment value to the initial value.
- Please use the "remote control unit of the product accessory" after the test mode starts.

● Flow Chart

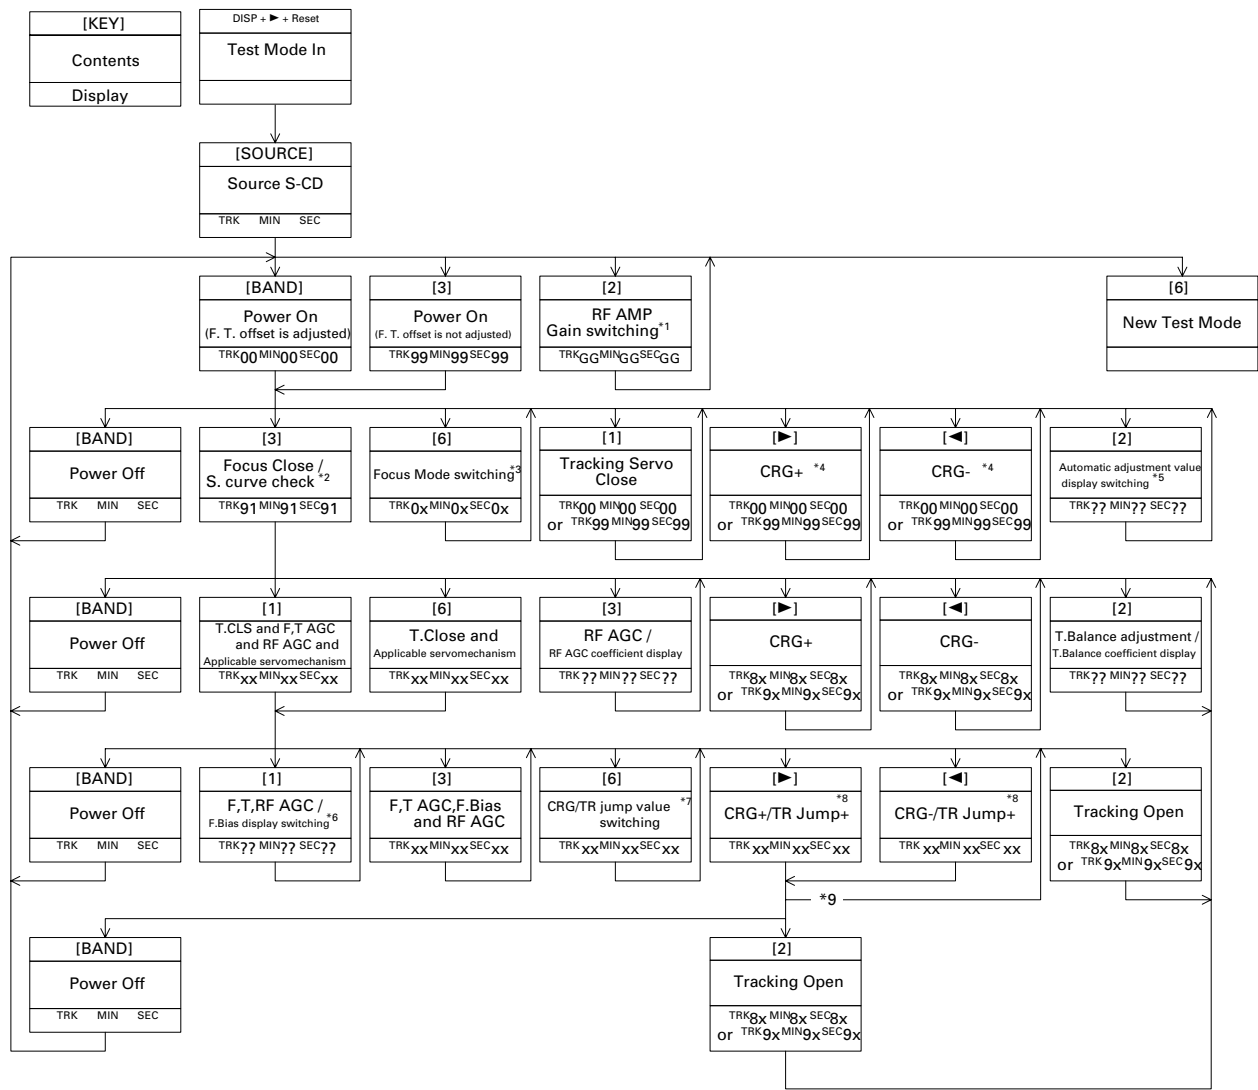

- *1) TYP
TRK MIN SEC → +12dB
TRK12 MIN12 SEC12 Switch a value
- *2) Focus Close for "00" or "99" display
Perform the S. curve check operation for "01" display
- *3) Focus Close setting
TRK00 MIN00 SEC00 → S. curve check setting
TRK01 MIN01 SEC01 → F. EQ measurement setting
TRK02 MIN02 SEC02 Switch a value
- *4) CRG motor voltage = 2 [V]
- *5) F.Offset → T.Offset → Switch to the order of the original display
Display
- *6) TRK/MIN/SEC → F.AGC Gain → T.AGC Gain → F.Bias → RF AGC Gain Switch a value
- *7) 1TR
TRK91 MIN91 SEC91 → 32TR
TRK92 MIN92 SEC92 → 100TR
TRK93 MIN93 SEC93 → CRG Move
TRK94 MIN94 SEC94
or TRK81 MIN81 SEC81 or TRK82 MIN82 SEC82 or TRK83 MIN83 SEC83 or TRK84 MIN84 SEC84 Switch a value

*8) 1TR/32TR/100TR

*9) Only at the time of CRG move or 100TR jump

[Key]	Operation	
	Test Mode	New Test Mode
[BAND]	Power On/Off	Error occurrence time/cause display switching
▶	CRG +/TR Jump+ (Direction of the external surface)	TRK+/FF
◀	CRG -/TR Jump- (Direction of the internal surface)	TRK-/REV
[1]	T.CLS and AGC and Applicable servomechanism/ AGC,AGC display switching	SCAN
[2]	RF Gain switching/Offset adjustment display/ T.Balance adjustment/T.OPN	MODE
[3]	F.CLS,S.Curve/Rough Servo and RF	(ITP)
-	Lens down/SPDL 1X/2X switching (Double-speed compatibility only)	-
-	Error rate measurement	-
[6]	F.Mode switching/T.CLS/CRG Jump switching	Auto/Manual switching

6.3 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT



• Note :

The grating angle of the PU unit cannot be adjusted after the PU unit is changed. The PU unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted PU unit for the CD mechanism module. Changing the PU unit is thus best considered as a last resort. However, if the PU unit must be changed, the grating should be checked using the procedure below.

• Purpose :


To check that the grating is within an acceptable range when the PU unit is changed.

• Symptoms of Mal-adjustment :

If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or taking a long time for track searching.

• Method :

- | | |
|-----------------------|----------------------------|
| • Measuring Equipment | • Oscilloscope, Two L.P.F. |
| • Measuring Points | • E, F, VREF |
| • Disc | • ABEX TCD-784 |
| • Mode | • TEST MODE |

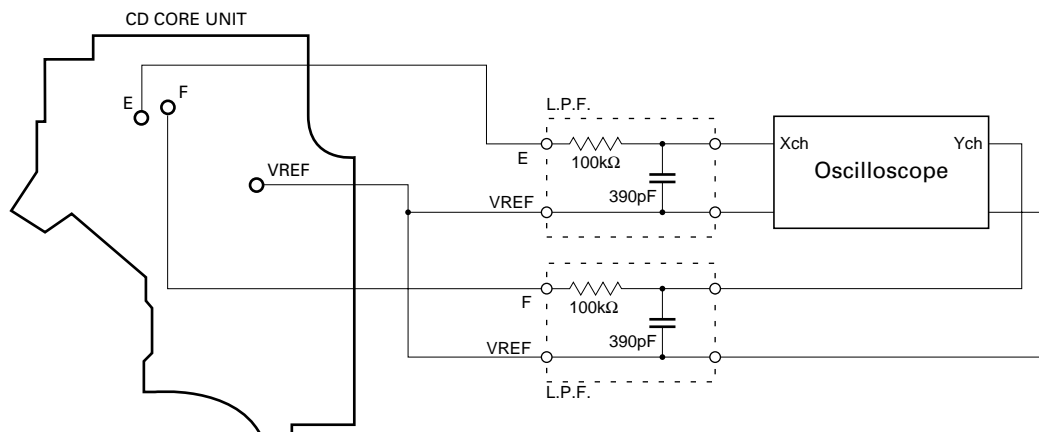

• Checking Procedure

1. In test mode, load the disc and switch the 5V regulator on.
2. Using the ► and ◀ buttons, move the PU unit to the innermost track.
3. Press key 3 to close focus, the display should read "91". Press key 2 to implement the tracking balance adjustment the display should now read "81". Press key 3. The display will change, returning to "81" on the fourth press.
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within 75°. Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than 75° try changing the PU unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than 75° then the mechanism should be judged to be at fault.

• Note







Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" (the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

• Hint

Reloading the disc changes the clamp position and may decrease the "wobble".

Grating waveform

Ech → Xch 20mV/div, AC
Fch → Ych 20mV/div, AC

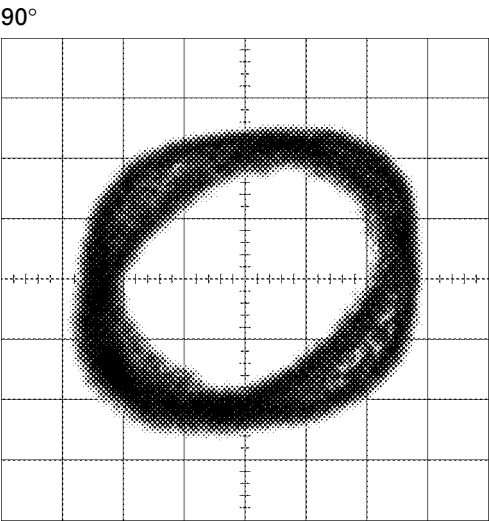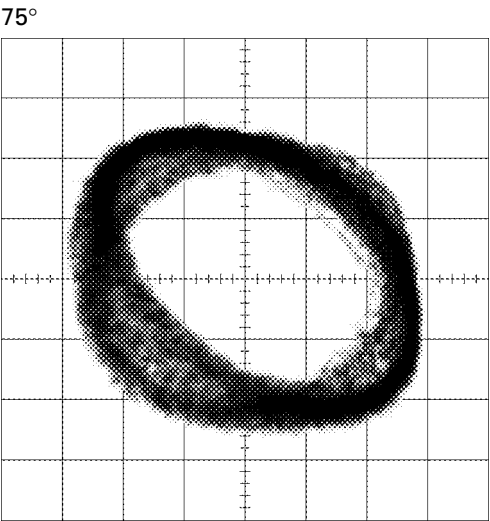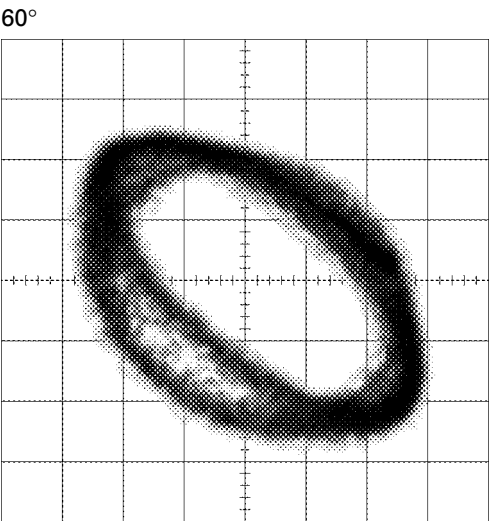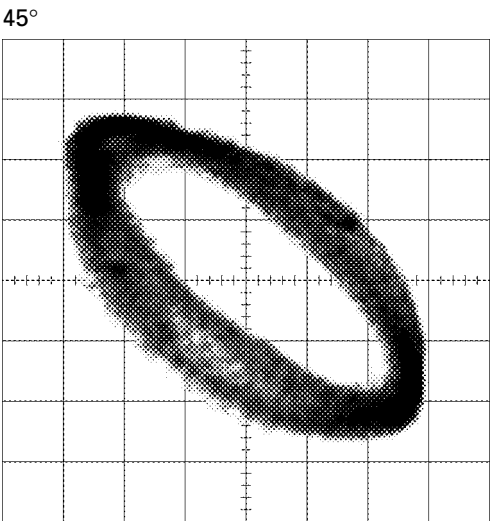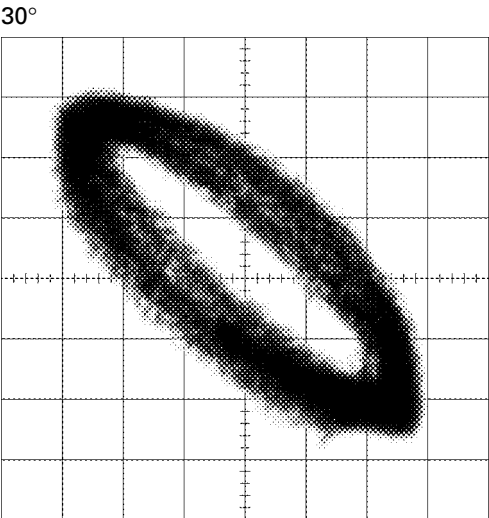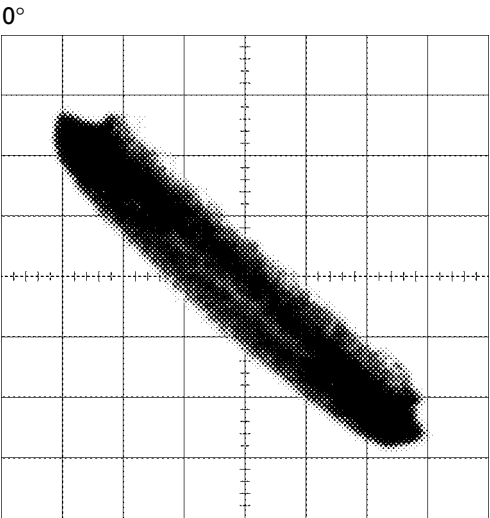

6.4 TEST MODE(CD)

● CD Section Error No. Display

If the CD player cannot operate or if it stops when an error occurred in operation, it enters the error mode and displays the cause of the error in numerals. Accordingly, an object of this display is to assist in analysis and repair.

(1) Display example

Err XX

(2) Error codes

Error code	Type	Description	Details and cause
10	Mechanical unit	Carriage Home NG	Carriage cannot move to and from the inside circumference. → Defective Home SW, Carriage move error.
11	Electricity	Focus Search NG	Focus is disabled. → At the rear of disc. Disc damage, dirt and vibration are intense.
12	Electricity	Spindle Lock NG	Spindle Lock is not performed and no subcode can be read. → Defective spindle. Disc damage, dirt and vibration are intense.
14	Electricity	Mirror NG	CD-R to which data is not written. (At the rear of disc on rare occasions)
17	Electricity	Setup NG	AGC protection does not work. Focus immediately slips off. → Disc damage, dirt and vibration are intense.
19	Electricity	Setup NG	The tracking balance deviation is 50% or higher or the tracking error level is low. → The pickup or tracking error circuit is abnormal.
30	Electricity	Search Timeout	Could not reach the target address. → Carriage/tracking error, disc damage.
A0	System	Power Supply NG	Higher or lower than the specified voltage, or no power is output. → Defective SW transistor, power supply abnormality, load terminal NG.

* Setup indicates a series of operations until sound is issued after focus has been performed.

● CD Section Test Mode (Aging Operation and Setup Analysis)

Play is performed in the CD normal mode. However, after setup, in the protection operation, such as FOK (focus), LOCK (spindle), subcodes, sound skip and mechanical-unit errors, the error occurrence and a timeout, the occurrence cause and occurrence time are displayed. During setup, the operation status (internal RAM; CPOINT) of the CD software is displayed.

(1) Entering the new test mode

See the test mode flowchart on Page 92.

(2) Correspondence of keys between the test mode and new test mode

Key	Test mode		New test mode	
	Regulator OFF	Regulator ON	In-play	Error or protection occurrence
BAND	Regulator ON	Regulator OFF	—	Error occurrence time or error cause switching
▶	—	FWD-KICK	TRACK >	—
◀	—	REV-KICK	< TRACK	—
1	—	TRACKING CLOSE	SCAN	—
2	—	TRACKING OPEN	MODE	—
3	—	FOCUS CLOSE	(ITP)	—
6	To new test mode	FOCUS MODE SWITCHING	AUTO/MANUAL	—

The conventional operation is performed for EJECT or CD ON/OFF.

(3) Error cause (error No.) codes

Error code	Type	Mode	Description	Details and cause
40	Electricity	PLAY	FOK=L 100mS	Focus slips off. → Damage, dirt, vibration and faulty servomechanism.
41	Electricity	PLAY	LOCK=L 100mS	Spindle Lock slips off. → Damage, dirt, vibration and faulty servomechanism.
42	Electricity	PLAY	Subcode NG 500mS	No subcode can be read. → Damage, dirt, vibration and faulty servomechanism.
43	Electricity	PLAY	Sound skip occurrence	Last address memory operation. → Damage, dirt, vibration and faulty servomechanism.

(4) Operation status display during setup

Status No.	Description	Protection operation
00	CD + 5 V ON is being processed.	None
01	SERVO LSI is being initialized (1/3).	None
02	CRAM of servo LSI is being initialized.	None
03	SERVO LSI is being initialized (2/3).	None
04	Offset is being adjusted (1/3).	None
05	Offset is being adjusted (2/3).	None
06	Offset is being adjusted (3/3).	None
07	FZD is being adjusted.	None
08	Servo LSI is being initialized (3/3).	None
10,11	Carriage Home processing start.	None
12	Carriage is moving toward the inside circumference.	Timeout for ten seconds, defective Home SW.
13	Carriage is moving toward the outside circumference.	Timeout for ten seconds, defective Home SW.
14	Carriage outer kicking.	None
15	Carriage is being sent to the outside circumference. (for one second)	None
20	Servo Close processing start.	None
21	Being processed before Focus Search start.	None
22	Spindle rotation, Focus Search start.	None
23	Focus Close (FOON = Low) wait.	Focus Search timeout.
24	Waiting after Focus Close.	None
25	Being processed before Focus Search start, at setup protection.	None
26	Being processed before Focus Search start, at fast recovery.	None
27	RF detection. (RFOK = Hi confirmation)	Focus slips off, no RF is output.
28	Spindle OLV rough servocontrol.	Focus slips off.
29	Setting before T balance adjustment processing start.	Focus slips off.
30	T balance adjustment (1/2).	Focus slips off.
31	T balance adjustment (2/2).	Focus slips off.
32	Spindle CLV stationary servocontrol.	Focus slips off.
33	Tracking Close processing (1/2).	Focus slips off.
34	Tracking Close processing (2/2).	Focus slips off.
35	Setting before Focus/Tracking AGC start.	Focus slips off.
36	Focus AGC start processing.	Focus slips off.
37	Focus AGC processing (1/2).	Focus slips off.
38	Focus AGC processing (2/2).	Focus slips off.
39	Setting before Tracking AGC start.	Focus slips off.

Status No.	Description	Protection operation
40	Tracking AGC start processing.	Focus slips off.
41	Tracking AGC processing.	Focus slips off.
42	Focus/Tracking AGC processing.	Focus slips off, AGC coefficient NG.
43	FE bias adjustment start processing.	Focus slips off.
44	FE bias adjustment.	Focus slips off.
45	RFAGC adjustment start.	Focus slips off.
46	RFRP level read processing.	Focus slips off, low RFRP level.
47	Setting before Lock confirmation.	Focus slips off.
48	Lock is being checked.	Focus slips off, Spindle Lock is not performed.
49	Setting before subcode confirmation.	Focus slips off.
50	Subcode confirmation.	Focus slips off, no subcode can be read.

(5) Example of display on display unit

• During setup

TNo.	Min	Sec
11	11	11

- In operation (PLAY and SEARCH), this mode is almost the same as the normal mode.

• At protection/error occurrence

(a) Error display

Err-xx

Display is switched using the BAND key.


(b) Occurrence TNo. display, occurrence absolute time display

TNo.	Min	Sec
10	40	05

6.5 TEST MODE(HDD)

How to enter the test mode: Press the 4 and 6 keys simultaneously to reset. After that, select the source to be tested.

① HDD test mode general operational flow

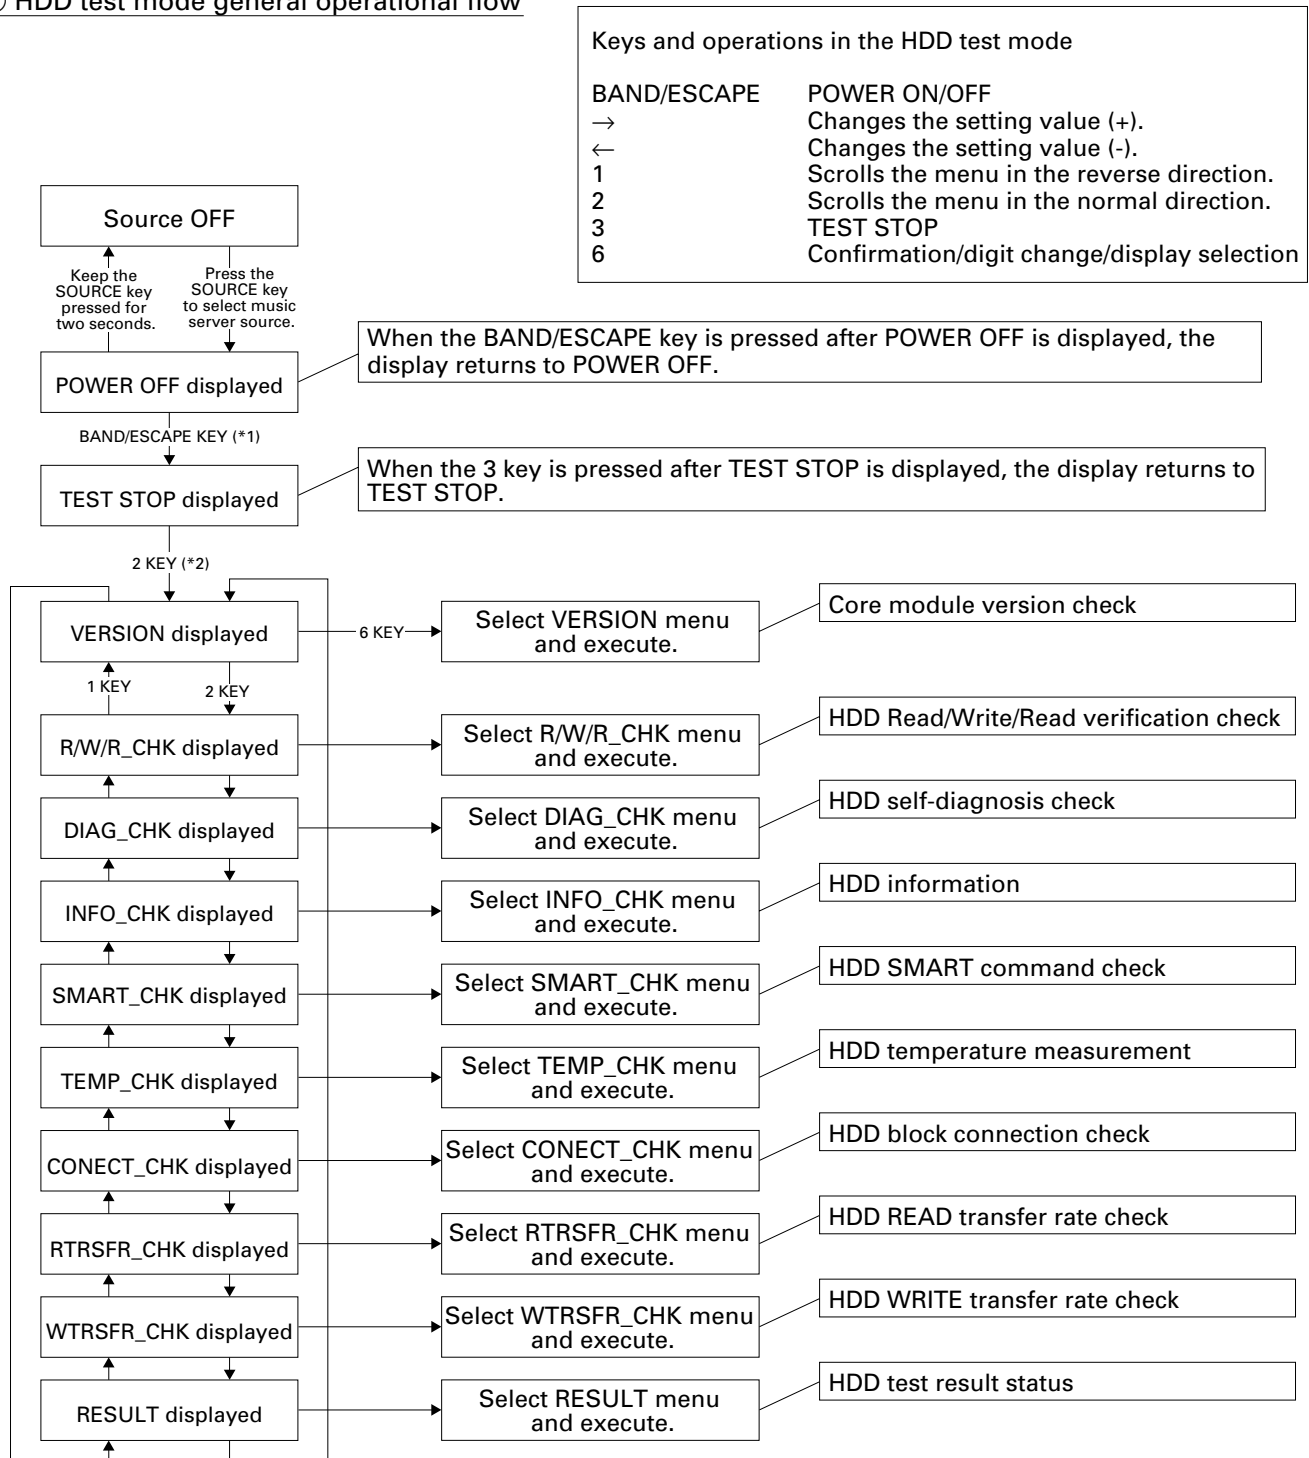

*1


Any key input is impossible until the power is turned on after the BAND/ESCAPE key is pressed. (TEST STOP is displayed.)

*2

For operations with numerical keys, verify that the numbers of 1 to 6 are displayed. If there is no number displayed, press the NEXT KEY to display them.

② VERSION menu: Core module version check


(This menu checks and displays the versions for software installed in the core module.)

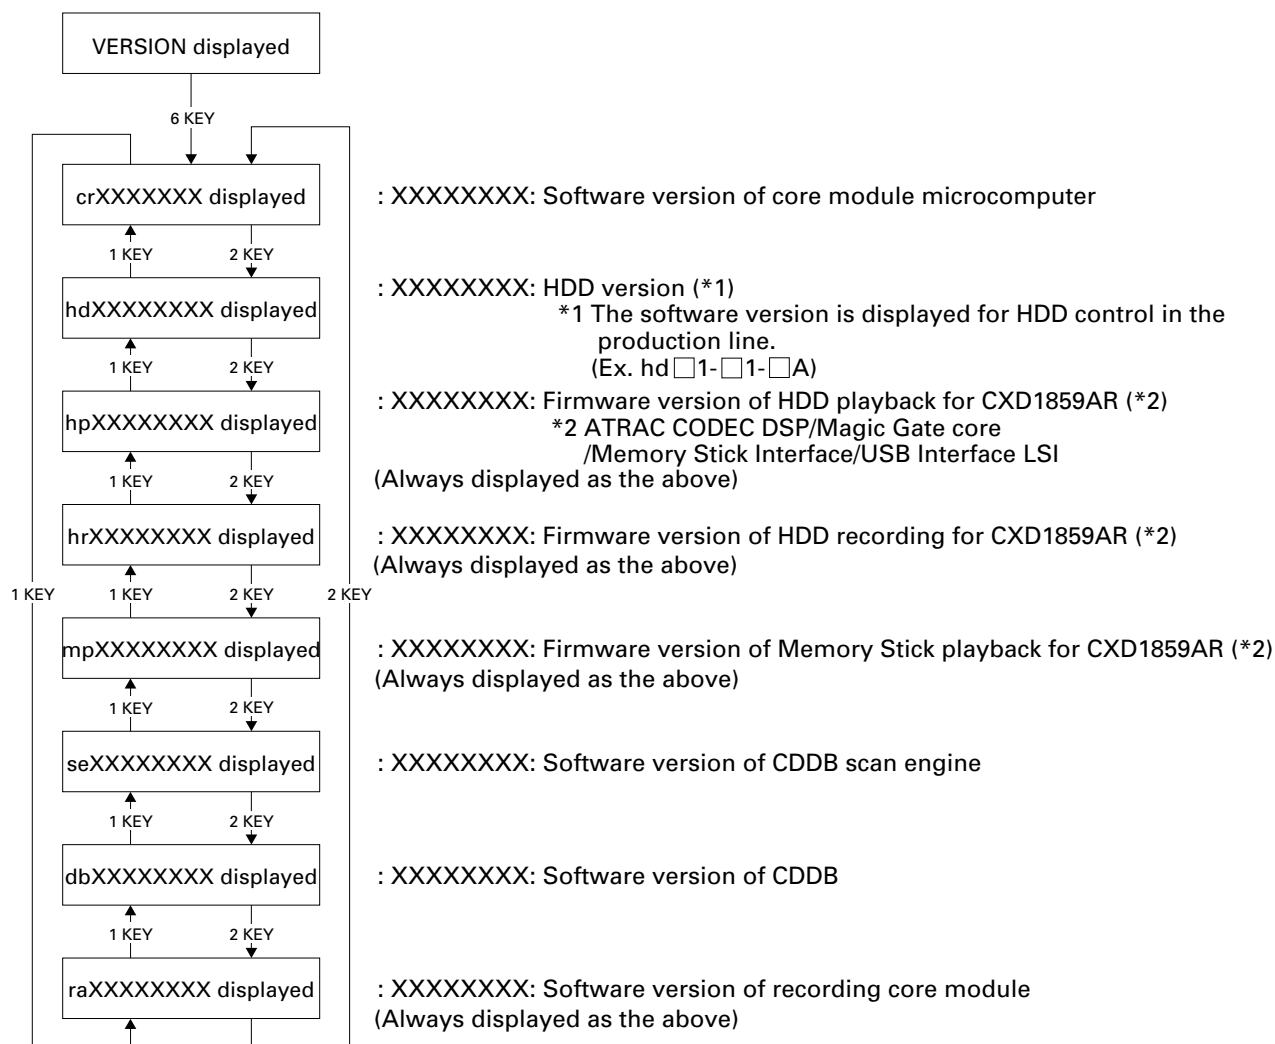

③ R/W/R_CHK menu: HDD Read/Write/Read verification check


This menu repeats and checks one operation block of Read access (before Write), Write access, and Read verification access (after Write) 10,000 times during one set of checking steps. These operations mean a total of 5 Mbytes data transfer.

* The displayed values are expressed in hexadecimal number system.

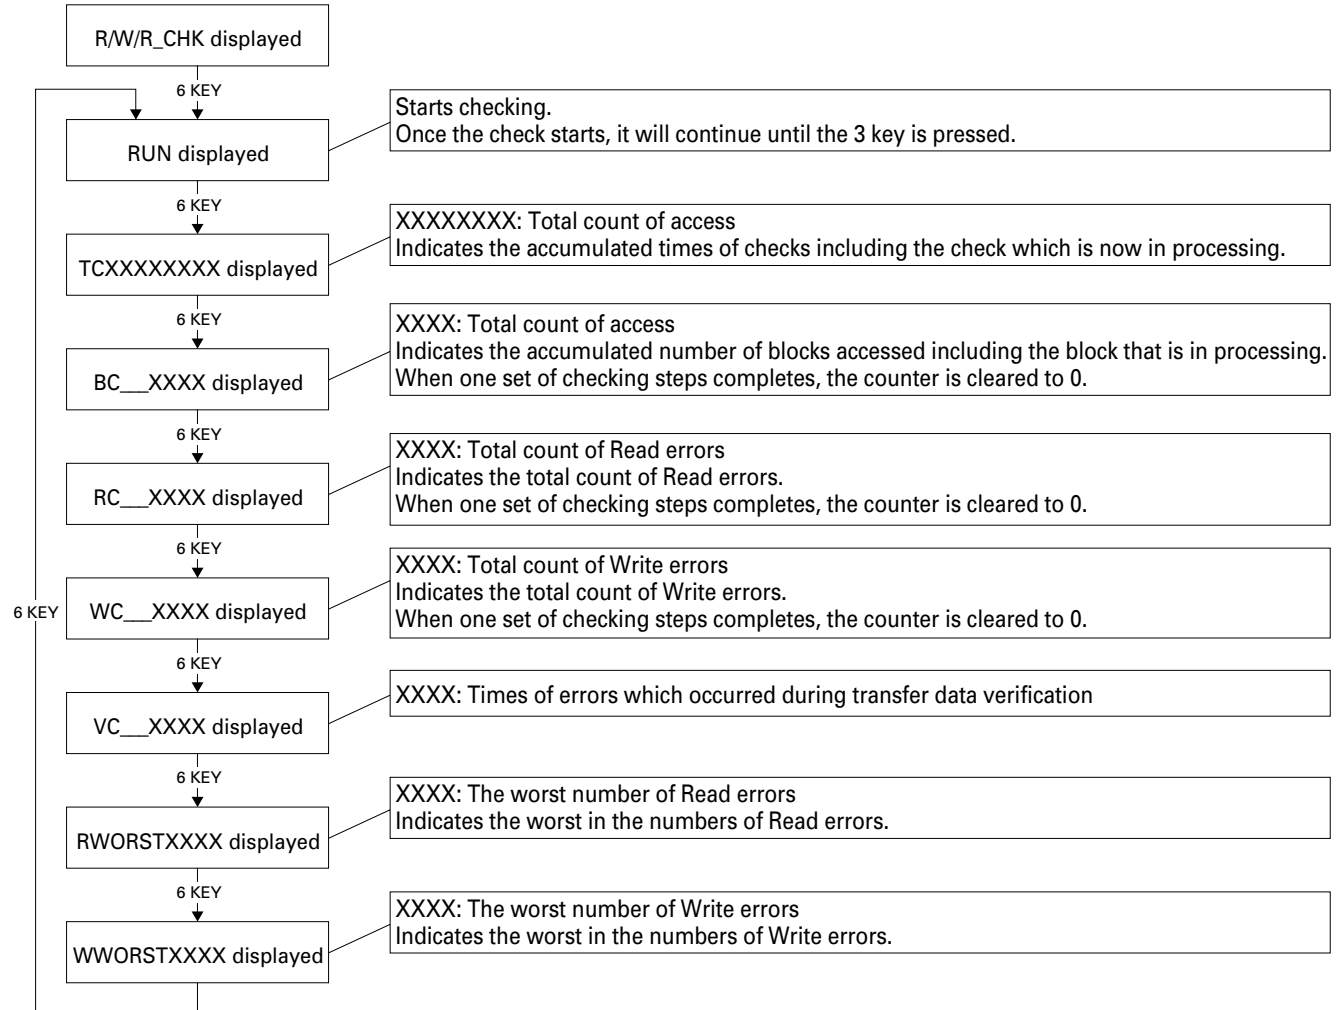


④ DIAG_CHK menu: HDD self-diagnosis check

This menu sends ATA Diagnostics command to the HDD to operate its internal functions (internal ROM/RAM check and control LSI register check), and obtains the results of self-diagnosis checks.

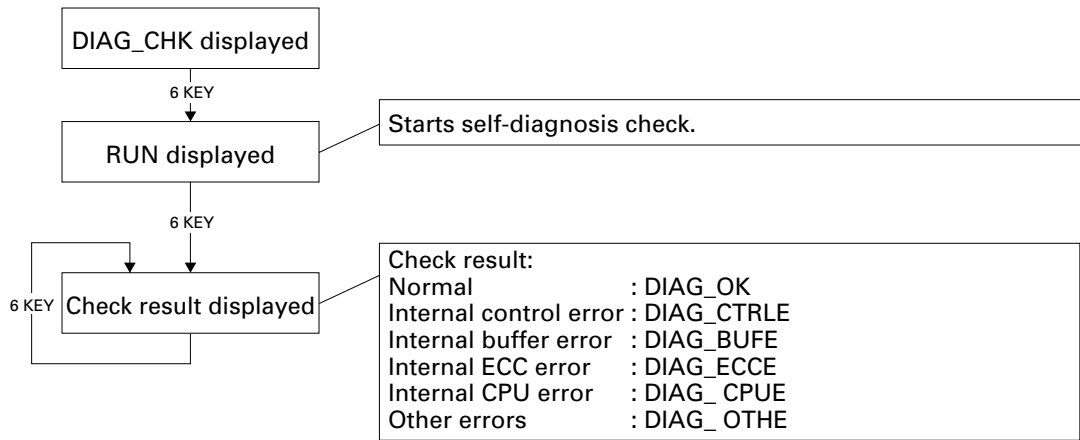


⑤ INFO_CHK menu: HDD information

This menu sends ATA Identify command to the HDD to obtain the HDD data (HDD firmware revision and security lock status check results).

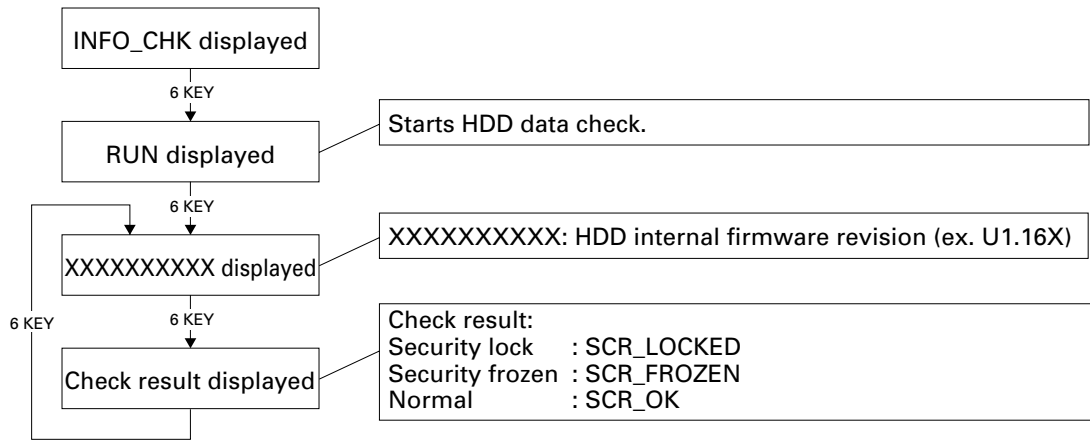


⑥ SMART_CHK menu: HDD SMART command check

Using ATA SMART Return Status command, this menu monitors the inside of the HDD, and predicts HDD errors and/or problems that may occur to notify.
This SMART function is not available in the normal operation mode but in the test mode menu.

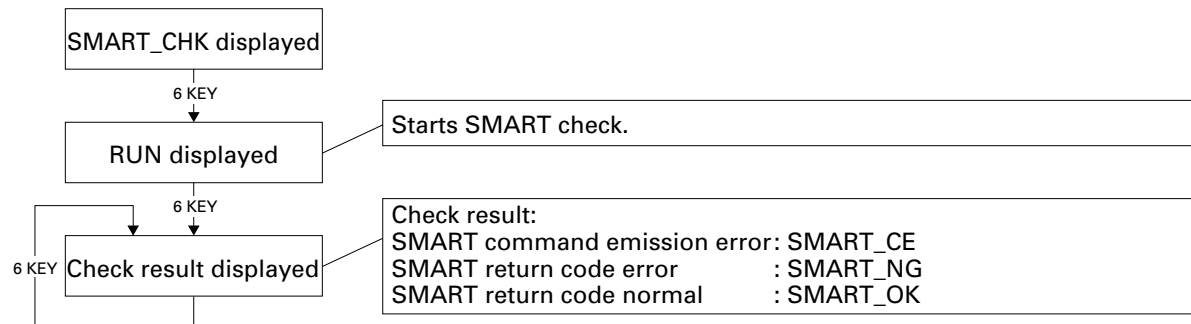

⑦ TEMP_CHK menu: HDD temperature measurement

This menu measures the temperature inside the HDD by using Toshiba HDD vender unique command.

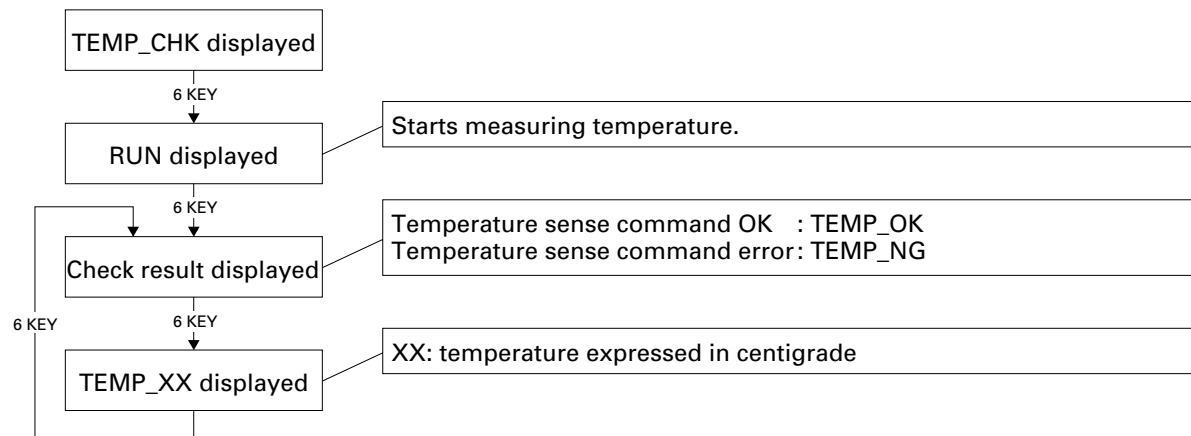

Menu of measuring HDD's temperature in HDD test mode: hexadecimal values (shown on the display) → decimal values (centigrade) transformation table

display	centigrade(°C)
ec	-20
ed	-19
ee	-18
ef	-17
f0	-16
f1	-15
f2	-14
f3	-13
f4	-12
f5	-11
f6	-10
f7	-9
f8	-8
f9	-7
fa	-6
fb	-5
fc	-4
fd	-3
fe	-2
ff	-1
00	0
01	1
02	2
03	3
04	4
05	5
06	6
07	7
08	8
09	9
0a	10
0b	11
0c	12
0d	13
0e	14
0f	15
10	16
11	17
12	18
13	19
14	20
15	21
16	22
17	23
18	24
19	25
1a	26
1b	27
1c	28
1d	29
1e	30
1f	31
20	32
21	33
22	34
23	35


display	centigrade(°C)
24	36
25	37
26	38
27	39
28	40
29	41
2a	42
2b	43
2c	44
2d	45
2e	46
2f	47
30	48
31	49
32	50
33	51
34	52
35	53
36	54
37	55
38	56
39	57
3a	58
3b	59
3c	60
3d	61
3e	62
3f	63
40	64
41	65
42	66
43	67
44	68
45	69
46	70
47	71
48	72
49	73
4a	74
4b	75
4c	76
4d	77
4e	78
4f	79
50	80
51	81
52	82
53	83
54	84
55	85
56	86
57	87
58	88
59	89
5a	90

⑧ CONECT_CHK menu: HDD block connection check

This menu sends the hardware reset command or the software reset command to the HDD block, and obtains the result status from the HDD block.

These two checks make it possible to verify the connections of IDE connectors.

When xx_xxxx_NG is displayed as check result, there may be poor connection at either of the HDD data, address and control terminals.

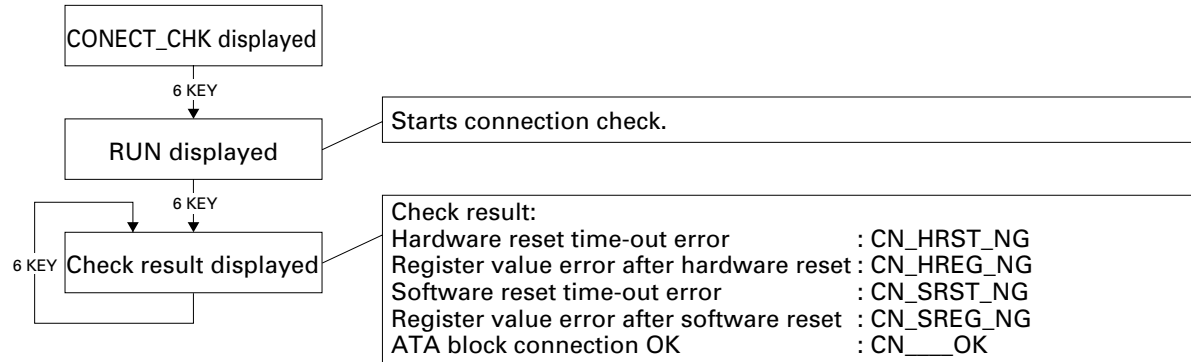


⑨ RTRSFR_CHK menu: HDD READ transfer rate check

This menu measures the READ data transfer rate by 16kByte.


At intervals of three seconds, READ operation is performed repeatedly.

* The displayed values are expressed in hexadecimal number system.

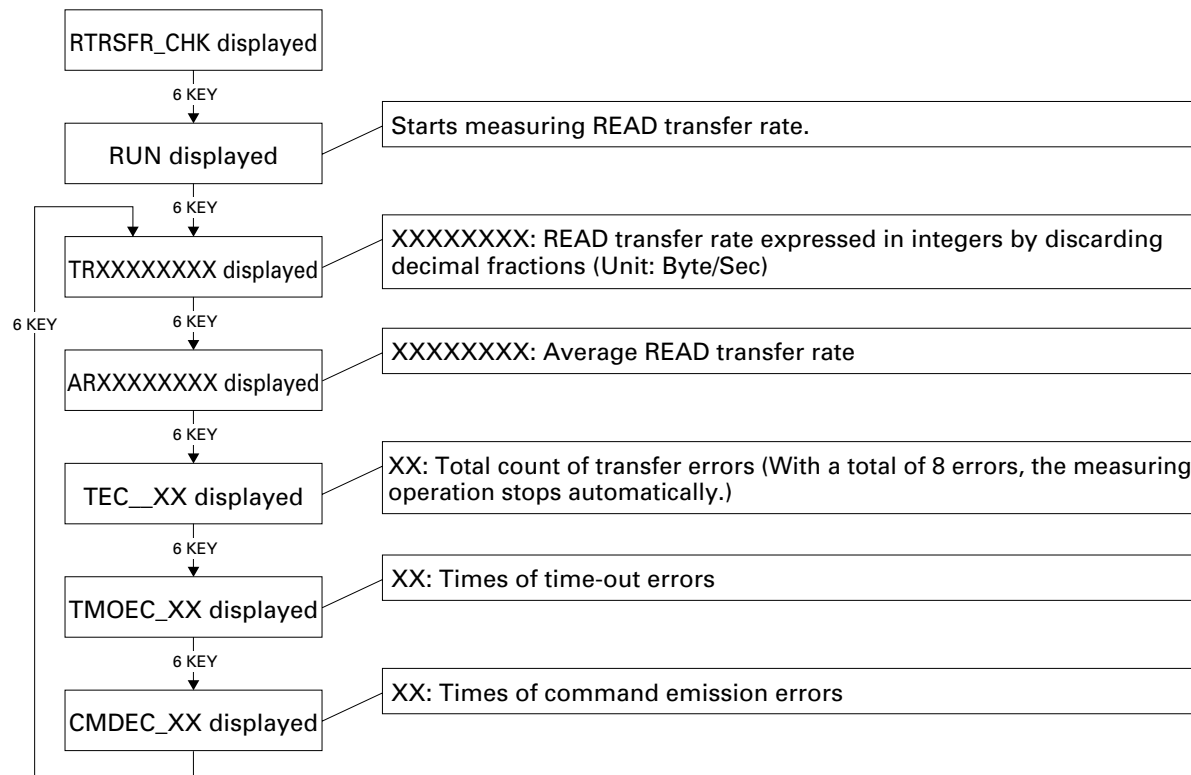


⑩ WTRSFR_CHK menu: HDD WRITE transfer rate check

This menu measures the WRITE data transfer rate by 16kByte.
 At intervals of three seconds, WRITE operation is performed repeatedly.
 * The displayed values are expressed in hexadecimal number system.

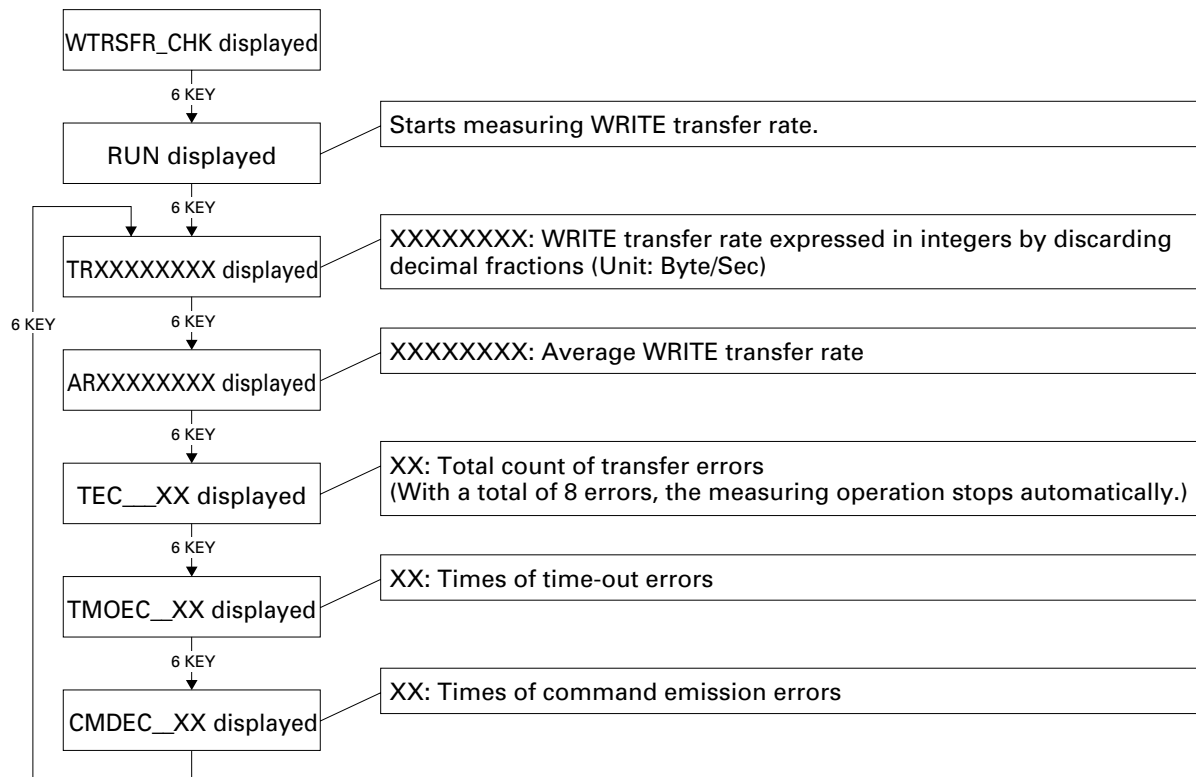

⑪ RESULT menu: HDD test result status

This menu verifies and summarizes the check results from the DIAG_CHK, INFO_CHK, SMART_CHK, TEMP_CHK, and CONECT_CHK menus in the test mode.

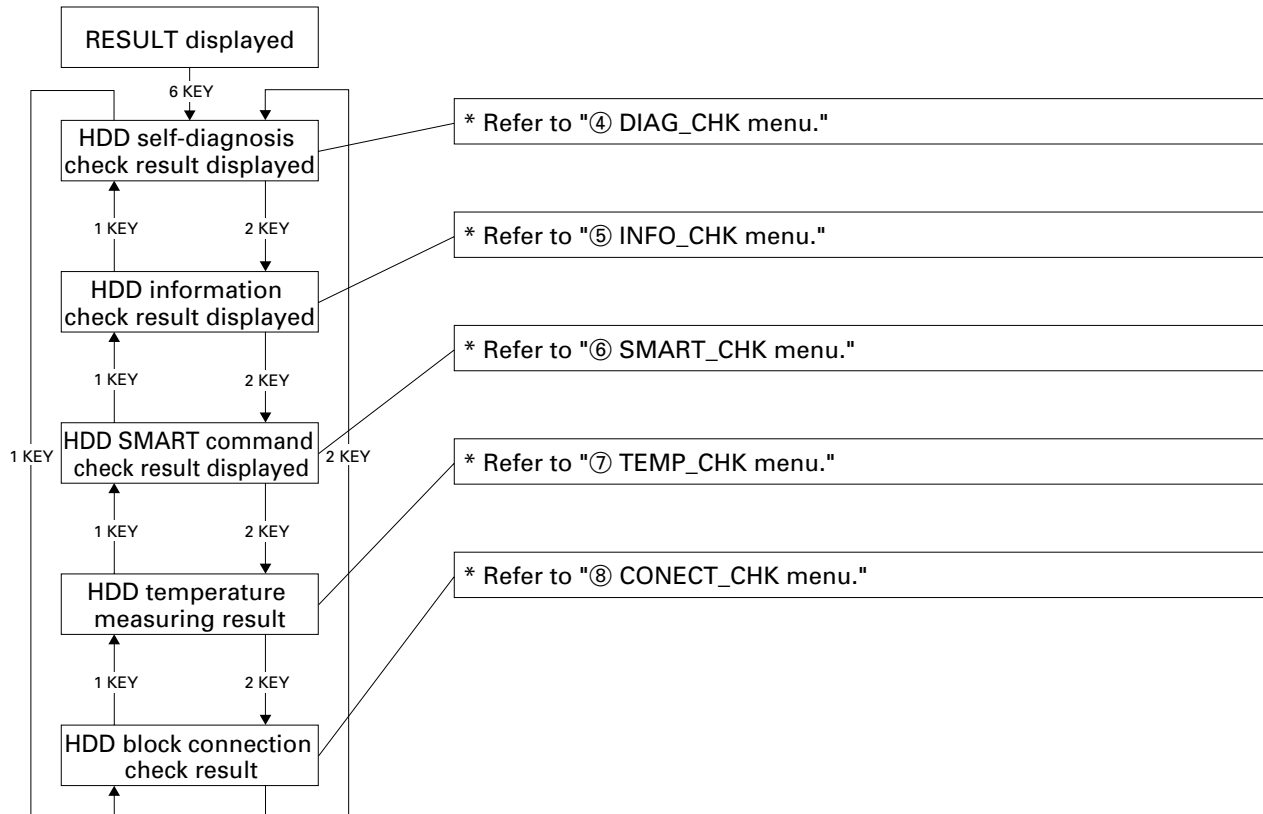

● Error numbers with HDD

Error's name	General explanation and cause	Message on this unit
Not Available HDD	An HDD which cannot be used with this product is connected.	SERVER ERROR-23 (When Check-In) ERROR-23 (Otherwise)
Search Time Out	The destination sector in the HDD could not be reached within the given time.	SERVER ERROR-30 (When Check-In) ERROR-30 (Otherwise)
HDD Full	Additional recording of songs, updating CDDDB (addition of differential data), etc. cannot be done because there is no or not enough free space left in the HDD.	M.Server full (When recording) ERROR-31 (When updating CDDDB) HDD capacity is full (When updating CDDDB)
Violation of copyright rules①	<ul style="list-style-type: none"> • Digital recording (copying) to the HDD cannot be done because the source contents are made with digital recording (copying) (violation of SCMS) • Digital recording (copying) to the HDD cannot be done because the source contents are "No More Copy" contents in SDMI Usage Rules. (violation of SDMI rules) 	Can't copy
Data Write Error	Data could not be recorded to the HDD after given times of "Retry" operation.	WriteERR (When zoning other than FORM1, FORM2) ERROR-55 (When updating CDDDB) SERVER WRITE ERROR (Otherwise)
Violation of copyright rules②	Digital recording (copying) to the HDD cannot be done unless you update this unit to a unit compatible with SDMI Phase 2 because the source contents "has a Trigger bit urging to shift from the screen of SDMI Phase 1 to the screen of SDMI Phase 2" (violation of SDMI②)	ERROR-56
PlayList Full ④	The newly recorded songs for an artist cannot be registered in any of the "Artist Playlist files" for the artist unless you delete one or more "Artist Playlist files" for the artist or songs in them because the maximum number of "Artist Playlist files" for an artist are made, and the maximum number of songs which Playlists can handle are registered in every Playlist file for the artist.	ERROR-5B
PlayList Full ⑤	No more recordings can be done for today unless you delete one or more "Playlist files for each recording date" for today or songs in them because the maximum number (16) of "Playlist files for each recording date" for one day are made, and the maximum number of songs which Playlists can handle are registered in every "Playlist file for each recording date" for today.	ERROR-5-
System Disorder	Disorder with the surrounding circuits (power supply, etc.) are detected while operating.	SERVER ERROR-A0 (When Check-In) ERROR-A0 (Otherwise)
No Digital Data	No digital data are input into the core module when digital input (TX) is selected when recording.	NO SIGNAL, ERROR-A2
Communication Error	<ul style="list-style-type: none"> • Reading data from/writing data to SRAM was not successful. (When playing compressed audio data recorded in the HDD such as ATRAC3.) • Communication between the HDD and the core module microcomputer was not successful. Error on communication of the microcomputer/LSI in the core module block such as ...↓ Cut of communication line, defective microcomputer/LSI, noises, etc.	SERVER ERROR-B0 (When Check-In) ERROR-B0 (Otherwise)

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

● Removing the Case (not shown)

1. Remove the three screws and then Case.

● Removing the CD Mechanism Module (Fig.1)

1 Remove the four screws.

Disconnect the connector and then remove the CD Mechanism Module.

(CAUTION)When reassembling the CD Mechanism Module, be sure to insert the black side of the FLEXIBLE PCB into the side of the CD Mechanism Module.

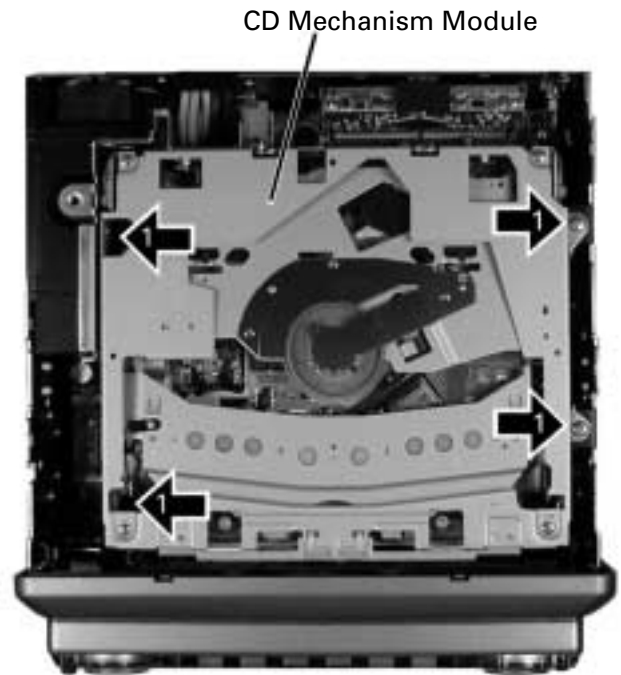


Fig.1

● Removing the HDD (Fig.2)

1 Remove the four screws.

Disconnect the connector and then remove the HDD.

(CAUTION)When fixing the HDD section to the lower case (CNC9348) with screws (BMZ30P040FMC), do not use an electric screwdriver.

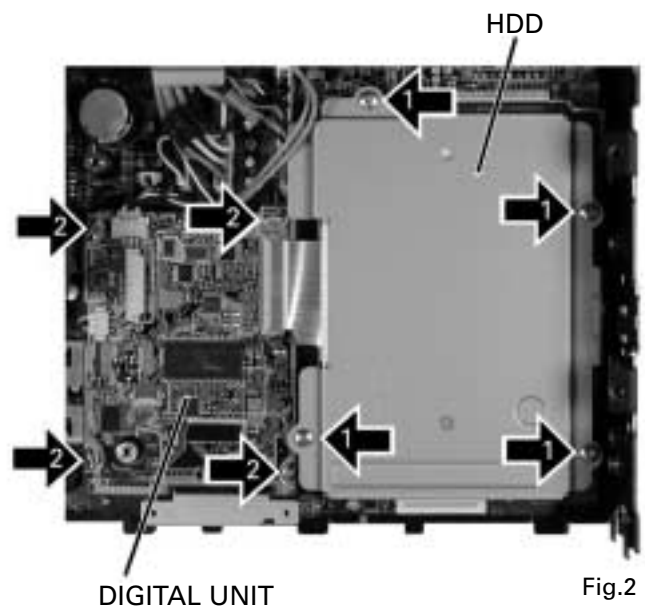


Fig.2

● Removing the Panel Assy (Fig.3)

- ➡ 1 Remove the two screws.
- ➡ 2 Remove the two screws.
- ➡ 3 Remove the three screws.

Remove every connector, then remove two tabs on the both sides and three tabs on the bottom, then pull the Panel Assy.

(CAUTION)When reassembling the Panel Assy, insert the FLEXIBLE PCB at the right side in the picture, then bend it inward.

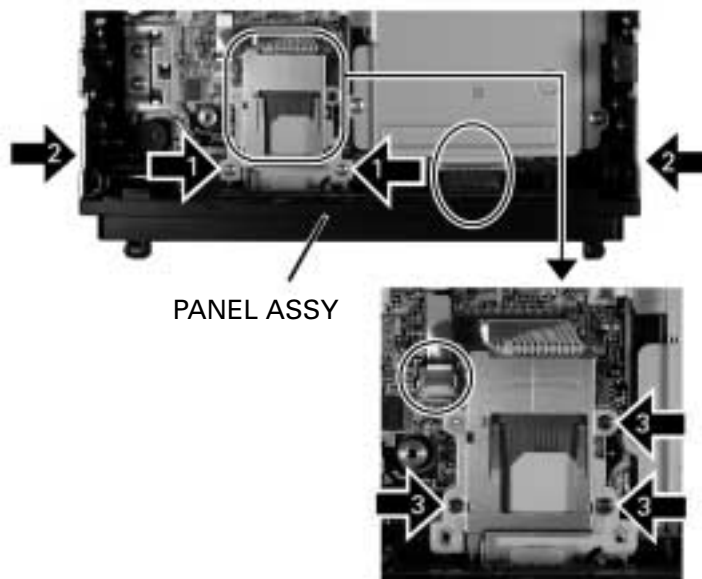


Fig.3


● Removing the Digital Unit (Fig.2)

- ➡ 2 Straight the tabs at four locations indicated.

Disconnect the connector and then remove the Digital Unit.

● Removing the Tuner Amp Unit (Fig.4)

- ➡ 1 Remove the screw.
- ➡ 2 Remove the two screws.
- ➡ 3 Straight the tabs at three locations indicated.
- ➡ 4 Remove the three screws.
- ➡ 5 Remove the two screws and then remove the Tuner Amp Unit.

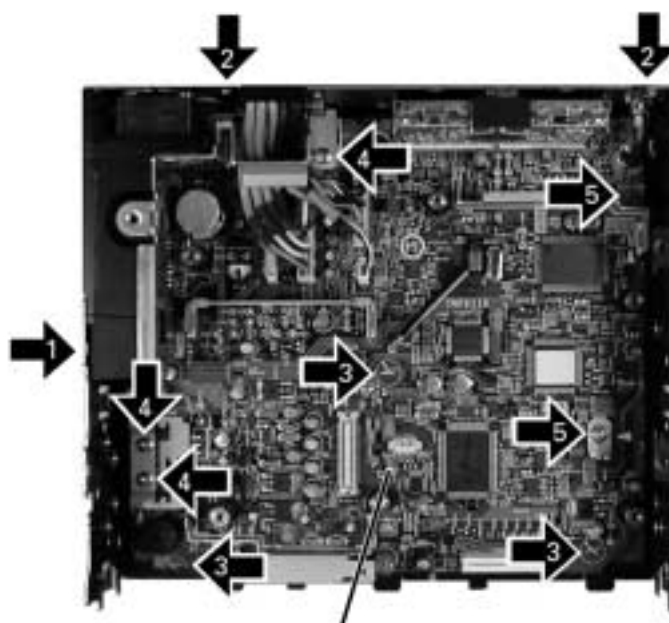

Tuner Amp Unit


Fig.4

● Removing the Power Supply Unit (Fig.5)

Remove the two screws and then remove the Case.

1 Remove the three screws.

2 Straight the tabs at two locations indicated and then remove the Power Supply Unit.

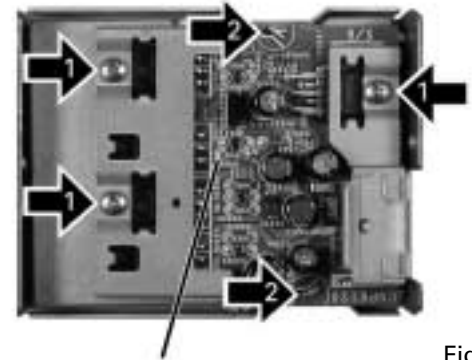


Power Supply Unit

Fig.5

● CAUTION on disassembling the unit


Do not force anything to pieces because the OEL module and the keyboard unit adhere to each other with a Cushion.

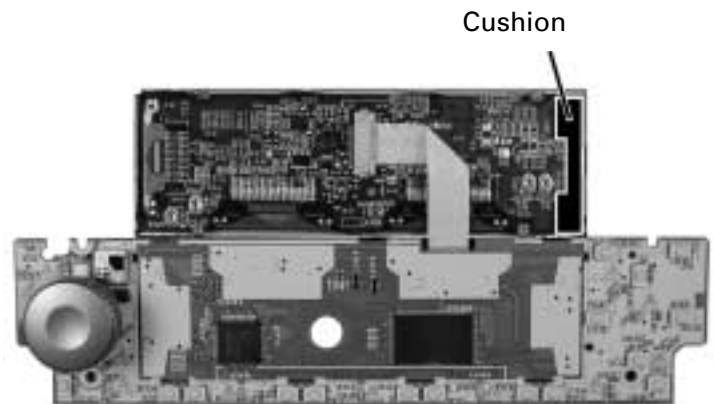

● CAUTION on reassembling the unit

When reassembling the CD Mechanism Module, arrange the cords as shown in the picture.


When reassembling the Digital Unit, arrange the cords as shown in the picture.

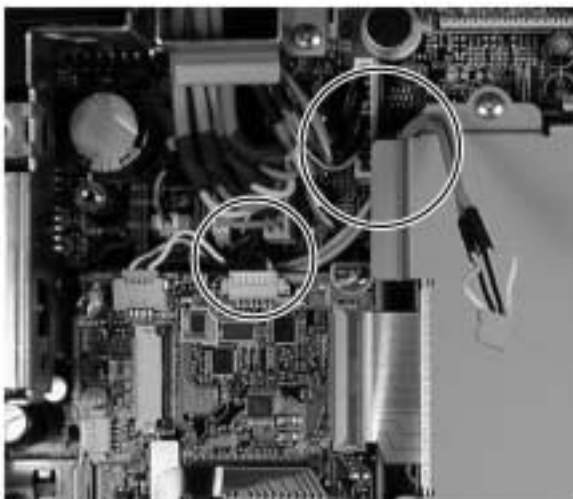

The numeral enclosed by a circle in the drawing indicates the order of removal.


● How to hold the mechanism unit

1. Hold the top frame and main frame.
2. Do not hold the front of the top frame tightly because its strength is low.

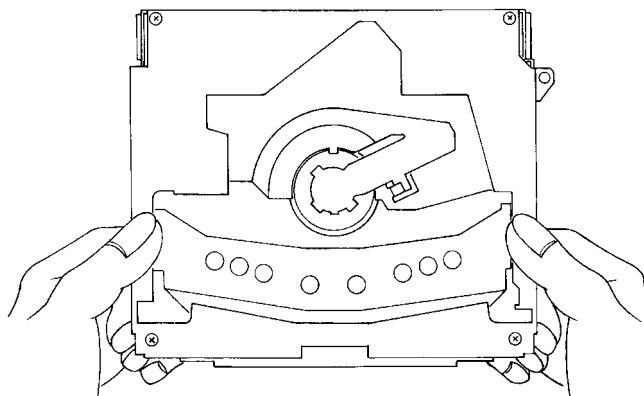


● How to remove the top frame and main frame

1. Remove the screws (4) and screws (2) of the top frame in the clamped state and remove the top frame.
2. After having removed the screws of the dampers (2) on the right and the dampers, remove the main frame.
3. Remount the product connector with the frame removed and eject a disk.

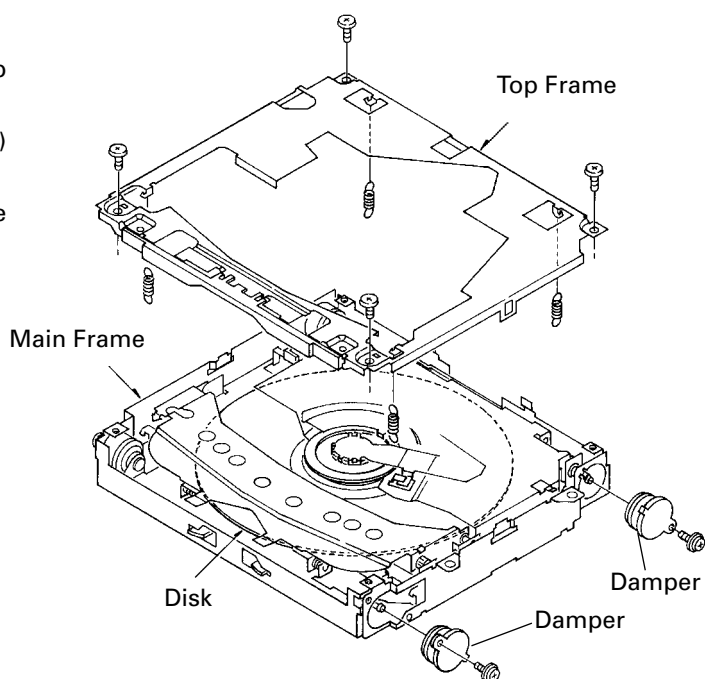


● How to remove the clamper arm assy and guide arm assy

1. Remove a total of three right, left and rear screws and remove the clamper assy.
2. Remove the left spring and remove the torsion spring hook of the right fulcrum unit.
3. Remove the E ring of the left fulcrum and remove the guide arm assy.

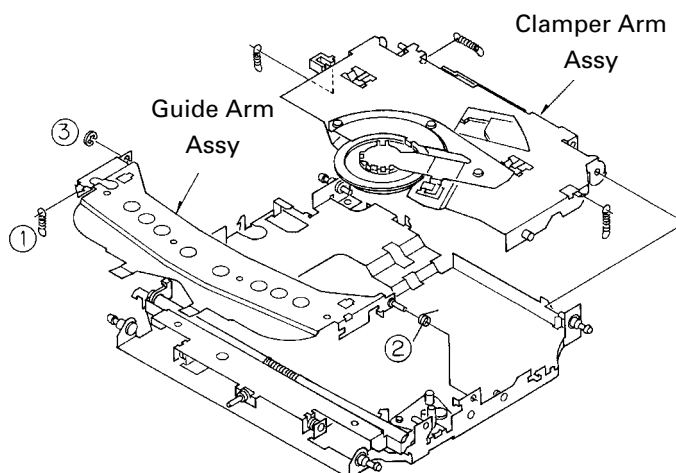

● How to remove the loading arm assy and spindle motor

1. Remove the E ring of the left fulcrum and remove the spring and loading arm assy.
2. Remove the connector of the spindle motor and remove the mounting screws (3).

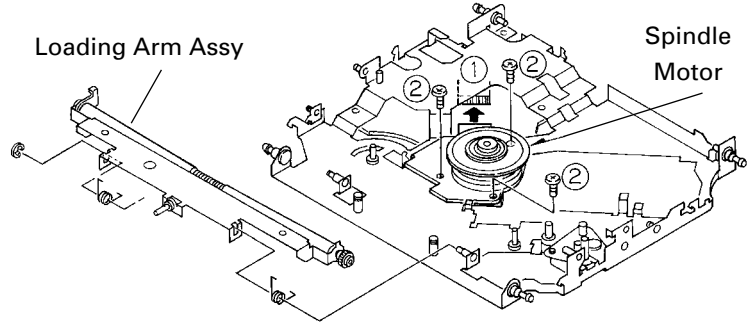

● How to remove the loading motor assy


1. Remove the gear cover screw and remove the gear cover.
2. Remove the holder which was tightened together with the gear cover.

(Note):

At assembly, tighten the holder together with the gear cover by approaching the holder to the arrow view direction and touching the tip of the motor shaft.


At that time, if the holder is tightened with screws while it is being pressed, the motor load is increased and causes an error (NG). While the holder is approached, separate the hand from the holder and the holder is tightened with the screws.

3. Remove the solder of the motor lead wire.
4. Remove the leaf spring screw and remove the holder and leaf spring.
5. Put the mechanical unit face downward, remove the mounting screws of the loading motor assy and remove the loading motor assy.

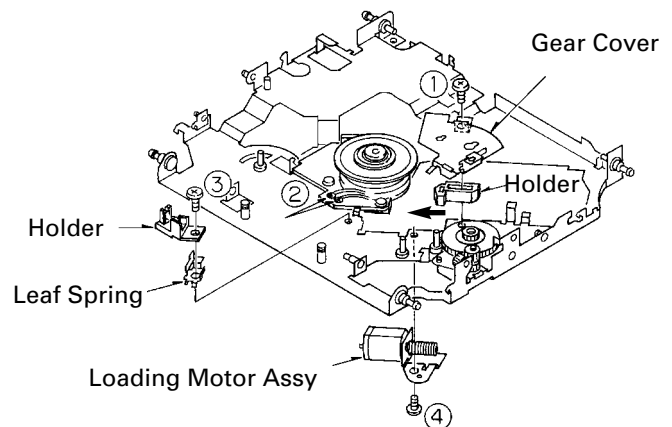


● **How to remove the carriage motor assy**

1. Remove the solder of the carriage motor lead wire.
2. Remove the grease cover screw and remove the grease cover.
3. After having removed the lead wire processing of the motor, remove the mounting screw of the carriage motor assy.

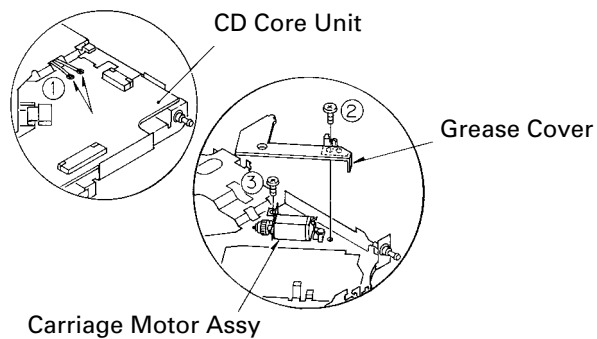


● **How to remove the pickup**

1. Mount the jumper pin and remove the pickup connector.
2. After having the processing of flexible wires, remove the mounting screw of the main shaft holder and remove the pickup together with the main shaft holder and the main shaft.

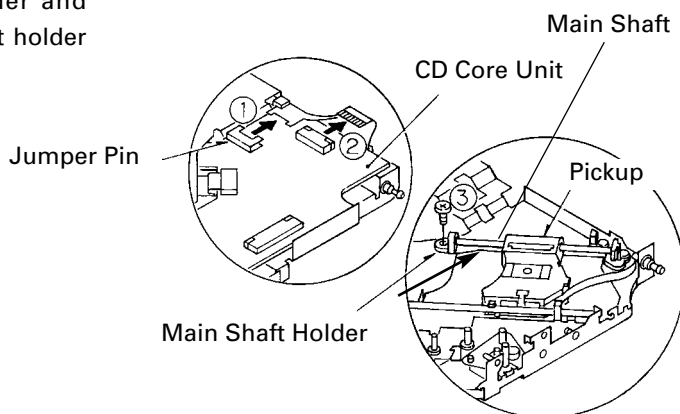

7.1.2 CONNECTOR FUNCTION DESCRIPTION

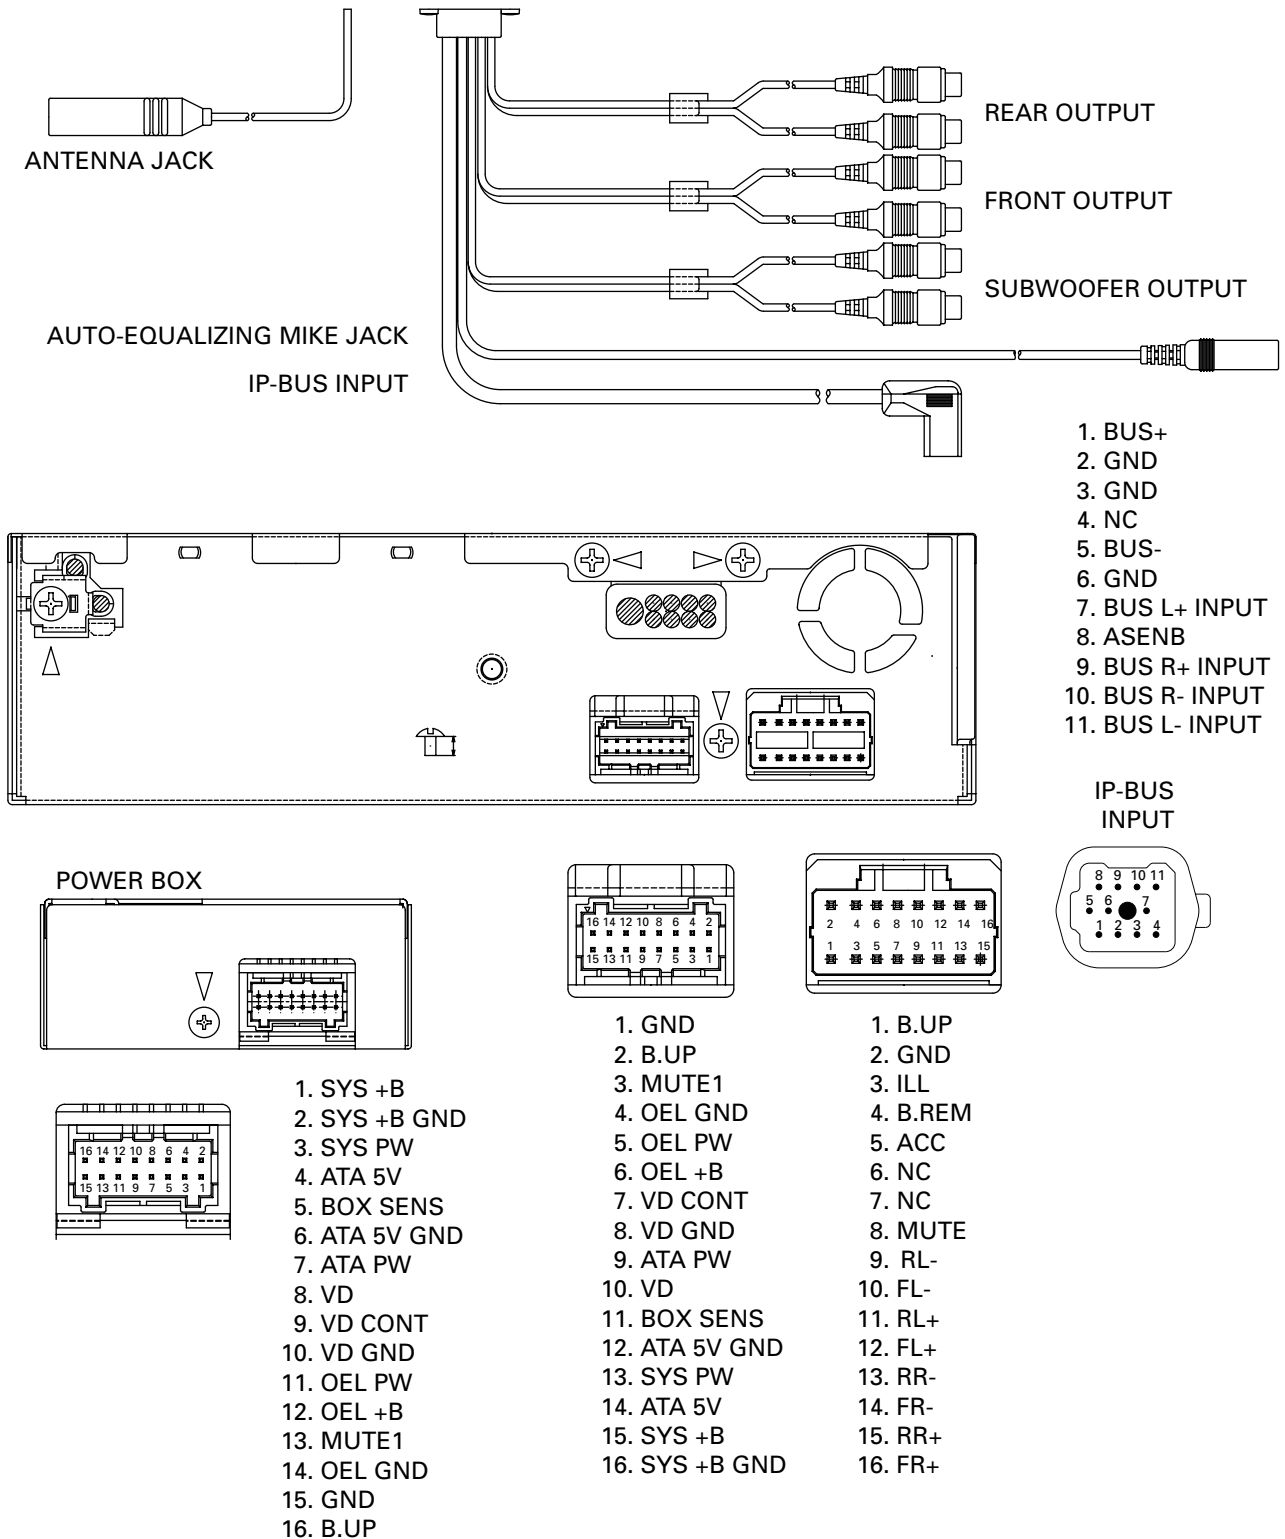


7.2 IC

TA2153FN	NJU7223DL1-33	TC74VHC157FT	CXD1859AR
TC9495F2	NJM2870F18	AK5353VT	PD5646A
PE5273A	TC74VHC126FT	S-80818ANUP-EDF	PD5647A
BA5811FM	PML011A	LC78683ES	
PD5658A	PD5704A	TC74LCXR163245FT	
PD6364A	PDG262A	PE5218C	
PD8081A	TC74VHCT125AFT	TC55V16100FTI-15	
PD3428A	TC74LVXC3245FS	CXK2000EN	

● Pin Functions (TA2153FN)

Pin No.	Pin Name	I/O	Function and Operation
1	VCC	-	Power supply voltage terminal
2	RFGC	I	RF amplitude adjustment control signal terminal
3	GMAD	I	AGC amplifier frequency characteristic adjustment terminal
4	FNI	I	Main beam amplifier input terminal
5	FPI	I	Main beam amplifier input terminal
6	TPI	I	Sub beam amplifier input terminal
7	TNI	I	Sub beam amplifier input terminal
8	MDI	O	Monitor photodiode amplifier input terminal
9	LDO	I	Laser diode amplifier output terminal
10	SEL	I	APC circuit ON/OFF signal, LDO terminal control input terminal and bottom and peak detection frequency switching terminals
11	TEB	I	Tracking error balance adjustment signal input terminal
12	2VRO	O	Reference voltage (2VRO) output terminal
13	TEN	I	Tracking error signal generation amplifier reverse phase input terminal
14	TEO	O	Tracking error signal generation amplifier output terminal
15	SBAD	O	Sub beam addition signal output terminal
16	FEO	O	Focus error signal generation amplifier output terminal
17	FEN	I	Focus error signal generation amplifier reverse phase input terminal
18	SEB	I	RFRP generation circuit mode switching terminal
19	VRO	O	Reference voltage (VREF) output terminal
20	RFRP	O	Signal generation amplifier output terminal for track count
21	BTC	I	Bottom detection time constant adjustment terminal for RFCT signal generation
22	RFCT	O	RFRP signal center level output terminal
23	PKC	I	Peak detection time constant adjustment signal for RFCT signal generation
24	RFRPIN	I	Signal generation amplifier input terminal for track count
25	RFGO	O	RF signal amplitude adjustment amplifier output terminal
26	GVSW	I	AGC, FE or TE amplifier gain switching terminal
27	AGCIN	I	RF signal amplitude adjustment amplifier input terminal
28	RFO	O	RF signal generation amplifier output terminal
29	GND	I	GND terminal
30	RFN2	I	RF signal generation amplifier input terminal

TA2153FN

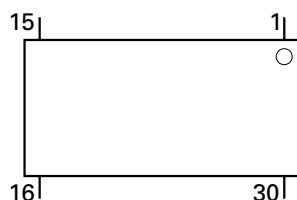


● Pin Functions (TC9495F2)

Pin No.	Pin Name	I/O	Function and Operation
1	TESTO		Test mode terminal
2	HSO	O	Replay speed flag output terminal
3	UHSO	O	Replay speed flag output terminal
4	EMPH	O	Emphasis flag output terminal for sub code Q data
5	LRCK	O	Channel clock (44.1 kHz) output terminal
6	Vss		Digital ground terminal
7	BCK	O	Bit clock output terminal
8	AOUT	O	Digital audio data output terminal
9	DOUT	O	Digital out output terminal
10	MBOV	O	Buffer memory over signal output terminal
11	IPF	O	Correction flag output terminal
12	SBOK	O	CRCC decision result output for sub code Q data
13	CLCK	I/O	Clock input/output terminal for sub code P-W data read
14	VDD		Digital + power supply terminal (5 V)
15	Vss		Digital ground terminal
16	DATA	O	Sub code P-W data output terminal
17	SFSY	O	Replay-system frame sync signal output terminal
18	SBSY	O	Sub code block sync output terminal
19	SPCK	O	Clock for processor status signal read
20	SPDA	O	Processor status signal output terminal
21	COFS	O	Correction-system frame clock (7.35 kHz) output terminal
22	MONIT	O	LSI internal signal output terminal
23	VDD		Digital + power supply terminal (5 V)
24	TESIOO	I	Test input/output terminal
25	P2VRFF		PLL-system only 2VREF terminal
26	HSSW	O	The VREF voltage is reached for double or quad speed.
27	ZDET	O	One-bit DAC zero detection flag output terminal
28	PDO	O	Phase error signal issue between the EFM and PLCK signals
29	TMAXS	O	TMAX detection result output terminal
30	TAMX	O	TMAX detection result output terminal
31	LPFN	I	Reverse input terminal of amplifier for lowpass filter
32	LPFO	O	Output terminal of amplifier for lowpass filter
33	PVREF		PLL-system only VREF terminal
34	VCOREF	I	VCO center frequency reference level terminal
35	VCOF	O	Filter terminal for VCO
36	Avss		Analog-system ground terminal
37	SLCO	O	Output terminal of DAC for data slice level generation
38	RFI	I	RF signal input terminal
39	AVDD		Analog-system power supply terminal (5 V)
40	RFCT	I	RFRP signal center level input terminal
41	RFZI	I	Input terminal for RFRP signal zero cross
42	RFRP	I	RF ripple signal input terminal
43	FEI	I	Focus error signal input terminal
44	SBAD	I	Sub beam addition signal input terminal
45	TSIN	I	Test input terminal
46	TEI	I	Tracking error input terminal
47	TEZI	I	Input terminal for tracking error or zero cross
48	FOO	O	Focus equalizer output terminal
49	TRO	O	Tracking equalizer output terminal
50	VREF		Analog reference power supply terminal
51	RFGC	O	RF amplitude adjustment control signal output terminal
52	TEBC	O	Tracking balance control signal output terminal
53	FMO	O	Feed equalizer output terminal
54	FVO	O	Speed error signal or feed search EQ output
55	DMO	O	Disc equalizer output terminal
56	2VREF		Analog reference power supply terminal
57	SEL	O	APC circuit ON/OFF signal output terminal

Pin No.	Pin Name	I/O	Function and Operation
58	FLGA	O	External flag output terminal for internal signal monitor
59	FLGB	O	External flag output terminal for internal signal monitor
60	FLGC	O	External flag output terminal for internal signal monitor
61	FLGD	O	External flag output terminal for internal signal monitor
62	VDD		Digital + power supply terminal (5 V)
63	Vss		Digital ground terminal
64	IO0	O	RF amplifier gain switching terminal
65	IO1	O	Not used
66	IO2	I	HOME detection switch input terminal
67	IO3	O	FocusDrv and signal output terminal
68	DMOUT	I	Not used
69	CKSE	I	Usually open
70	DACT	I	DAC test mode terminal
71	TESIN	I	Test input terminal
72	TESIO1	I	Test input/output terminal
73	Vss		Digital ground terminal
74	PXI	I	DPS-system clock oscillator circuit input terminal
75	PXO	O	DPS-system clock oscillator circuit output terminal
76	VDD		Digital + power supply terminal (5 V)
77	Xvss		Ground terminal for system clock oscillator circuit
78	XI	I	System clock oscillator circuit input terminal
79	XO	O	System clock oscillator circuit output terminal
80	XVDD		For system clock oscillator circuit + power supply terminal
81	DVSR		R channel D/A converting unit power supply terminal
82	RO	O	R channel data forward rotation output terminal
83	DVDD		D/A converting unit power supply terminal (5 V)
84	DVR		Reference voltage terminal
85	LO	O	L channel forward rotation output terminal
86	DVSL		L channel D/A converting unit power supply terminal
87	TEST1	I	Test mode terminal
88	TEST2	I	Test mode terminal
89	TEST3	I	Test mode terminal
90	BUS0	I/O	Data input/output terminal for microcomputer interface
91	BUS1	I/O	Data input/output terminal for microcomputer interface
92	BUS2	I/O	Data input/output terminal for microcomputer interface
93	BUS3	I/O	Data input/output terminal for microcomputer interface
94	VDD		Digital + power supply terminal (5 V)
95	Vss		Digital ground terminal
96	BUCK	I	Clock terminal for microcomputer interface
97	CEE	I	Chip enable signal for microcomputer interface
98	TEST4	I	Test mode terminal
99	TSMOD	I	Test mode terminal
100	RST	I	Reset signal input terminal

*TC9495F2

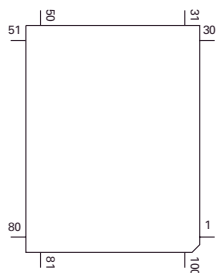

IC's marked by * are MOS type.


Be careful in handling them because they are very liable to be damaged by electrostatic induction.

● Pin Functions (PE5273A)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	B $\overline{\text{SCK}}$	I/O	/C	P-Bus serial clock input/output
2	B $\overline{\text{DATA}}$	I/O	/C	P-Bus serial data input/output
3	CONT	O	C	Servo driver power supply control output
4	CDLOAD	O	C	Load/Eject motor load control output
5	CDEJET	O	C	Load/Eject motor eject control output
6	NC			Not used (Open)
7	R $\overline{\text{ESET}}$			Chip reset
8	VDD1			Positive power supply of parts other than ports (make potential the same as that of VDD0)
9	X2			Connection for crystal oscillating system clock
10	X1	I		Connection for crystal oscillating system clock
11	VSS1			GND for parts other than ports (make potential the same as that of VSS0)
12-14	CBANK0-2	O	C	COMP IC bank setting output 0-2
15	C $\overline{\text{RST}}$	O	C	COMP IC reset output
16-18	NC			Not used (Open)
19	SUBOK	O	C	Output for sub code information being OK
20,21	NC			Not used (Open)
22	DSET	O	C	Light output for disc set indicator
23,24	NC			Not used (Open)
25	DSPMUTE	O	C	DO $\overline{\text{UT}}$ Mute output
26-28	NC			Not used (Open)
29	BRXEN	I/O	/C	P-Bus receivability input/output
30	NC			Not used (Open)
31	CD5VON	O	C	CD+5V power supply control output
32,33	NC			Not used (Open)
34	E $\overline{\text{MPH}}$	O	C	Emphasis information output
35	NC			Not used (Open)
36	X $\overline{\text{RST}}$	O	C	CD LSI reset output
37	NC			Not used (Open)
38	X $\overline{\text{CE}}$	O	C	CD LSI chip enable output
39	X $\overline{\text{PCK}}$	O	C	CD LSI clock output
40-43	X $\overline{\text{PIO3-0}}$	I/O	/C	CD LSI data input/output 3-0
44	NC			Not used (Open)
45	VSS0			GND for ports (make potential the same as that of VSS1)
46	NC			Connected directly to VSS0
47	NC			Not used (Open)
48	V $\overline{\text{DCONT}}$	O	C	VD power supply control output
49	C $\overline{\text{SENS}}$	I		Flap close sense input
50,51	NC			Not used (Open)
52	B $\overline{\text{SRQ}}$	I/O	/C	P-Bus polling demand output
53,54	NC			Not used (Open)
55	VDD0			Positive power supply of ports (make potential the same as VDD1)
56	NC			Not used (Open)
57	V $\overline{\text{DSENS}}$			VD power supply sense input
58	TEMP			Temperature sense input
59	D $\overline{\text{SCSNS}}$			Mechanism SW sense input
60	NC			Not used (Open)
61	A $\overline{\text{DENA}}$	O	C	A/D reference voltage supply control output
62,63	NC			Not used (Open)
64	AVDD			Positive power supply for A/D converter
65	AVREF1			Reference voltage impression for A/D converter
66	AVSS			GND for A/D converter
67,68	NC			Not used (Open)
69-71	NC			Connected to VSS0


Pin No.	Pin Name	I/O	Format	Function and Operation
72	TESTIN	I		Test program start input
73	SPDLFG			FG pulse signal input
74-76	NC			Connected to VDD0
77	BRST			P-Bus reset input
78	NC			Connected to VDD0
79,80	NC			Not used (Open)

* PE5273A

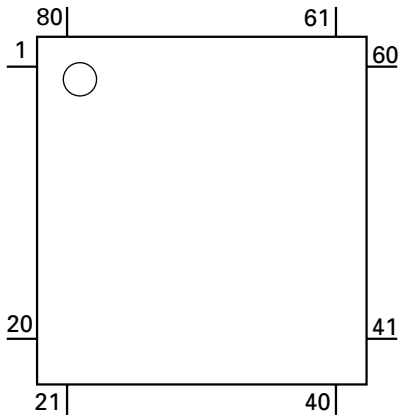

Format	Meaning
C	C MOS

BA5811FM

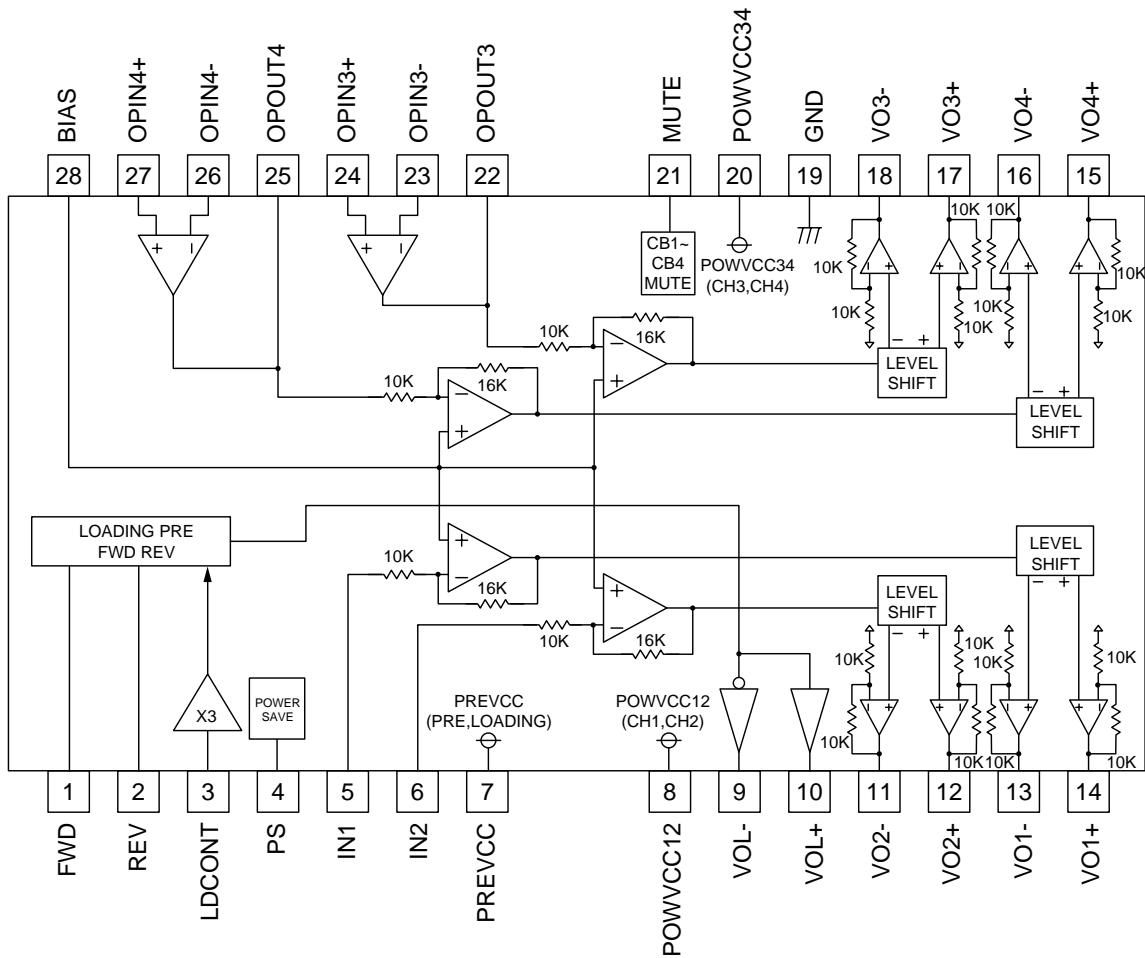


● Pin Functions(PD5658A)


Pin No.	Pin Name	I/O	Format	Function and Operation
1	NC	O		(OPEN)
2	BSCK	O	C	Output of clock (ROM correction)
3	CS	O	C	Output of chip selection (ROM correction)
4-6	NC	O	C	(OPEN)
7	REMin	I		Reception of remote control
8	BYTE	I		Switching between the external data buses
9	CNVss	I		Processor mode (GND)
10-11	NC	O	C	(OPEN)
12	RESET	I		SW Vdd
13	Xout	O	C	Connected to the oscillator
14	Vss1			GND
15	Xin	I		Connected to the oscillator
16	Vcc1			Vcc
17	NMI	O	C	Input of NMI(Vdd pullup)
18-26	NC	O	C	(OPEN)
27-30	KS3-0	I/O	C	Key strobe 3-0
31	KEYDT	O	C	Output of KEY data
32	DISPDT	I	C	Input of data to be displayed
33	NC	O	C	(OPEN)
34	Spstb	O	C	Request for DSP data
35	NC		C	Not used
36	Spdin	I	C	Input of DSP data
37	NC		C	Not used
38	FLBUSY	I		Flash EP-ROM BUSY
39	RDY	I	C	Input of OEL controller ready
40	NC	O		(OPEN)
41	HOLD	I	C	(Vcc pullup)
42	NC	O		(OPEN)
43	BCLK	O		Bus clock
44	RD	O	C	RD pin
45	NC	O		(OPEN)
46	WR	O		WR pin
47-48	CS0-1	O		Chip selection
49-61	A21-9	O		Address bus
62	Vcc2			Vcc
63	A8	O		Address bus
64	Vss2			GND
65-71	A7-1	O		Address bus
72	NC	O		(OPEN)
73-75	D15-13	I/O	C	Data bus
76-88	D12-0	I/O		Data bus
89	NC	O		(OPEN)
90	OELON	O		OEL_ON
91	STBY	O		Flash EP-ROM standby
92	FL12ON	O		Flash EP-ROM 12V on
93-95	KD3-1	I		Key data 3-1
96	Avss			GND
97	KD0	I		Key data 0
98	NC			GND
99	Vcc3			Vcc
100	BSDATA	I/O	C	Input/Output of data (ROM correction)

Format	Meaning
C	C MOS


* PD5658A

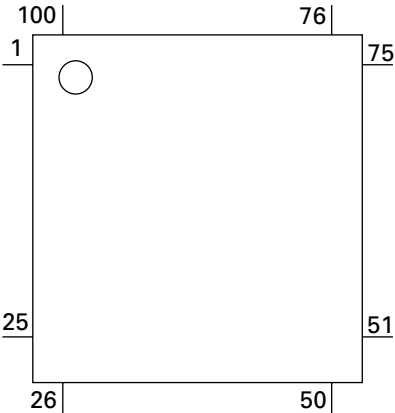

* PD6364A

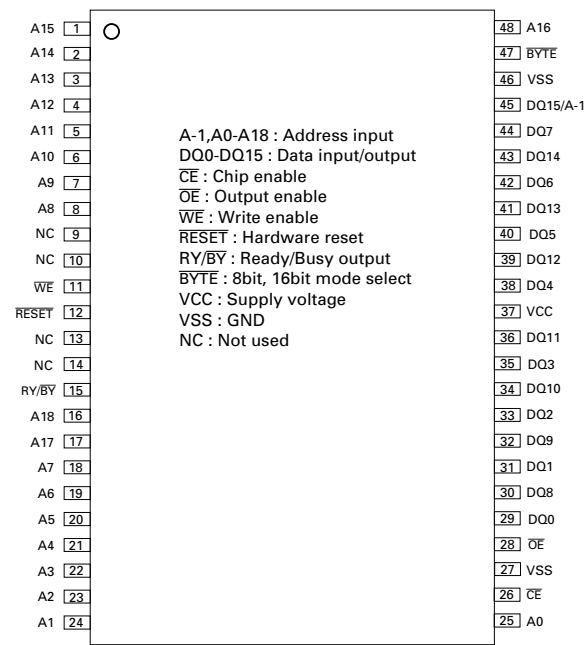


* PD8081A

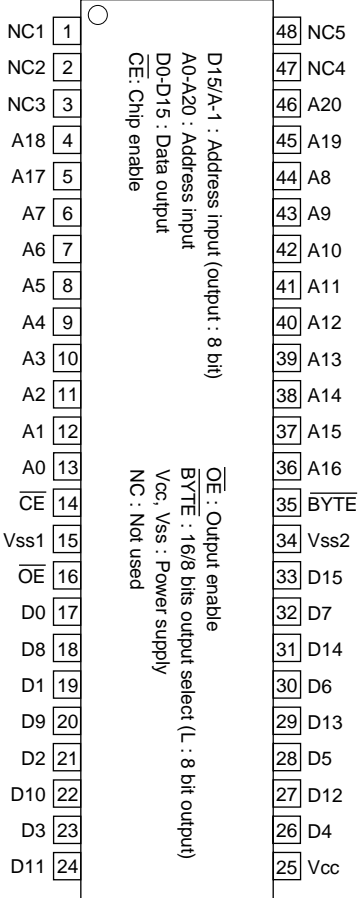


● Pin Functions(PD3428A)

Pin No.	Pin Name	I/O	Function and Operation
1-9	DB7-15	I/O	Data bus IO
10	GND		Ground
11	XIN		Input of oscillation buffer
12	XOUT		Output of oscillation buffer
13	VCC5		Power supply (5V, for X'tal pad)
14	CKSEL	I	Input for selection of system clock
15	IR	I	Input for selection of instruction resistor
16	CS1	I	Input of CPU CS1
17	CS0B	I	Input of CPU CS0B
18	WRB	I	Input of CPU write strobe
19	RDB	I	Input of CPU read strobe
20	BCLK	I	Input of CPU bus clock
21	GND		Ground
22	RDYB	O	Output of ready signals
23	CSOUT	O	Output for of external chip selection
24	CKD	O	Output of transfer clock of serial data
25	CKA	O	Output of drive clock of positive pole
26	VCC5		Power supply (5V, for I/O)
27	LS	O	Output of line synchronization signals
28,29	ADL0,1	O	Output of serial data of positive pole 0,1(for column 0 - 127)
30,31	ADR0,1	O	Output of serial data of positive pole 0,1(for column 128 - 255)
32	CDL	O	Output of serial data of negative pole (for left TAB)
33	CDR	O	Output of serial data of negative pole (for right TAB)
34-37	NC		Not used
38,39	VCC3		Power supply (3V, for 3.3V core)
40	NC		Not used
41,42	GND		Ground
43	TESTRAM	I	Input of settings of macro test mode of internal RAM
44	TESTSEL0	I	Input of settings of display test pattern 0
45	TESTSEL1	I	Input of settings of display test pattern 1
46	SCANSEL	I	Input for selection of vertical display size of display test
47	OBKSEL	I	Input for selection of ghost refresh rate of display test
48-54	NC		Not used
55	RB	I	Input of reset
56	GND		Ground
57	DB0	I/O	Data bus IO
58	VCC5		Power supply (5V, for I/O)
59-64	DB1-6	I/O	Data bus IO


* PD3428A

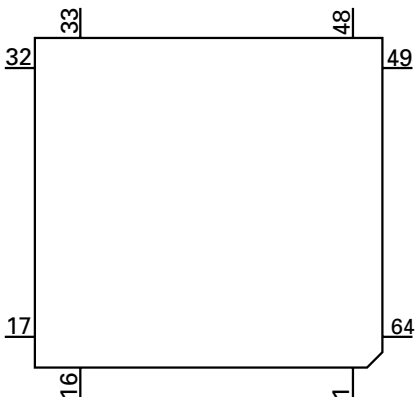


NJU7223DL1-33

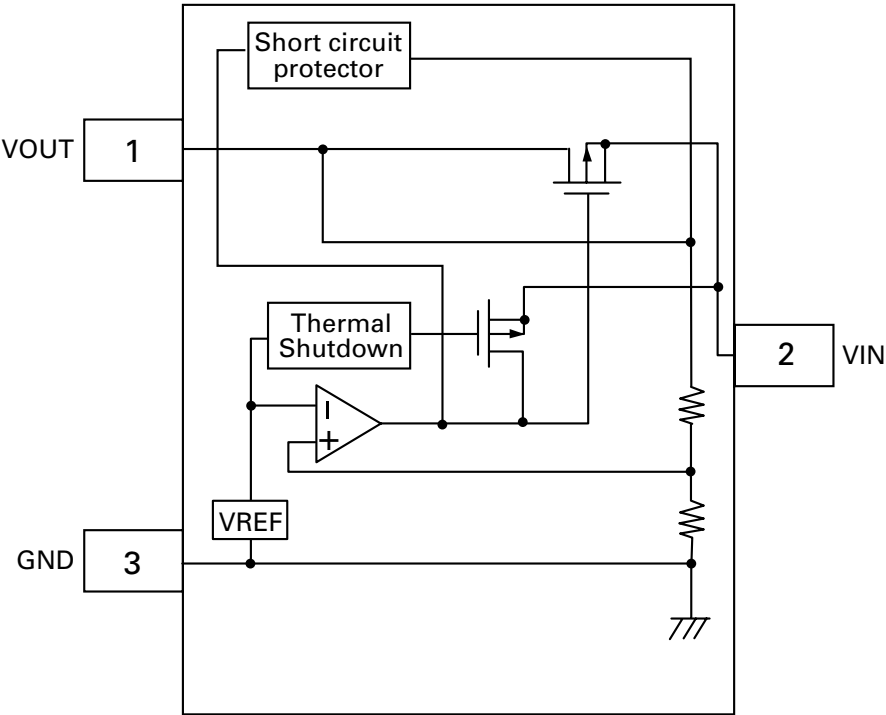


NJM2870F18

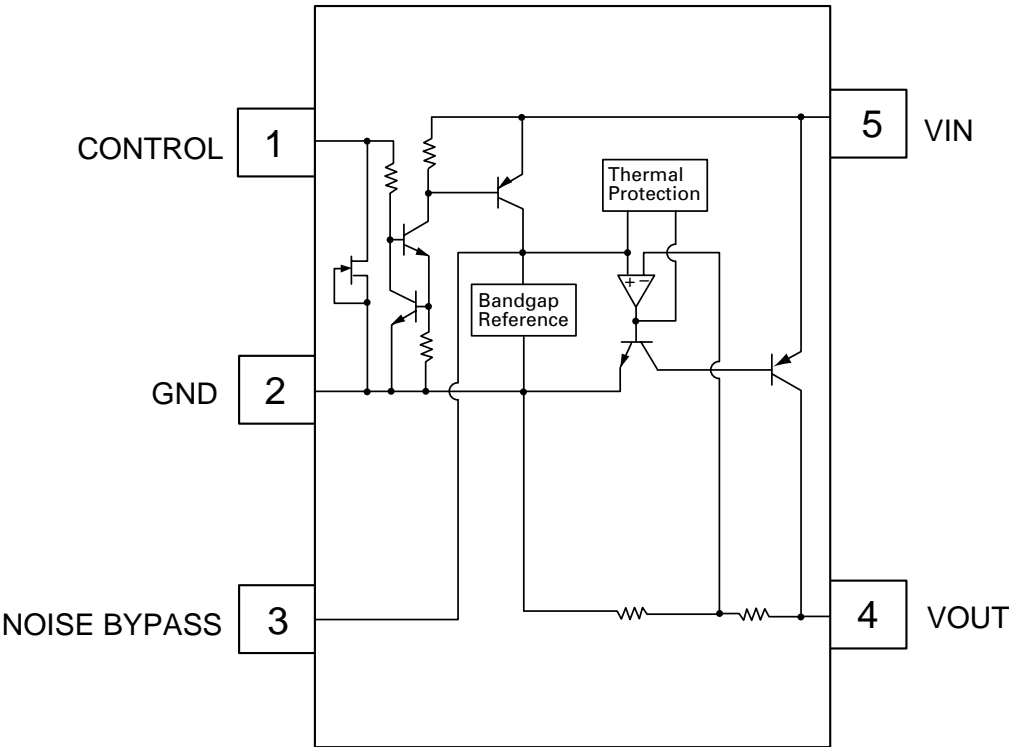

* TC74VHC126FT

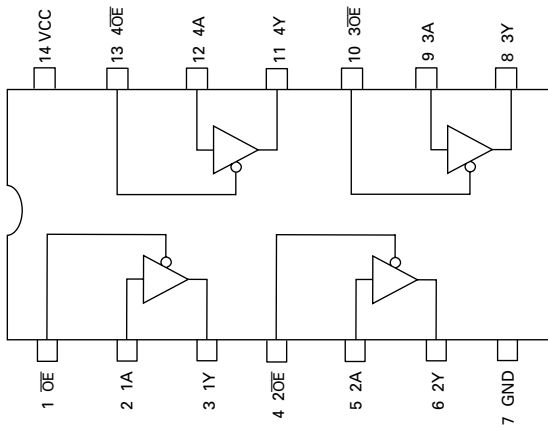

* PML011A

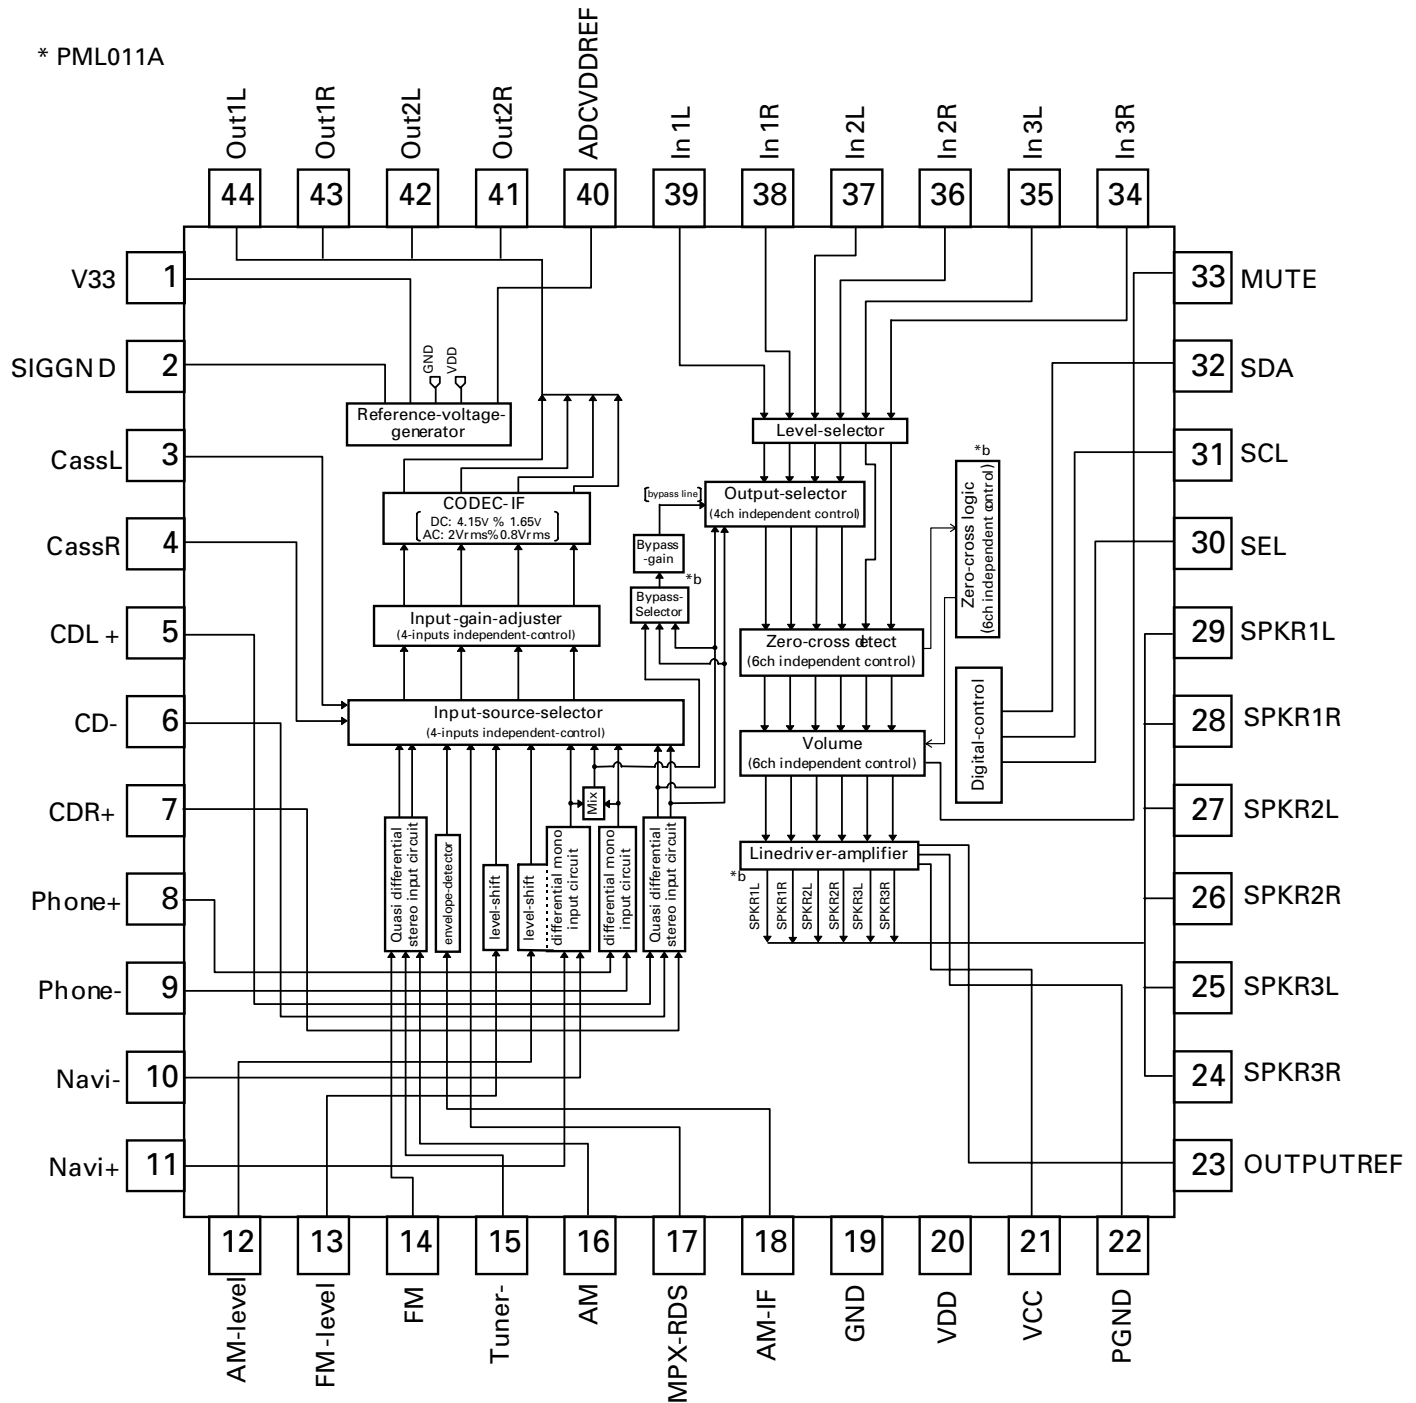


● Pin Functions(PD5704A)

Pin No.	Pin Name	I/O	Format	Function and Operation
1-2	NC		C	Not used
3	VST	O	C	Output of electronic volume strobe
4	VDT	O	C	Output of electronic volume data
5	VCK	O	C	Output of electronic volume clock
6				CNVss
7	MCKRQ	I	C	Input of request for master clock
8	MUTERQ	O	C	Output of hard muting
9		I		Input of hard reset of the microcomputer
10		O		Output of system clock
11				GND for the microcomputer
12		I		Input of system clock (10MHz)
13				Power supply to the microcomputer
14	NC			Not used (1k pullup)
15	BMUTEIN	I	C	Information on digital source clock error
16	SPRQ	I	C	Input of spectrum analyzer request
17	BRST	I	C	Input of PBUS reset
18	AQTEST	I	C	Request for starting AEQ evaluation mode
19	MUTEIN	I	C	Input of information on system muting
20-22	NC			Not used
23	SPDT	O	C	Output of data of spectrum analyzer
24	DSPOUT	O	C	Output of DSP serial data
25	DSPIN	I	C	Input of DSP serial data
26	DSPCK	O	C	Output of DSP serial clock
27	NC			Not used
28	BSO	O	C	Output of PBUS serial data
29	BSI	I	C	Input of PBUS serial data
30	BSCK	I/O	C	Input/output of PBUS serial clock
31	NC			Not used
32	BSRQ	I/O	C	PBUS service request
33	BRXEN	I/O	C	PBUS receivable information
34	NC			Not used
35	DSPON	O	C	Information on completion of DSP initialization
36	CD_ANLG	I	C	Information on CD digital analog
37	CDFS1	I	C	Information on CD/MP3 sampling 2
38	CDFS0	I	C	Information on CD/MP3 sampling 1
39	TESTIN	I	C	Request for starting test program
40	DSPPW	O	C	Output of power supply to DSP
41	NC			Not used
42	MICSENS	I	C	Input of microphone sensing
43	DSSENS	I	C	Information on detaching the front panel
44-49	NC			Not used
50	ROTB	I	C	Input of information on rotary volume B
51	ROTA	I	C	Input of information on rotary volume A
52	NC			Not used
53	DACPD	O	C	Switching of DAC power
54	DACDEM1	O	C	Switching of DAC de-emphasis 2
55	DACDEM0	O	C	Switching of DAC de-emphasis 1
56	PLCKOUT	O	C	Request for output of PLL clock
57	FSSEL	O	C	DSP: output of request for switching of FS
58	MCKRQ2	I	C	HDD,MS: request for clock while REC
59	MODEL	I	C	Information identifying the model
60	DSPRST	O	C	System reset of SONY DSP
61	MCKOUT	O	C	Request for output of master clock
62	LEV_CH	O	C	Information on average level of spectrum analyzer
63	DSPMS	O	C	Switching between master/slave of SONY DSP


Pin No.	Pin Name	I/O	Format	Function and Operation
64	DSPLAT	O	C	SONY DSP: latch output
65	DSPRDY	I	C	SONY DSP: IF ready/busy
66	EMPHIN	I	C	Input of information on emphasis
67-73	NC			Not used
74	NOISE	I		Input of noises for ASL
75				GND for the analog system
76	NC			Not used
77		I		Input of reference voltage for AD
78				Power supply to the analog system
79-80	NC			Not used

* PD5704A

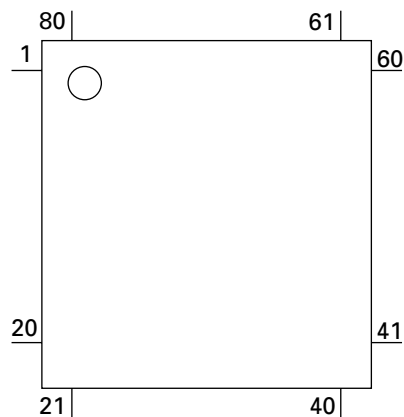


Format	Meaning
C	C MOS


* PDG262A

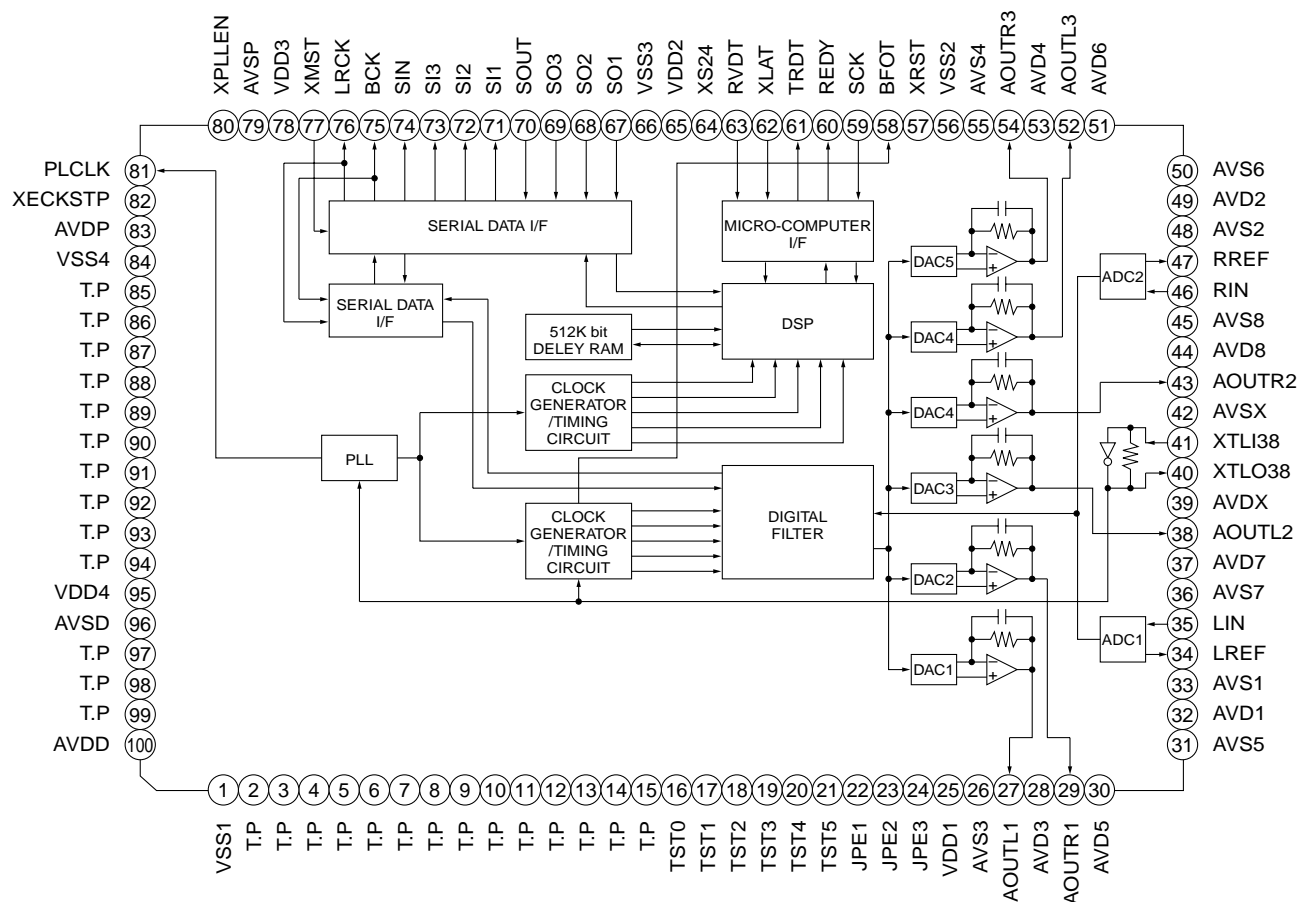


* TC74VHCT125AFT

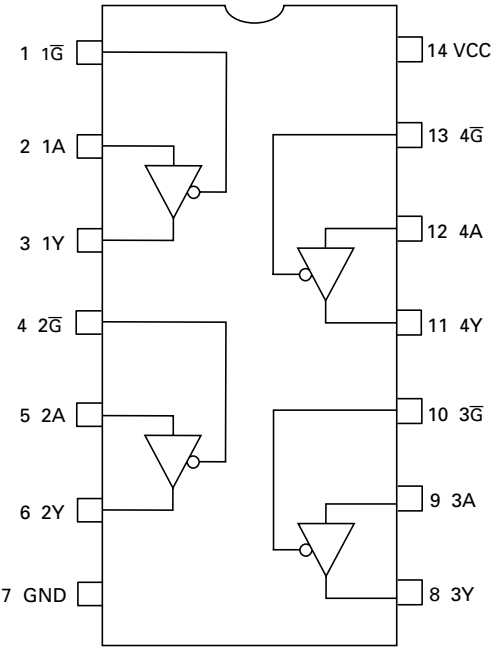


* TC74LVXC3245FS

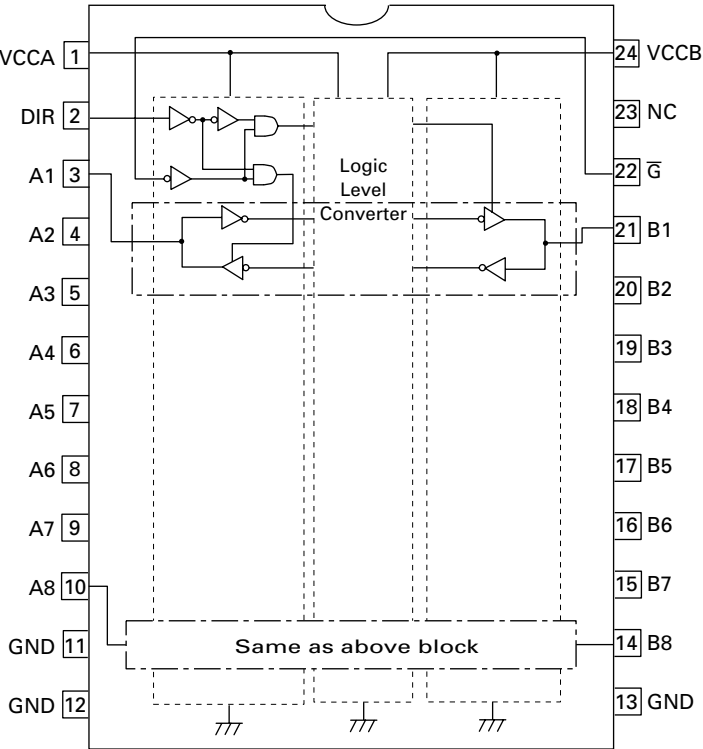


* TC74VHC157FT

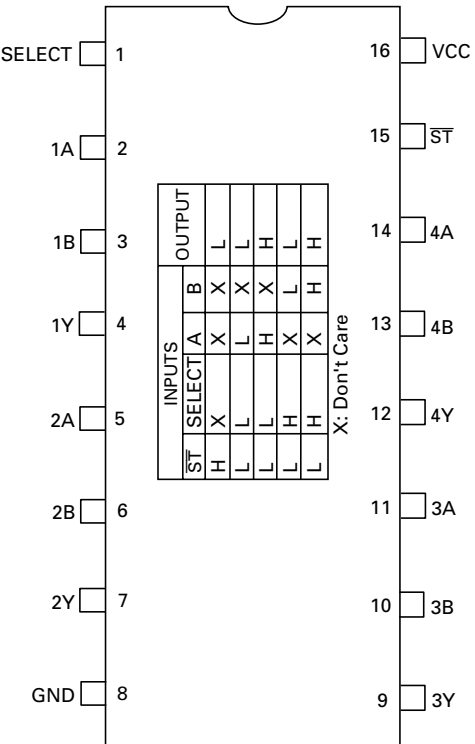


* AK5353VT

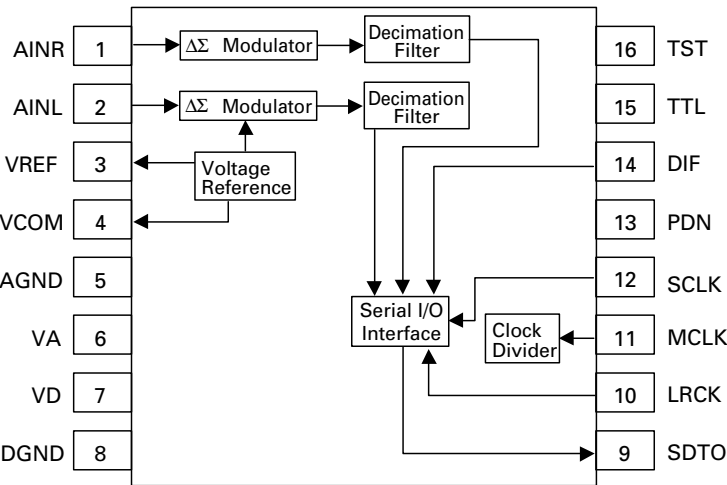

* S-80818ANUP-EDF

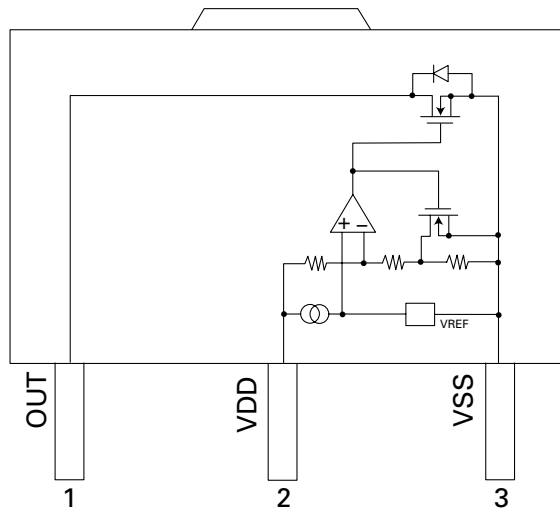

* LC78683ES

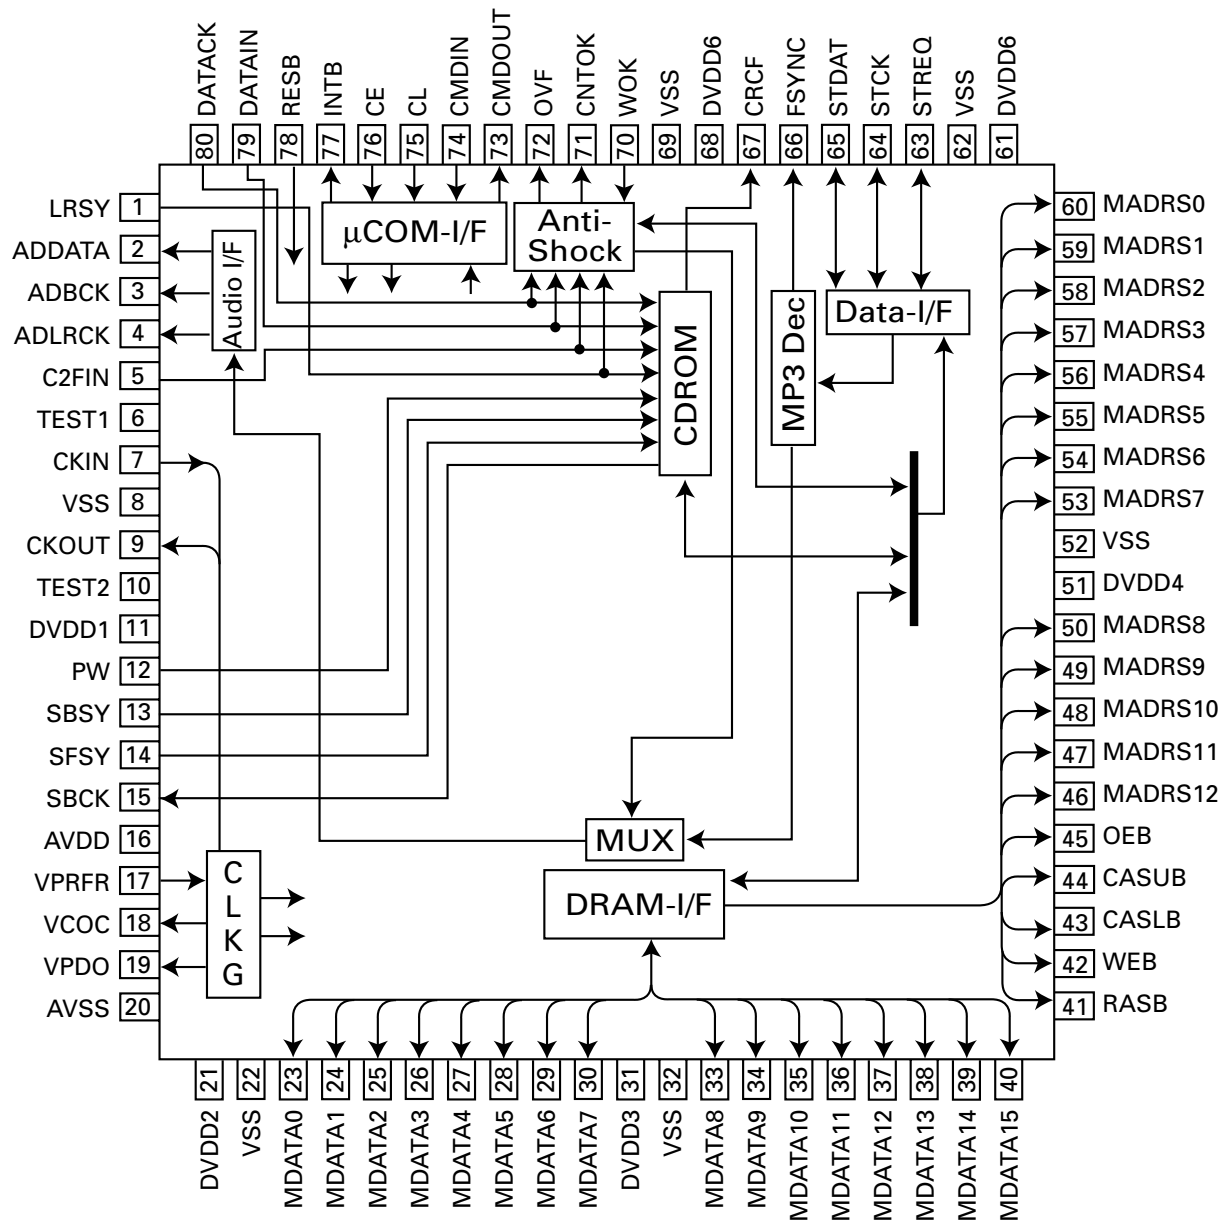




● Pin Functions(PE5218C)


Pin No.	Pin Name	I/O	Function and Operation
1-7	D14-8	I/O	Input/output of data bus (bit15 - bit0)
8	VDD		VDD
9	VSS		VSS
10-17	D7-0	I/O	Input/output of data bus (bit15 - bit0)
18	VPP		VPP
19	ATADMARQ	I	ATA: input of DMA request signals
20	RECON	O	Output of controls of switching (record,input/play,out)
21	DEMPH	O	Output of de-emphasis for digital DSP
22	ATRAC3ON	O	Output of controls of switching (ATRAC3/CD-DA&CD-ROM(MP3))
23	PCL	O	Output of pulses for adjusting the clock
24	FSYNC		LC78683E: MP3 frame synchronization signals
25	CRCF	I	Signals to determine Reset of CD mechanism (DSPMUTE)
26	MSARI	I	Input of detection of MS half (detection of reverse insertion)
27	VDD		VDD
28	VSS		VSS
29	ATADMAK	O	ATA: output of DMA acknowledgement signals
30	FWRIN	I	Input of settings of writing mode for self-rewriting of Flash EP-ROM
31	LVL_CH	I	Input of monitoring level of analog input for HDD recordings
32	BDIR1	O	H2CDS: output of direction switching of P-BUS5/3.3V converter IC
33	BDIR0	O	System: output of direction switching of P-BUS5/3.3V converter IC
34	DASP	I	ATA: input of device active signals
35	IORDY	I	ATA: input of IO ready (not used while DMA transfer)
36	BENBL	O	System&H2CDS: output of P-BUS5/3.3V converter IC enable
37	VDD		VDD
38	VSS		VSS
39	BSRQ1	I	H2CDS: input of request for P-BUS serial polling
40	XIRQ	I	CXD1859: input of interrupt request signals
41	MSINT	O/I	CXD1859: input of detection of insertion/extraction
42	ATAINTRQ	I	ATA: input of interrupt request
43	BRST1	O	H2CDS: output of P-BUS reset
44	BRXEN1	I/O	H2CDS: input/output of P-BUS busy
45	BRXEN0	I/O	System: input/output of P-BUS busy
46	TESTIN	I	Input of test mode
47	VDD		VDD
48	VSS		VSS
49	BSRQ0	O	System: output of request for P-BUS serial polling
50	BSENS	I	Input of sensing backup power supply
51	BRST0	I	System: input of P-BUS reset
52	KYDT	I	FL display: input of reception of UART
53	DPDT	O	DSP: output of switching between analog/digital of IC
54	CDCMDCK	O	LC78683E: output of clock
55	CDCMDI	I	LC78683E: input of data
56	CDCMDO	O	LC78683E: output of data
57	MODE1	I	
58	MODE0	I	
59	RESET	I	Reset
60	CKSEL	I	
61	CVDD		CVDD
62	X2		
63	X1	I	
64	CVSS		CVSS
65	BSCK1	I/O	H2CDS: input/output of P-BUS clock
66	BSI1	I	H2CDS: input of P-BUS data
67	BSO1	O	H2CDS: output of P-BUS data
68	BSK0	I/O	System: input/output of P-BUS clock

Pin No.	Pin Name	I/O	Function and Operation
69	BSI0	I	System: input of P-BUS data
70	BSO0	O	System: output of P-BUS data
71	AVDD		AVDD
72	AVSS		AVSS
73	TEMP	I	Input of temperature sensing
74	ATAVSENS	I	Input of sensing VD power supply voltage in the ATA section
75	KD5	I	Input of status of DSP initialization
76-80	KD4-0	I	Input from analog keys 5 - 0 → 4 - 0
81	VDD		VDD
82	VSS		VSS
83	MUTE	O	Output of final muting of the analog system
84	CDINTB	I	LC78683E: input of interrupt request signals
85	ATARST	O	ATA: output of device reset signals
86	CDRSTB	O	LC78683E: output of reset
87	CDPW	O	Output of controls of power supply to CD-ROM/MP3 section
88	CDCE	O	LC78683E: output of chip enable
89	ATAPW	O	Output of controls of power supply to the ATA section
90	BMUTE	O	Output of muting for the digital DSP
91	WAIT	O	H2: output sampling rate of signals output from CD mechanism to the DSP microcomputer
92	BCYST	O	H2: output sampling rate of signals output from CD mechanism to the DSP microcomputer
93	CTS	I	FL display: input of CTS
94	RTS	O	Output of operation-demanding triggers to the DSP microcomputer/DAC
95	RD	O	Output of read strobe signals
96	UWR	O	Output of write-enable signals for upper bytes
97	LWR	O	Output of write-enable signals for lower bytes
98	VDD		VDD
99	VSS		VSS
100	MSLOCKIN	I	Input of detection of MS half lock (fully inserted)
101	MODELIN0	I	Input of settings of models
102	IORD	O	ATA: read strobe for DMA flyby transfer
103	CS4(ATA)	O	Chip selection (ATA section)
104	CS3(CXD1859)	O	Chip selection (CXD859 section)
105	IOWR	O	ATA: write strobe for DMA flyby transfer
106	DALMON	O	Output of settings of power saving
107	CS0(SRAM)	O	SRAM chip selection
108	UBE	O	Output of enable signals for upper bytes
109	LBE	O	Output of enable signals for lower bytes
110	FLWRCNT	O	Output of controls of power supply for Flash EP-ROM self-rewriting
111	XPW	O	Output of controls of power supply to CXD1859 section
112	VDD		VDD
113	VSS		VSS
114-115	A25-24	O	Output of address bus (bit18 - bit0)
116	ADCRST	O	Output of controls of resetting the external A/D
117	XLED	O	MS access indicator
118	XRST	O	CXD1859: output of reset
119-123	A20-16	O	Output of address bus (bit18 - bit0)
124	VDD		VDD
125	VSS		VSS
126-133	A15-8	O	Output of address bus (bit18 - bit0)
134	VDD		VDD
135	VSS		VSS
136-142	A7-1	O	Output of address bus (bit18 - bit0)
143	SUBOK	I	H2: input from SUBOK pin of CD mechanism's P-BUS
144	D15	I/O	Input/output of data bus (bit15 - bit0)

* PE5218C

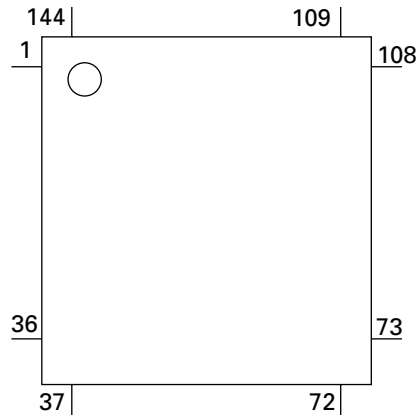


* TC55V16100FTI-15

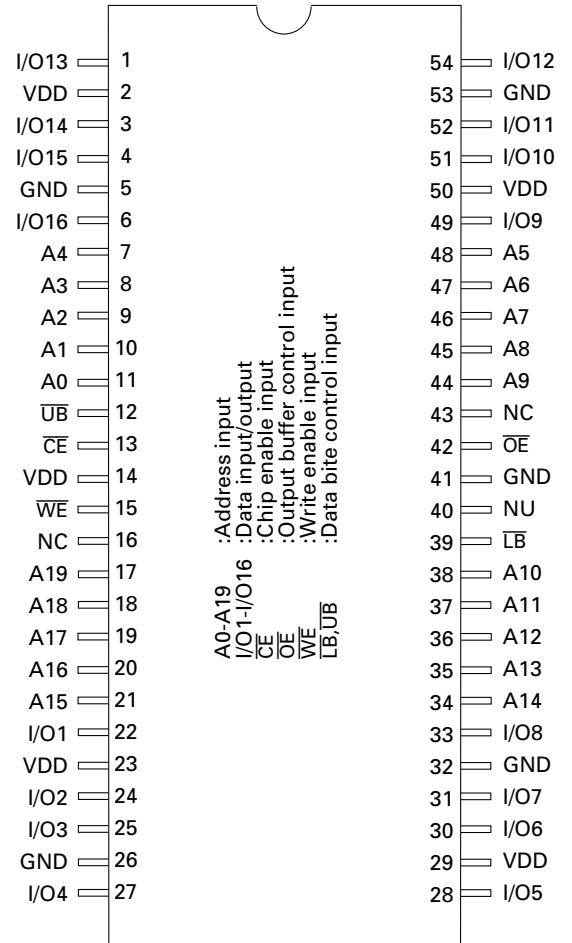

● Pin Functions(CXK2000EN)

Pin No.	Pin Name	I/O	Function and Operation
1	CS	I	Chip selection
2	SK	I	Input of serial clock
3	DI	I	Input of serial data
4	DO	O	Output of serial data
5	GND		Ground
6	RESET	I	Input of reset
7	RDY/BSY	O	Output of READY/BUSY
8	VCC		Power supply

* CXK2000EN

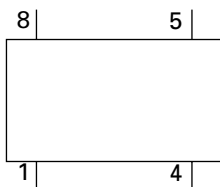


● Pin Functions(CXD1859AR)

Pin No.	Pin Name	I/O	Function and Operation
1	CLKSEL2	I	Selection of clock mode
2	XTAL0	O	22.5792MHz oscillating cell (includes feedback resistors)
3	EXTAL0	I	22.5792MHz oscillating cell (includes feedback resistors)
4	VSS0		Ground
5, 6	CLKSEL3, 4	I	Selection of clock mode
7	VDD0		Power supply to the core (1.8V)
8	VDE0		Power supply to IO (3.3V)
9	XTAL1	O	8/12/16/20MHz oscillating cell (includes feedback resistors)
10	EXTAL1	I	8/12/16/20MHz oscillating cell (includes feedback resistors)
11	OSCSTP	O	Output of stopping oscillation
12	VSS1		Ground
13	RST	I	Input of reset
14	AVS1		Ground for the analog system (PLL)
15	AVD1		Power supply to the analog system (PLL)
16	FS256O	O	Output of 256fs clock
17, 18	DP0, 1	I/O	DSP port 0, 1
19	VSS2		Ground
20	BS	O	Memory Stick bus state
21	SCLK	O	Memory Stick clock
22	DIO	I/O	Memory Stick data
23	VDE1		Power supply to IO (3.3V)
24	VDD1		Power supply to the core (1.8V)
25	DP2	I/O	DSP port 2
26	INS	I	Detection of insertion/extraction of Memory Stick
27	VSS3		Ground
28	UDP	I/O	data +
29	AVD2		Power supply to the analog system (USB)
30	UDM	I/O	data -
31	BCLK	I/O	Bit clock
32	LRCK	I/O	LR clock
33	SDO	O	Audio data out
34	VSS4		Ground
35	SDI	I	Audio data in
36	DAOUT	O	Digital audio out
37	DAIN	I	Digital audio in
38	VDE2		Power supply to IO (3.3V)
39-44	DB0-5	I/O	16 bit data bus
45	VDD2		Power supply to the core (1.8V)
46	VSS5		Ground
47-52	DB6-DB11	I/O	16 bit data bus
53	VDE3		Power supply to IO (3.3V)
54-56	DB12-14	I/O	16 bit data bus
57	VSS6		Ground
58	DB15	I/O	16 bit data bus
59-63	ADR0-4	I	Address bus
64	VSS7		Ground
65, 66	ADR5, 6	I	Address bus
67	VDD3		Power supply to the core (1.8V)
68	VDE4		Power supply to IO (3.3V)
69-71	ADR7-9	I	Address bus
72	VSS8		Ground
73-77	ADR10-14	I	Address bus
78	RD	I	Read enable
79	VSS9		Ground
80	WRU	I	UPPER BYTE write enable

Pin No.	Pin Name	I/O	Function and Operation
81	WRL	I	LOWER BYTE write enable
82	CS	I	Chip selection
83	VDE5		Power supply to IO (3.3V)
84	VDD4		Power supply to the core (1.8V)
85	IRQ	O	Interrupt request
86	DREQ	O	USB: DMA request
87	VSS10		Ground
88	DACK	I	USB: DMA acknowledgement
89	TEST0	O	OPEN
90	TEST1	I	OPEN or input "H"
91	SIOI	I	Serial data in
92	SIOO	O	Serial data out
93	SIOCS	O	Chip selection
94	VSS11		Ground
95	SIOCK	O	Serial clock
96	ACLK		ATRAC3 data clock
97	ARQ		ATRAC3 data request
98	VDE6		Power supply to IO (3.3V)
99	ABS		ATRAC3 data strobe
100	ACDO		ATRAC3 data out
101	ACDI		ATRAC3 data in
102	DP3	I/O	DSP port 3
103	TKURST	I	Input "L"
104	TKDBG	I	Input "L"
105	VDD5		Power supply to the core (1.8V)
106	VSS12		Ground
107	TKTCK	I	OPEN or input "L"
108	TKTDI	I	OPEN or input "L"
109	TKTMS	I	OPEN or input "L"
110	TKTDO	O	OPEN
111	TKTINT	O	OPEN
112	MD0	I	Mode setting
113	VDE7		Power supply to IO (3.3V)
114, 115	MD1, 2	I	Mode setting
116	TRST	I	Input "L"
117	VSS13		Ground
118	CLKOUT	O	Output of system clock
119, 120	CLKSEL0, 1	I	Selection of clock mode

* CXD1859AR

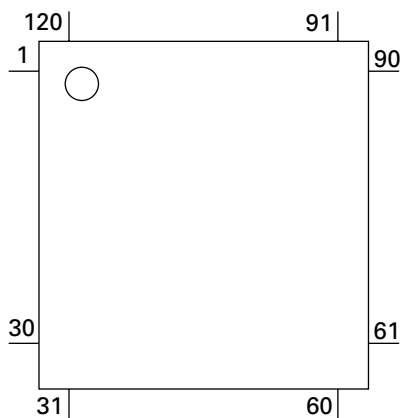


● Pin Functions(PD5646A)

Pin No.	Pin Name	I/O	Function and Operation
1	TUNPDO	O	Output of PLL data
2	TUNPCK	O	Output of PLL clock
3	TUNPCE	O	Output of TUNER ENABLE
4	TUNPCE2	O	Output of TUNER ENABLE 2
5-7	NC		Not used
8	BYTE	I	GND: input for switching between external data bus widths
9	CNVss	I	GND: input for switching between processor modes
10	MICSENS	I	Microphone sensing
11	TELIN	I	Input of cellular telephone
12	RESET	I	Input of reset
13	Xout	O	Output of oscillation (10MHz)
14	Vss	I	GND
15	Xin	I	Input of oscillation (10MHz)
16	Vcc	I	Power supply (5V)
17-19	NC		Not used
20	BSENS		Backup sensing
21	RX2	I	IPBUS: input 2
22	IPPW	O	IPBUS: output of controls of power supply to the driver
23	ISENS	I	ILM SENS
24	PEE	O	PEE OUT
25	NC		Not used
26	ASNSBO	O	IPBUS: output of ACC
27	MUTE	O	General muting
28	NC		Not used
29	RX	I	IPBUS: input of data
30	TX	O	IPBUS: output of data
31	BSO	O	PBUS: output of data
32	BSI	I	PBUS: input of data
33	BSCK		PBUS: clock
34	SWVDD	O	GRILL: output of controls of power supply to the microcomputer
35	DPDT	O	GRILL: output of data to be displayed
36	KYDT	I	GRILL: input of key data
37	SYSPW	O	System power
38	LOCL	O	TUNER: output of local L
39	PCL		For adjusting clock
40	LOCH	O	TUNER: output of local H
41	AM_FM	O	TUNER: output of controls of power supply to the decoder
42	ST	I	TUNER: input of stereo indicator
43	SD	I	TUNER: input of SD
44	DALMON	O	For circuits reducing dark current
45-55	NC		Not used
56	ILMPW	O	Output of power to illumination
57	FLPILM	O	Output of illumination in the flap
58-64	NC		Not used
65	ROMCK	O	ROM correction: output of clock
66	ROMDATA	O/I	ROM correction: data
67	BSRQ2	O/I	PBUS: request for communication (for DSP)
68	ROMCS	O	ROM correction: output for chip selection
69	BRXEN	I/O	PBUS: communication input/output
70	BRST	O	PBUS: reset
71	BSRQ	I	PBUS: input of communication request
72	DSSENS	I	Detachment sensing
73	NC		Not used
74	ASENS		ACC sensing
75-81	NC		Not used

Pin No.	Pin Name	I/O	Function and Operation
82	CSENS	I	FLAP: input of detection of FLAP open/close
83	RECMUTE	O	Muting of audio recording on the HDD
84-88	NC		Not used
89	TESTIN	I	Input of test program
90	NC		Not used
91	OELPW	O	Output of power supply to the organic EL
92	NC		Not used
93	MODEL	I	Model sensing
94-95	NC		Not used
96	NC	I	Input of power supply to AD conversion
97	SL		TUNER: signals level
98	NC	I	Input of reference power supply to AD conversion
99	NC	I	Input of power supply to AD conversion
100	TUNPDI	I	PLL: input of data

* PD5646A

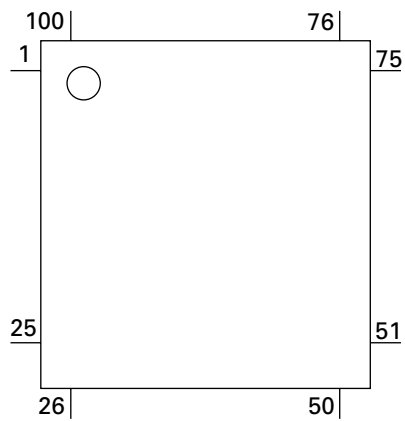


● Pin Functions(PD5647A)


Pin No.	Pin Name	I/O	Function and Operation
1	TUNPDO	O	PLL: output of data
2	TUNPCK	O	PLL: output of clock
3	TUNPCE	O	TUNER: output of ENABLE
4	TUNPCE2	O	TUNER: output of ENABLE 2
5-7	NC		Not used
8	BYTE	I	GND: input for switching between the external data bus widths
9	CNVss	I	GND: input for switching between processor modes
10	MICSENS	I	Microphone sensing
11	TELIN	I	Input of cellular telephone
12	RESET	I	Input of reset
13	Xout	O	Output of oscillation (10MHz)
14	Vss	I	GND
15	Xin	I	Input of oscillation (10MHz)
16	Vcc	I	Power supply (5V)
17	NC		Not used
18	RCK		RDS: CLOCK
19	LDET	O/I	RDS: input of detection of PLL lock
20	BSSENS		Backup sensing
21	RX2	I	IPBUS: input 2
22	IPPW	O	IPBUS: output of controls of power supply to the driver
23	ISENS	I	ILM SENS
24	PEE	O	PEE OUT
25	RDS57K	I	RDS: input of 57KHz pulse count
26	ASNSBO	O	IPBUS: output of ACC
27	MUTE	O	General muting
28	TMUTE	O	RDS,TUNER: muting TUNER
29	RX	I	IPBUS: input of data
30	TX	O	IPBUS: output of data
31	BSO	O	PBUS: output of data
32	BSI	I	PBUS: input of data
33	BSCK		PBUS: clock
34	SWVDD	O	GRILL: output of controls of power supply to the microcomputer
35	DPDT	O	GRILL: output of data to be displayed
36	KYDT	I	GRILL: input of key data
37	SYSPW	O	System power
38	LOCL	O	TUNER: output of local L
39	PCL		For adjusting clock
40	LOCH	O	TUNER: output of local H
41	AM_FM	O	TUNER: output of controls of power supply to the decoder
42	ST	I	TUNER: input of stereo indicator
43	SD	I	TUNER: input of SD
44	DALMON	O	For circuits reducing dark current
45	CURRQ	O	RDS: current request
46	SDBW	I	RDS: input of SD while NF
47	RECIVE	O	RDS: output of "receiving"
48	DRST	O	RDS: output of reset
49	RDSLK	I	RDS: input of LK
50	RDT	I	RDS: input of data
51-55	NC		Not used
56	ILMPW	O	Output of power to illumination
57	FLPILM	O	Output of illumination in the flap
58-64	NC		Not used
65	ROMCK	O	ROM correction: output of clock
66	ROMDATA	O/I	ROM correction: data
67	BSRQ2	O/I	PBUS: request for communication (for DSP)

Pin No.	Pin Name	I/O	Function and Operation
68	ROMCS	O	ROM correction: output for chip selection
69	BRXEN	I/O	PBUS: input/output of communication
70	BRST	O	PBUS: reset
71	BSRQ	I	PBUS: input of request for communication
72	DSSENS	I	Detachment sensing
73	NC		Not used
74	ASENS		ACC sensing
75-81	NC		Not used
82	CSENS	I	FLAP: input of detection of FLAP open/close
83	RECMUTE	O	Muting of audio recording on the HDD
84-88	NC		Not used
89	TESTIN	I	Input of test program
90	NC		Not used
91	OELPW	O	Output of power supply to the organic EL
92-93	NC		Not used
94	NL2DT	I	RDS: signals of NL2 existing
95	NL1		RDS: noises level
96		I	Input of power supply to AD conversion
97	SL		TUNER: signals level
98		I	Input of reference power supply to AD conversion
99		I	Input of power supply to AD conversion
100	TUNPDI	I	PLL: input of data

* PD5647A

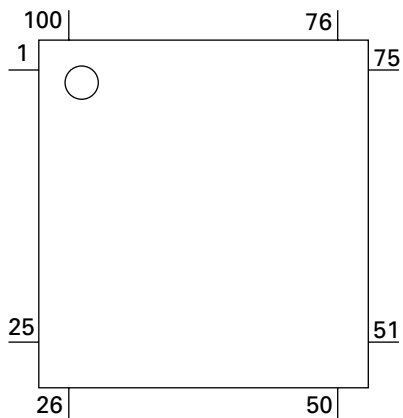


● FM/AM Tuner Unit

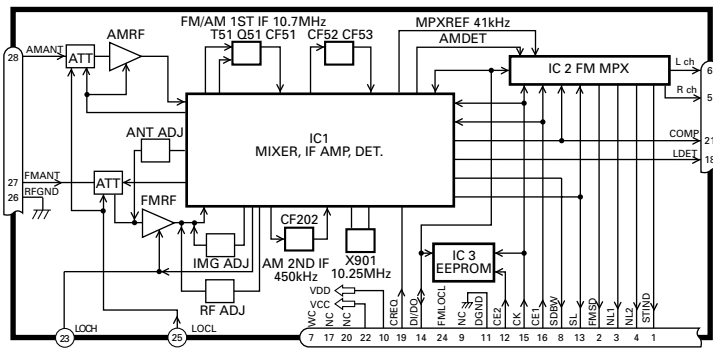

No.	Symbol	I/O	Explain	
1	STIND	O	stereo indicator	"Low" when the FM stereo signals are received. To be pulled up to the "VDD" at 47kΩ.
2	FMSD	O	FM station detector	"High" when signals are received. To be pulled up to the "VDD" at 47kΩ Meanwhile, 10kΩ should be used when taking diver FIX trigger from here and "High: 0.9VDD or more" and "Low: 250mV or less". (Should satisfy the diver IC specifications)
3	NL1	O	noise level-1	"High" when noise is received. Output for the RDS. GND at 47kΩ //1,800pF.
4	NL2	O	noise level-2	"High" when noise is received. Output for the RDS. GND at 36kΩ //330pF.
5	Rch	O	R channel output	FM stereo "R-ch" signal output or AM audio output. Add the specified de-emphasis constant.
6	Lch	O	L channel output	FM stereo "L-ch" signal output or AM audio output. Add the specified de-emphasis constant.
7	WC		write control	EEPROM write control. Writing permissible at "Low". Normally open.
8	SDBW	O	SD bandwidth	SD bandwidth signal output. For detection of detuning data for the RDS.
9	NC			Not used
10	VDD		power supply	Power supply pin for the digital section. DC 5V +/- 0.25V. Be careful about overlapping noise in the logic section.
11	DGND		digital ground	Grounding for the digital section.
12	CE2	I	chip enable-2	EEPROM chip enable. Active a "Low" To be pulled up to the "VDD" at 47kΩ
13	SL	I/O	signal level	Received FM/AM signal level (strength) output. Connect the specified load resistor and capacitor (10k Ω + 39k Ω //4,700pF)
14	DI/DO	I/O	data input/ data output	Data input/Data output To be pulled up to the "VDD" at 47kΩ
15	CK	I	clock	Clock input To be pulled up to the "VDD" at 47kΩ
16	CE1	I	chip enable-1	AF·RF chip enable. Active at "High" To be grounded at 47kΩ
17	NC			Not used
18	LDET	O	lock detector	Active at "Low". To be pulled up to the "VDD" at 47kΩ
19	CREQ	I	current request	Active at "Low". To be grounded at 47kΩ
20	NC			Not used
21	COMP	O	composite signal	FM composite signal output. r out < 100Ω
22	VCC		power supply	Analog section power supply pin.DC 8.4V +/- 0.3V
23	LOCH	I	local high	FM local high pin. When seeking local high, apply 5V together with "LOCL".
24	FMLOCL	I	FM local low	FM local low pin. When seeking local low, apply 5V to the base of the NPN transistor with which the specified resistor is being connected to the emitter. Keep it open in case of ordinary marketed models.
25	LOCL	I	local low	FM/AM local low pin. When seeking local low, apply 5V to the base of the NPN transistor. Since this pin is exclusive for AM when the FMLOCL is in use, do not drive it under FM.
26	RFGND		RF ground	Grounding for the antenna section.
27	FMANT	I	FM antenna input	FM antenna input. 75Ω. Surge absorber (DSP-201M-S00B) is necessary.
28	AMANT	I	AM antenna input	AM antenna input. High impedance. Connect to the antenna through an L (LAU type) of 4.7μH.To cope with the power transmission line hums, insert a series circuit consisting of an L (a coil of about 100mH) + R (a resistor of 470 Ω to 2.2kΩ) between the GND.

7.3 OPERATIONAL FLOW CHART

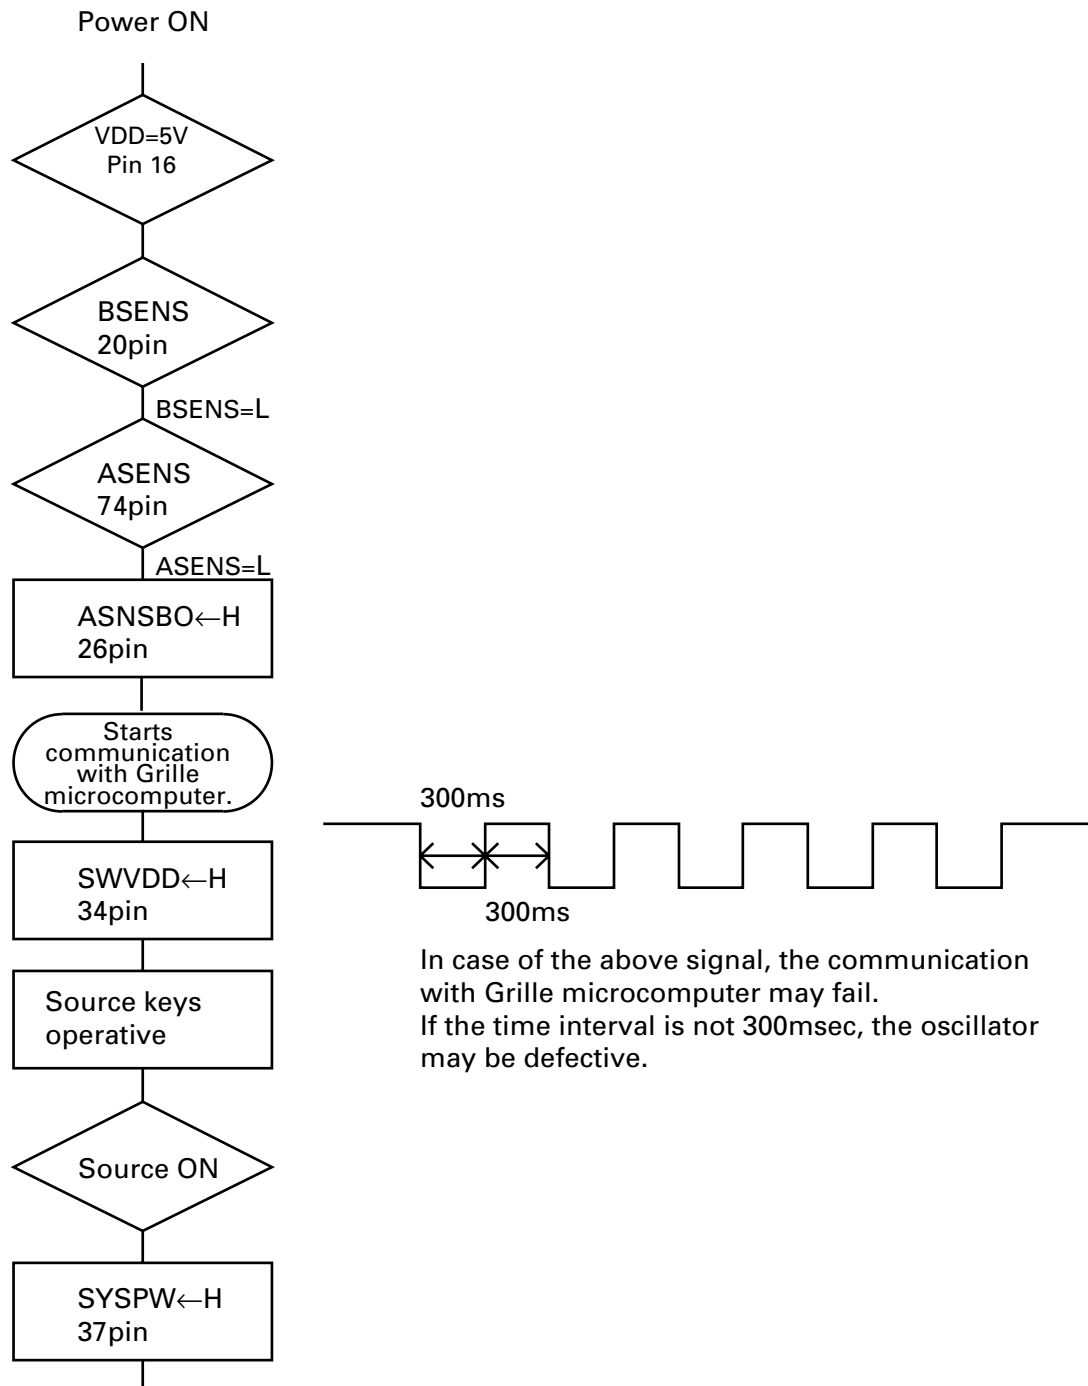

Completes power-on operation.
(After that, proceed to each source operation)

7.4 CLEANING



Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:


Portions to be cleaned	Cleaning tools
CD pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

Portions to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

8. OPERATIONS AND SPECIFICATIONS


8.1 OPERATIONS

Head unit

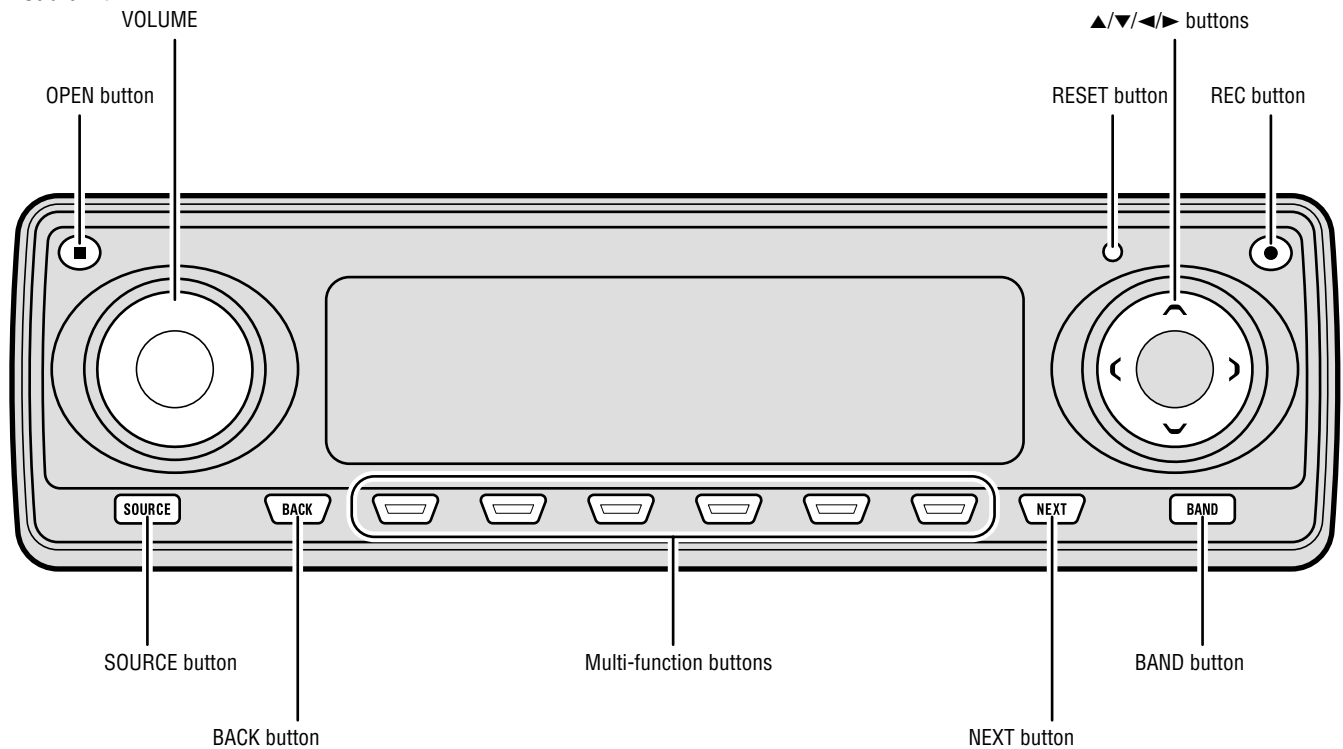

Steering remote controller

A steering remote controller that enables remote operation of the head unit is supplied. Operation is the same as when using buttons on the head unit.

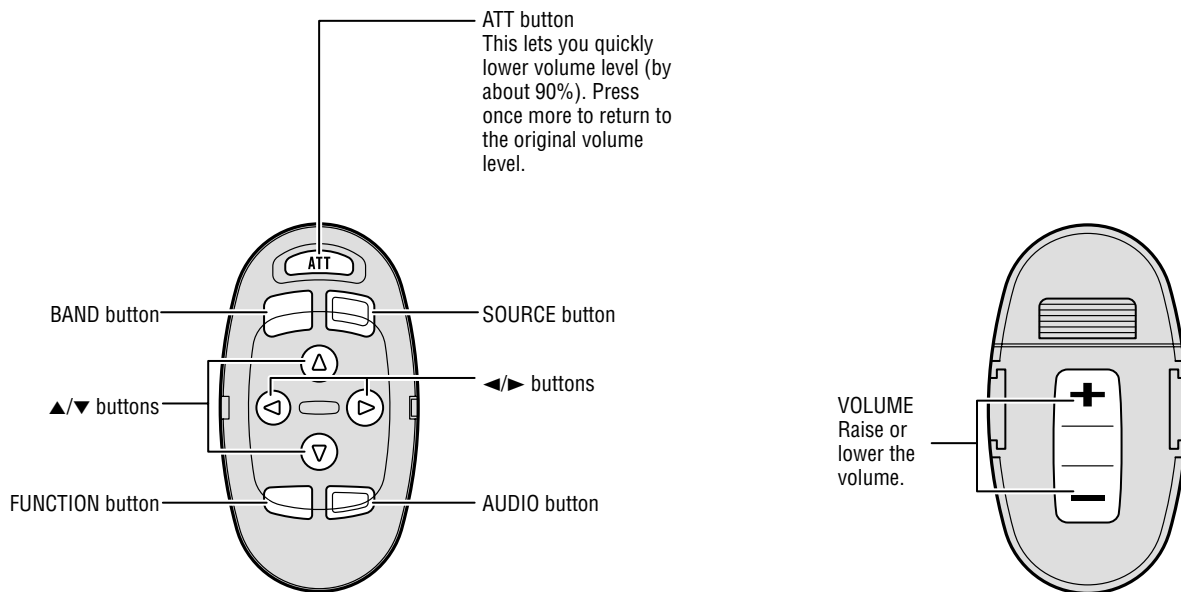

Turning a source on or off

You can select the source you want to listen to. To switch to built-in CD player, load a CD in this product. To switch to a "Memory Stick" player, load a "Memory Stick" in this product.

1. Press **SOURCE** to select the desired source (e.g., tuner).
Press **SOURCE** repeatedly to switch between the following sources:
Built-in CD player (MP3) → TV tuner → Tuner → DAB tuner → Music server → "Memory Stick" player → Multi-CD player → External unit 1 → External unit 2 → AUX



2. Press **VOLUME** to extend the **VOLUME** outward.

- When you press **VOLUME**, it extends outward so that it becomes easier to turn. To retract **VOLUME**, press it again.

3. Turn **VOLUME** to adjust the volume.



4. Press and hold **SOURCE** to turn the source off.

Note:

- External unit refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by this product. Two external units can be controlled by this product, although "External" is displayed whether you select external unit 1 or external unit 2. When two external units are connected, the allocation of them to external unit 1 or external unit 2 is automatically set by this product.

- In the following cases, the sound source will not change:

- * When no product corresponding to the source is connected to this product.
- * No disc is set in this product.
- * No "Memory Stick" is set in this product.
- * No magazine is set in the multi-CD player.
- * AUX (auxiliary setting) is set to off.
- When this product's blue/white lead is connected to the car's auto-antenna relay control terminal, the car's auto-antenna extends when this product's source is switched on. To retract the antenna, switch the source off.

SOFT KEY operation

SOFT KEY operation means that the function of a button changes as indicated on the display. The multi-function buttons provide SOFT KEY operation; the functions performed by the buttons change according to the function or setting that has been selected.

Function names



Multi-function buttons

The explanations given in this manual are based on FORM 1 display. If you have selected FORM 2, the functions of some of the multi-function buttons may be different from those indicated in the manual.

Important

In this manual, for operations using the multi-function buttons the function displayed is used as the name of the function button.

Switching the function of the multi-function buttons

The "►" indicator shows that the multi-function buttons have functions other than those currently displayed. When this indicator is visible, press **NEXT** to switch through the functions of the multi-function buttons.

- Press **NEXT** to display the desired functions (e.g., built-in CD player).

Press **NEXT** repeatedly to switch between the following functions:



Note:

- The number of functions or displays switched through will differ according to the source or menu selected.
- When no function is indicated for a button, that button is not currently active.

Example of multi-function button operation

Here the "random play" function of the built-in CD player is used as an example to illustrate operation of the multi-function buttons.

1. Press **NEXT** to display "FUNK".

Press **NEXT** repeatedly until "FUNK" appears.



2. Press **FUNK** to enter the function menu.

With the switch to the function menu, the functions of the multi-function buttons also change simultaneously.



3. Press **RDM** to select the random mode.



4. Press **RDM** to turn random play on.



The light illuminates.

- Press **RDM** again to turn random play off. The light goes off.

5. Press **BACK** to exit the function menu.

When the function menu is exited, the functions of the multi-function buttons also change simultaneously.

Note:

- You can also turn random play on or off by pressing ▲ or ▼ in the random mode.
- If you do not operate the function within about 30 seconds, the display is automatically returned.

The difference between the BAND button and the BACK button

BAND button

Pressing the **BAND** button immediately cancels the current menu or mode, and returns to the basic displays.

Note:


- When the source is the Tuner, TV tuner or DAB tuner and no menu or mode is selected, pressing the **BAND** button has the effect of switching bands.

BACK button

Pressing the **BACK** button cancels the current menu or mode and returns to the previously selected menu or mode.

Basic Operation

Display example (e.g., built-in CD player)

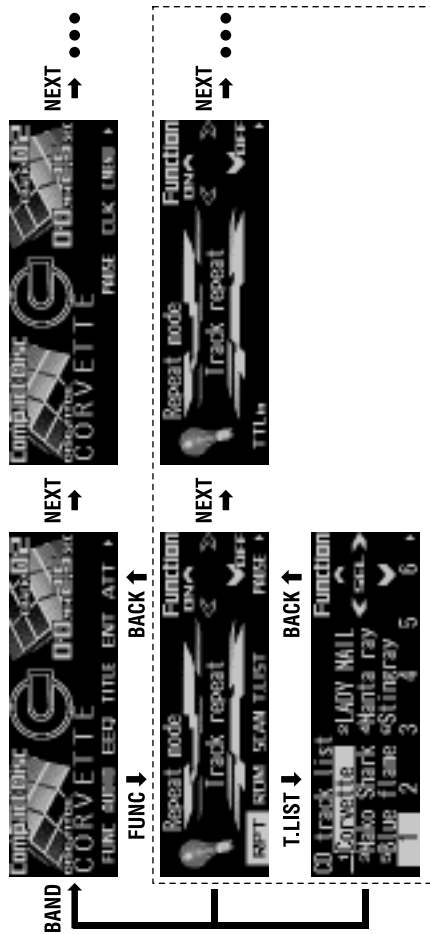


Key guidance indicator

This product's display features key guidance indicators. These light to indicate which of the $\blacktriangle/\blacktriangleright$ buttons you can use. When you're in the function menu, audio menu or the other menus, they also make it easy to see which $\blacktriangle/\blacktriangleright$ buttons you can use to switch functions on/off, switch repeat selections and perform other operations.



Note:

- In this manual, operation for each mode is given mainly in terms of the multi-function buttons. However, in each mode, when the key guidance indicators are lit it is also possible to use $\blacktriangle/\blacktriangleright$ to operate the mode.

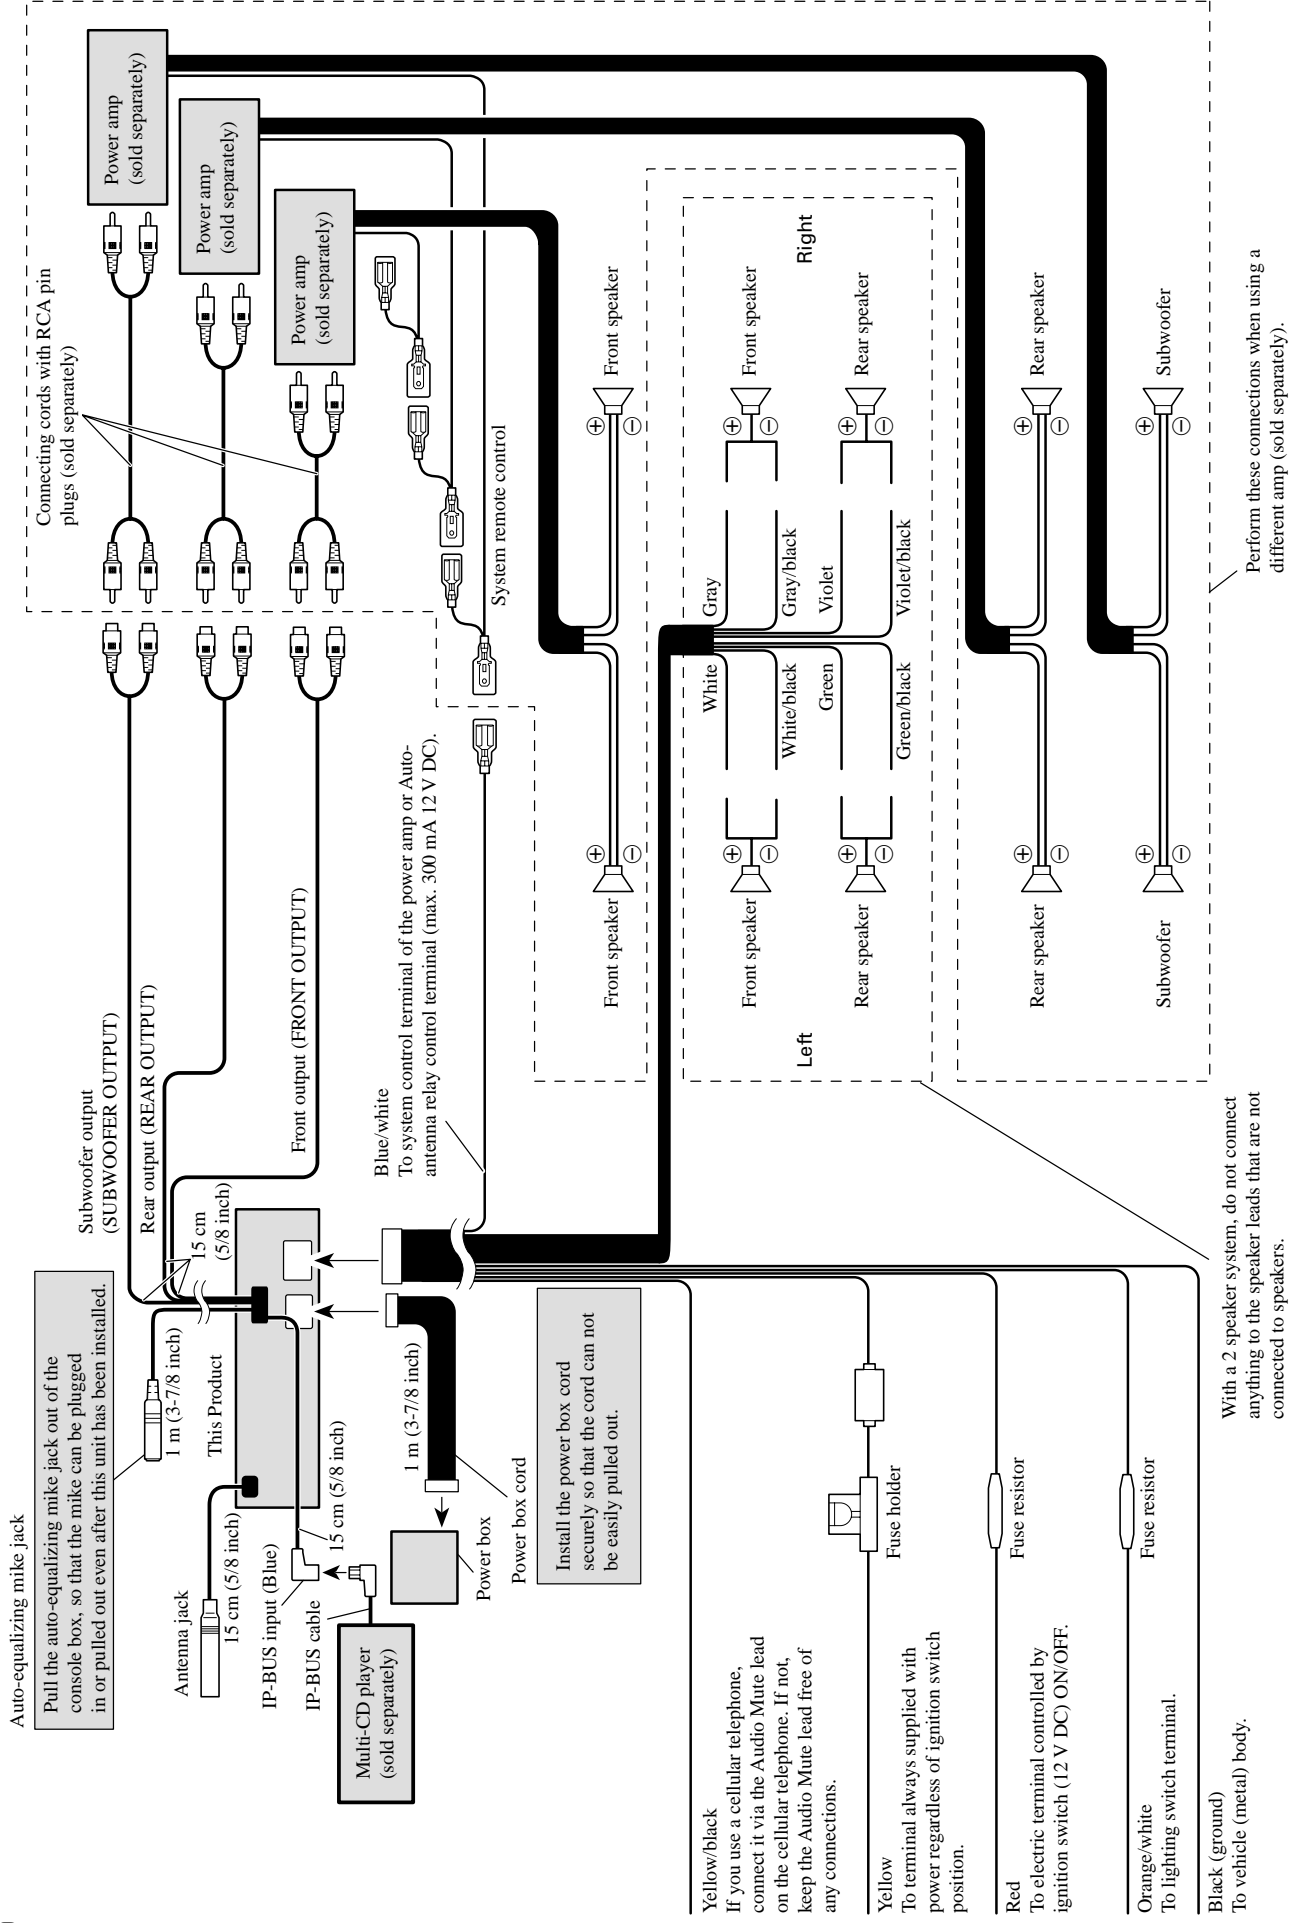

8.2 SPECIFICATIONS

● DEH-P90HDD/UC

Specifications

General

Power source	14.4 V DC (10.8 — 15.1 V allowable)
Backup current	Less than 8 mA
Grounding system	Negative type
Max. current consumption	10.0 A
Dimensions	
(DIN) (chassis)	178 (W) × 50 (H) × 155 (D) mm
(nose)	[7 (W) × 2 (H) × 6-1/8 (D) in.]
(D) (chassis)	188 (W) × 58 (H) × 37 (D) mm
(nose)	[7-3/8 (W) × 2-1/4 (H) × 1-1/2 (D) in.]
(D) (chassis)	178 (W) × 50 (H) × 160 (D) mm
(nose)	[7 (W) × 2 (H) × 6-1/4 (D) in.]
(D) (chassis)	170 (W) × 46 (H) × 32 (D) mm
(nose)	[6-3/4 (W) × 1-3/4 (H) × 1-1/4 (D) in.]
Weight	
(main body)	1.9 kg (4.2 lbs.)
(power box)	0.2 kg

Audio/DSP

Continuous power output is 22 W per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

Maximum power output	50 W × 4
Load impedance	4 Ω (4 – 8 Ω allowable)
Preout maximum output level/	
output impedance	2.2 V/1 kΩ
Loudness contour	+10 dB (100 Hz), +6.5 dB (10 kHz)
(volume: -30 dB)	
Equalizer (13-Band Graphic Equalizer)	
Frequency	50/80/125/200/315/500/800 Hz
Equalization range	1.25/2/3.15/5/8/12.5 kHz
Auto Equalizer (Front & Rear Subwoofer 13-Band Graphic)	
Frequency	50/80/125/200/315/500/800 Hz
Equalization range	1.25/2/3.15/5/8/12.5 kHz
(volume: -12 dB (2 dB))	

Network

HPF (Front/Rear)	
Frequency	50/63/80/100/125 Hz
Slope	-12 dB/oct.
Subwoofer output	
Frequency	50/63/80/100/125 Hz
Slope	-18 dB/oct.
Gain	-24 dB — +6 dB (1 dB)
Phase	Normal/Reverse

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format	Sampling frequency: 44.1 kHz
Number of quantization bits: 16: linear	
Frequency characteristics	5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio	94 dB (1 kHz) (HF-A network)
Dynamic range	92 dB (1 kHz)
MP3 decoding	MPEG 1 Audio Layer 3
Number of channels	2 (stereo)

HDD

HDD quantity	10 GB
Codec	ATRAC3
Frequency characteristics	20 – 20,000 Hz (±1 dB)
Average seek time	13 msec.

“Memory Stick” player

Type	MagicGate Memory Stick
Decoding	ATRAC3
Frequency characteristics	20 – 20,000 Hz (±1 dB)

FM tuner

Frequency range	87.9 – 107.9 MHz
Usable sensitivity	(0.8 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	15 dBf (1.5 μV/75 Ω, mono)
Signal-to-noise ratio	70 dB (HF-A network)
Distortion	0.3% (at 65 dBf, 1 kHz, stereo)
Frequency response	30 – 15,000 Hz (±3 dB)
Stereo separation	40 dB (at 65 dBf, 1 kHz)
Selectivity	70 dB (2ACA)
Three-signal intermodulation	
(desired signal level)	30 dBf
(two undesired signal level: 100 dBf)	

AM tuner

Frequency range	530 – 1,710 kHz (10 kHz)
Usable sensitivity	18 μV (S/N: 20 dB)
Selectivity	50 dB (±10 kHz)

Note:

- Specifications and design are subject to modification without notice for the sake of improvements.

DEH-P900HDD/EW

Specifications

General

Power source	14.4 V DC (10.8 – 15.1 V allowable)
Backup current	Less than 8 mA
Grounding system	Negative type
Max. current consumption	10.0 A
Dimensions (mounting size)	178 (W) × 50 (H) × 155 (D) mm (front face)
Weight (main body)	1.9 kg
(power box)	0.2 kg

Audio/DSP

Maximum power output	50 W × 4
Continuous power output	27 W × 4 (DIN45324, +B = 14.4 V)
Load impedance	4 Ω (4 – 8 Ω allowable)
Preout maximum output level/output impedance	2.2 V/1 kΩ
Loudness contour	+10 dB (100 Hz), +6.5 dB (10 kHz) (volume: –30 dB)
Equalizer (13-Band Graphic Equalizer)	
Frequency	50/80/125/200/315/500/800 Hz
Equalization range	1.25/2/3.15/5/8/12.5 kHz
Auto Equalizer (Front & Rear & Subwoofer 13-Band Graphic)	
Frequency	50/80/125/200/315/500/800 Hz
Equalization range	1.25/2/3.15/5/8/12.5 kHz
Network HPF (Front/Rear)	
Frequency	50/63/80/100/125 Hz
Slope	–12 dB/oct.
Subwoofer	
Frequency	50/63/80/100/125 Hz
Slope	–18 dB/oct.
Gain	–24 dB — +6 dB (1 dB)
Phase	Normal/Reverse

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format	Sampling frequency: 44.1 kHz
	Number of quantization bits: 16; linear
Frequency characteristics	5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio	94 dB (1 kHz) (IEC-A network)
Dynamic range	92 dB (1 kHz)
MP3 decoding	MPEG 1 Audio Layer 3
Number of channels	2 (stereo)

HDD

HDD quantity	10 GB
Codec	ATRAC3
Frequency characteristics	20 – 20,000 Hz (±1 dB)
Average seek time	13 msec.

“Memory Stick” player

Type	MagicGate Memory Stick
Codec	ATRAC3
Frequency characteristics	20 – 20,000 Hz (±1 dB)

FM tuner

Frequency range	87.5 – 108 MHz
Usable sensitivity	(0.8 μV/75 Ω, mono, S/N: 30 dB) 9 dB
50 dB quieting sensitivity	(1.5 μV/75 Ω, mono) 15 dB
Signal-to-noise ratio	70 dB (IEC-A network)
Distortion	0.3% (at 65 dB, 1 kHz, stereo)
Frequency response	30 – 15,000 Hz (±3 dB)
Stereo separation	40 dB (at 65 dB, 1 kHz)

MW tuner

Frequency range	531 – 1,602 kHz (9 kHz)
Usable sensitivity	18 μV (S/N: 20 dB)
Selectivity	50 dB (±9 kHz)

LW tuner

Frequency range	153 – 281 kHz
Usable sensitivity	30 μV (S/N: 20 dB)
Selectivity	50 dB (±9 kHz)

Note:

- Specifications and design are subject to modification without notice for the sake of improvements.

● DEH-P900HDD/ES

Specifications

General

Power source	14.4 V DC (10.8 – 15.1 V allowable)
Backup current	Less than 8 mA
Grounding system	Negative type
Max. current consumption	10.0 A
Dimensions	
(DIN) (chassis)	178 (W) × 50 (H) × 155 (D) mm
(nose)	188 (W) × 58 (H) × 37 (D) mm
(D) (chassis)	178 (W) × 50 (H) × 160 (D) mm
(nose)	170 (W) × 46 (H) × 32 (D) mm
Weight	
(main body)	1.9 kg
(power box)	0.2 kg

Audio/DSP

Continuous power output is 22 W per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.	
Maximum power output	50 W × 4
Load impedance	4 Ω (4 – 8 Ω allowable)
Preout maximum output level/	
output impedance	2.2 V/1 kΩ
Loudness contour	+10 dB (100 Hz), +6.5 dB (10 kHz)
(volume: -30 dB)	
Equalizer (13-Band Graphic Equalizer)	
Frequency	50/80/125/200/315/500/800 Hz
	1.25/2/3.15/5/8/12.5 kHz
Equalization Range	±12 dB (2 dB)
Auto Equalizer (Front & Rear & Subwoofer 13-Band Graphic)	
Frequency	50/80/125/200/315/500/800 Hz
	1.25/2/3.15/5/8/12.5 kHz
Equalization Range	+6 — -12 dB (2 dB)
Network	
HPF (Front/Rear)	
Frequency	50/63/80/100/125 Hz
Slope	-12 dB/oct.
Subwoofer output	
Frequency	50/63/80/100/125 Hz
Slope	-18 dB/oct.
Gain	-24 dB — +6 dB (1 dB)
Phase	Normal/Reverse

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format	Sampling frequency: 44.1 kHz
	Number of quantization bits: 16; linear
Frequency characteristics	5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio	94 dB (1 kHz) (IEC-A network)
Dynamic range	92 dB (1 kHz)
MP3 decoding	MPEG 1 Audio Layer 3
Number of channels	2 (stereo)

HDD

HDD quantity	10 GB
Codec	ATRAC3
Frequency characteristics	20 – 20,000 Hz (±1 dB)
Average seek time	13 msec.

“Memory Stick” player

Type	MagicGate Memory Stick
Codec	ATRAC3
Frequency characteristics	20 – 20,000 Hz (±1 dB)

FM tuner

Frequency range	87.5 – 108 MHz
Usable sensitivity	(0.8 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	15 dB
	(1.5 μV/75 Ω, mono)
Signal-to-noise ratio	70 dB (IEC-A network)
Distortion	0.3% (at 65 dB, 1 kHz, stereo)
Frequency response	30 – 15,000 Hz (±3 dB)
Stereo separation	40 dB (at 65 dB, 1 kHz)

AM tuner

Frequency range	531 – 1,602 kHz (9 kHz)
	530 – 1,640 kHz (10 kHz)
Usable sensitivity	18 μV (S/N: 20 dB)
Selectivity	50 dB (±9 kHz)
	50 dB (±10 kHz)

Infrared remote control

Wavelength	940 nm ±50 nm
Output	typ: 12 mw/sr per Infrared LED

Note:

- Specifications and design are subject to modification without notice for the sake of improvements.